


Thermador

SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

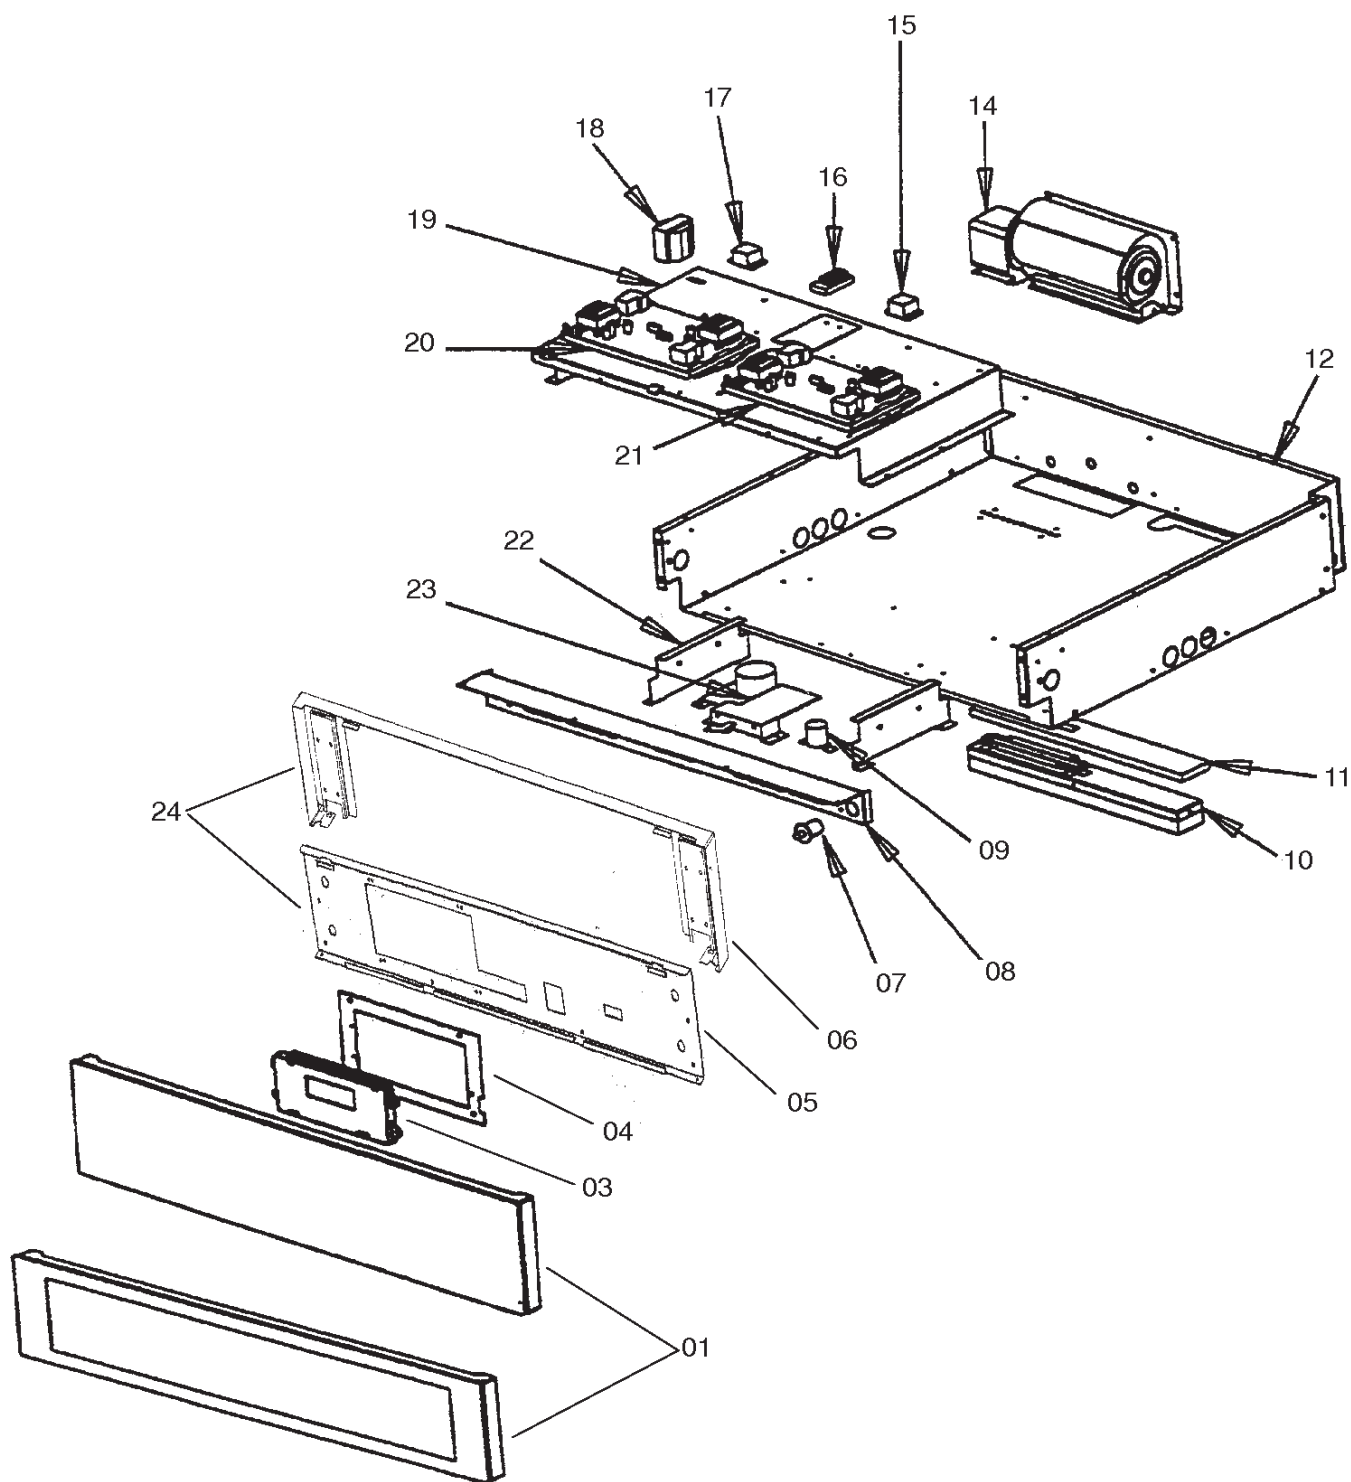

Page/Item	Part No.	Image	Part Discription
01 01	36 8758	MODULE-CONTROL	TOUCH CONTRL GLS W/FLTR S
	V01,		
01 01	36 8759	MODULE-CONTROL	TOUCH CONTRL GLS W/FLTR S
	V02,		
01 01	36 8775	MODULE-CONTROL	TOUCH CONTRL GLS W/FLTR S
	V03,V04,V05,		
01 03	41 5619	PANEL	CONTROL HEAD DBL OVN
01 04	48 5994	PLATE	PLATE, DISPLAY MOUNT
01 07	41 5422	SWITCH	SWITCH, SHUTTER INTERLOCK
01 08	41 6801	PLATE	PLATE, UPPER LATCH 30 BLK
01 09	41 4633	FUSE-THERMAL	HTC M2
01 10	36 8437	DUCT	CHANNEL, VENT TOP ASSY
01 11	48 6004	INSULATING PART	INSULATION, VENT
01 12	14 2829	FRAME	BODY, CONTROL PLENUM 30"
01 13	41 3587	BRACKET	BRACKET, BLOWER MTG UPPER
01 14	48 7020	MOTOR-FAN	BLOWER, CROSSFLOW
01 15	41 5761	RELAY	RELAY, STALL FAN
01 16	48 4615	TERMINAL	BLOCK, TERMINAL
01 17	41 3126	FUSE	BLOCK, FUSE
01 18	48 8796	TRANSFORMER	Transformer, Light (60 VA
01 19	36 8275	PANEL	PARTITION, UPPER PLENUM
01 20	48 6792	MODULE-POWER	KIT, S-OVEN RELAY BOARD
01 21	36 9126	PC BOARD ASSEMBLY-MAINS P	2ND POWER/RELAY PCB CONVE
01 22	41 3118	PLATE	SHIELD, LATCH
01 23	48 9102	LOCK-MECHANICAL	latch assy, motorized
01 24	43 4191	FIXING KIT	KIT,CONTROL FRAME ASSY 30
	V01,		
01 24	43 4189	FIXING KIT	KIT,CONTROL FRAME ASSY BL
	V02,V03,V04,V05,		

* Not illustrated


Thermador

SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

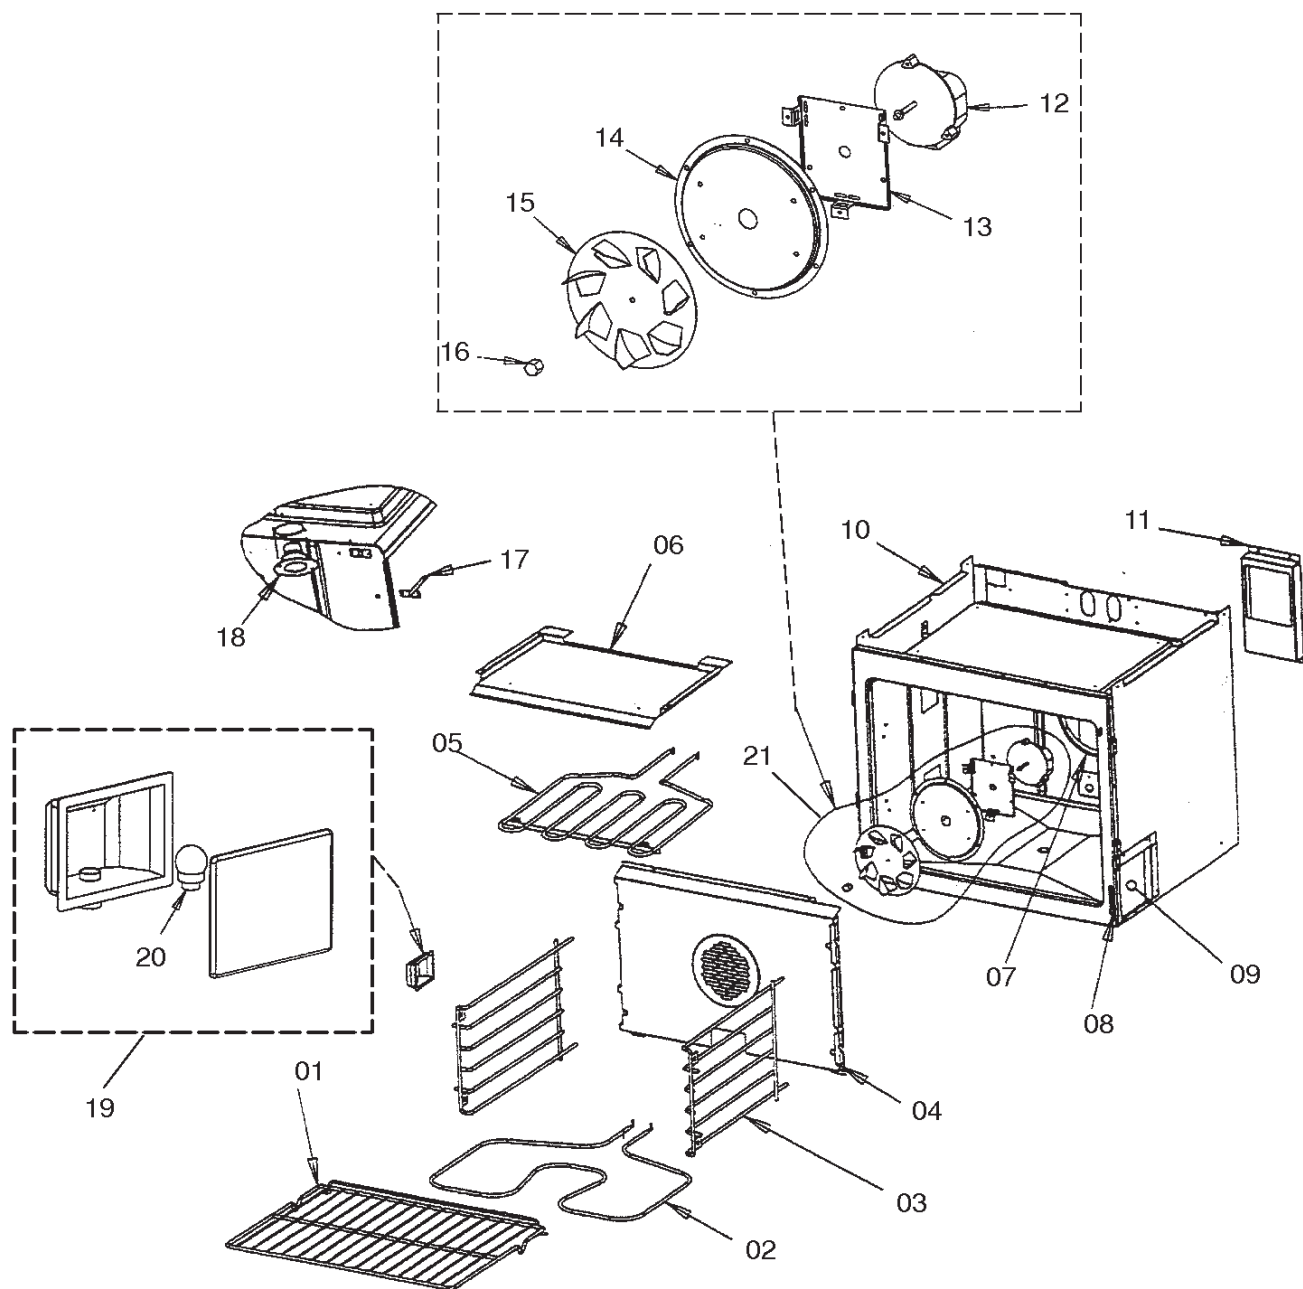

Page/Item	Part No.	Image	Part Discription
03 01	36 8825	SHELF	RACK, 30"SC (CONVECTION)
03 02	36 7648	HEATER-ELEMENT	ELEMENT, BAKE 30
03 03	48 5998	SUPPORT	SUPPORT, RACK CONVECTION
03 04	36 8280	AIR CHANNEL	BAFFLE, CONVECTION S30
03 05	36 7647	HEATER-ELEMENT	ELEMENT, BROIL
03 06	36 8265	REFLECTOR	REFLECTOR
03 07	48 4787	HEATER-ELEMENT	ELEMENT, CONVECTION
03 08	41 4510	HOLDER	SUPPORT, HINGE COUNTER
03 09	48 5973	BRACKET	BRACKET, COUNTER SUPT LH
03 10	23 8832	OVEN	MODULE, OVEN CAN 30"CONVE
03 11	48 5982	COVER	COVER, CONVECTION MTR BRK
03 12	48 7018	MOTOR	MOTOR, CONVECTION
03 13	48 5981	LID	BRACKET, CONVECTION MOTOR
03 14	41 2840	PLATE	PLATE, COVER REAR SHIELD
03 15	48 7019	FAN BLADE	FAN BLADE, CONVECTION
03 16	41 3119	NUT	NUT, CONVECTION MOTOR
03 17	41 4152	INSTALLATION SET	THERMAL SENSOR KIT
03 18	41 1220	catalyzer	CATALYST
03 19	41 4512	LAMP HOUSING	LAMP, OVEN
03 20	41 5813	LAMP-HALOGEN	BULB, HALOGEN 10WATT

* Not illustrated


Thermador

SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

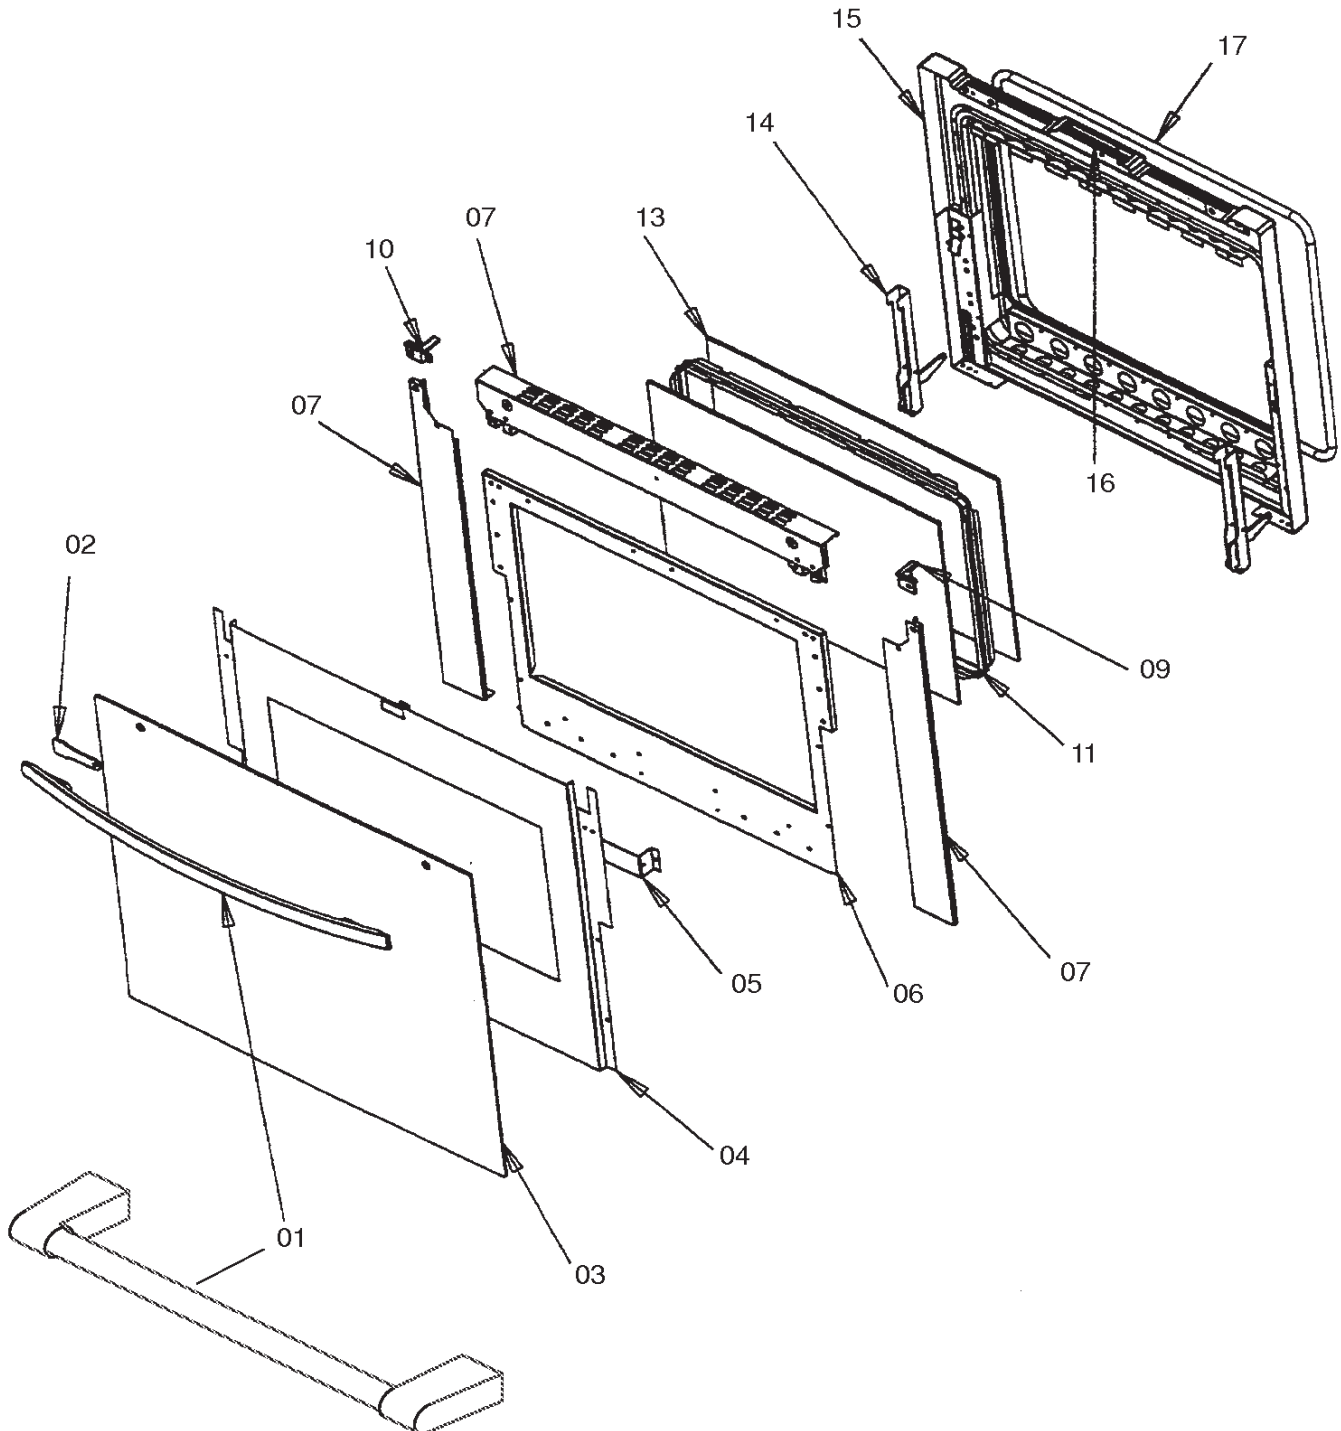

Page/Item	Part No.	Image	Part Discription
05 01	41 4393	HANDLE	HANDLE, DOOR 30" WHT
05 01	V01, 48 6868	HANDLE	HANDLE, DOOR 30" BLK
05 01	V02,V03, 43 2842	HANDLE-DOOR	HANDLE, DOOR S30"S/S
05 01	V04, 48 6001	HANDLE	ASSY, PRO HANDLE/ENDCAPS
05 02	V05, 41 4817	SPACER	SPACER, DOOR HANDLE
05 02	V01, 41 8933	SPACER	SPACER,HANDLE
05 03	V02,V03,V04, 14 2736	GLASS PANEL	ASSY, DOOR GLASS 30"WHT
05 03	V01, 14 2735	GLASS PANEL	ASSY, DOOR GLASS 30"BLK
05 03	V02, 14 2756	GLASS PANEL	ASSY, DR GLASS & SS PNL 3
05 03	V03,V04, 23 9016	DOOR-OUTER	KIT, DOOR PANEL 30" SS (P
05 04	V05, 48 5999	AIR CHANNEL	BAFFLE, DOOR AIR 30"
05 05	41 3120	BRACKET	BRACKET, BTM GLASS SUPT
05 06	36 8286	INSULATING PART	COVER, DR INSULATION 30"B
05 07	49 0522	FIXING KIT	Kit,Door Glass Support BL
05 08	43 4159	BRACKET	SUPPORT GLASS SIDE FEFT B
05 09	48 8854	STRIP	Endcap DR Glass support R
05 09	V01, 41 4390	COVER	ENDCAP, DR GLASS SUPT RH
05 10	V02,V03,V04,V05, 41 4391	COVER	ENDCAP, DR GLASS SUPT LH
05 11	36 9152	SPACER	SPACER, INNER WINDOW
05 12	36 9983	SUPPORT	SUPPORT, DOOR GLASS 30"
05 13	V01, 21 9357	GLASS PANEL	GLASS,INNER WINDOW 4MM 2S
05 14	41 4511	HINGE	HINGE, DOOR 30" (S/S)
05 15	47 0538	DOOR-INNER	DOOR, LINER W/STRIKE ASSY
05 16	41 2838	LOCK	STRIKE, DOOR (BLK OXIDE)
05 17	48 6767	SEAL-DOOR	GASKET, 30" OVEN DOOR KIT
05 18	23 8713	DOOR	DOOR ASSY, S/SC/SCD 30"WH
* 05 18	V01, 23 8714	DOOR	DOOR ASSY, S/SC/SCD 30" S
* 05 18	V03,V04, 14 2744	DOOR	DOOR ASSY, S/SC/SCD 30"PR
* 05 18	V05, 14 2743	DOOR	DOOR ASSY, S/SC/SCD 30"BL
05 19	V02, 41 6811	WASHER	WASHER, SHOULDER
	V05,		

* Not illustrated


Thermador

SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

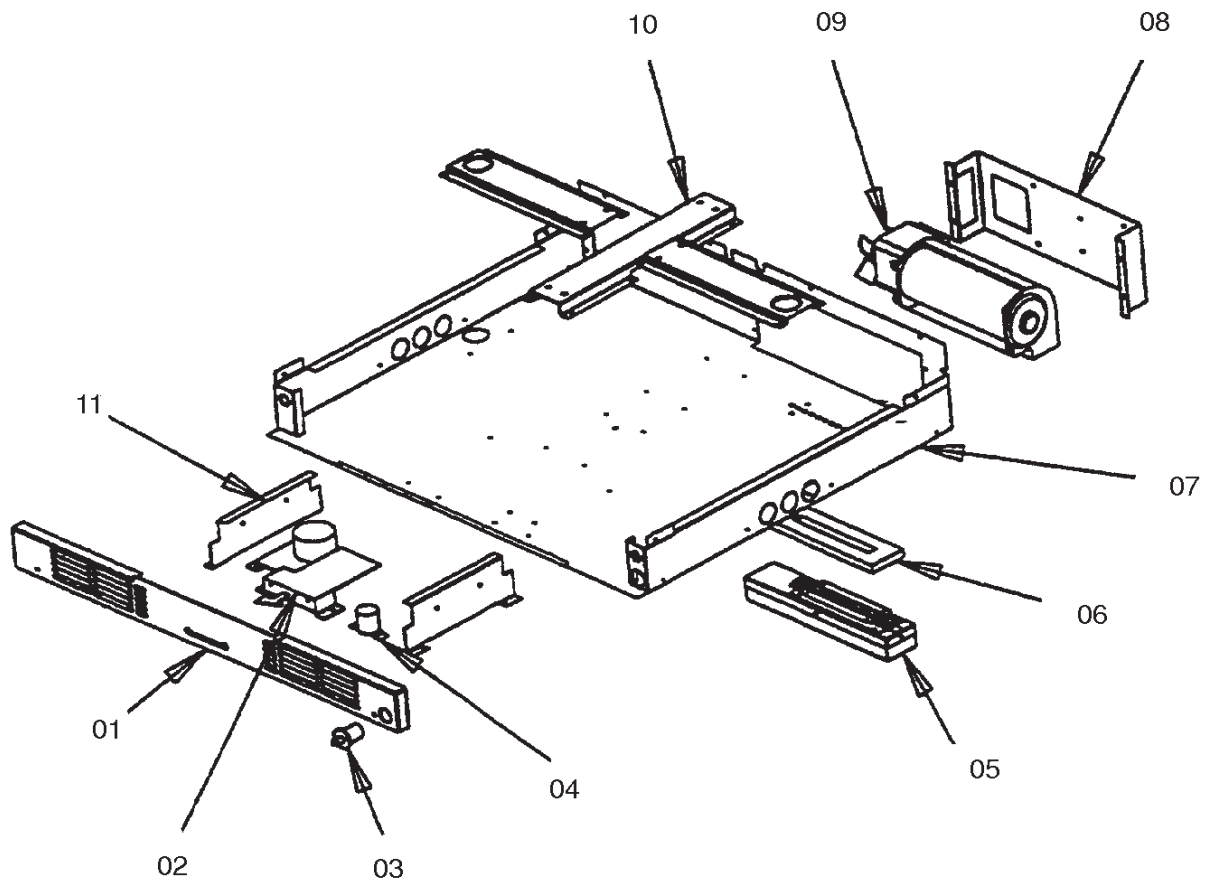

Page/Item	Part No.	Image	Part Discription
07 01	48 6328	PLATE	PLATE, MID LATCH 30"BLK
07 02	48 9102	LOCK-MECHANICAL	latch assy, motorized
07 03	41 5422	SWITCH	SWITCH, SHUTTER INTERLOCK
07 04	41 4633	FUSE-THERMAL	HTC M2
07 05	41 3567	DUCT	CHANNEL, MID VENT ASSY
07 06	48 6004	INSULATING PART	INSULATION, VENT
07 07	36 8270	FRAME	BODY, MID-PLENUM 30
07 08	48 5978	BRACKET	BRACKET, BLWR MTG LOWER
07 09	43 1492	INSTALLATION SET	KIT, BLOWER CROSSFLOW
07 10	36 8285	COVER	COVER, LATCH WIRE MID
07 11	41 3118	PLATE	SHIELD, LATCH
07 12	41 1059	SUPPORT	BUMPER, DOOR
07 13	41 1007	STUD	BALL STUD
07 14	41 7550	SPRING	Spring, catch

* Not illustrated


Thermador

SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

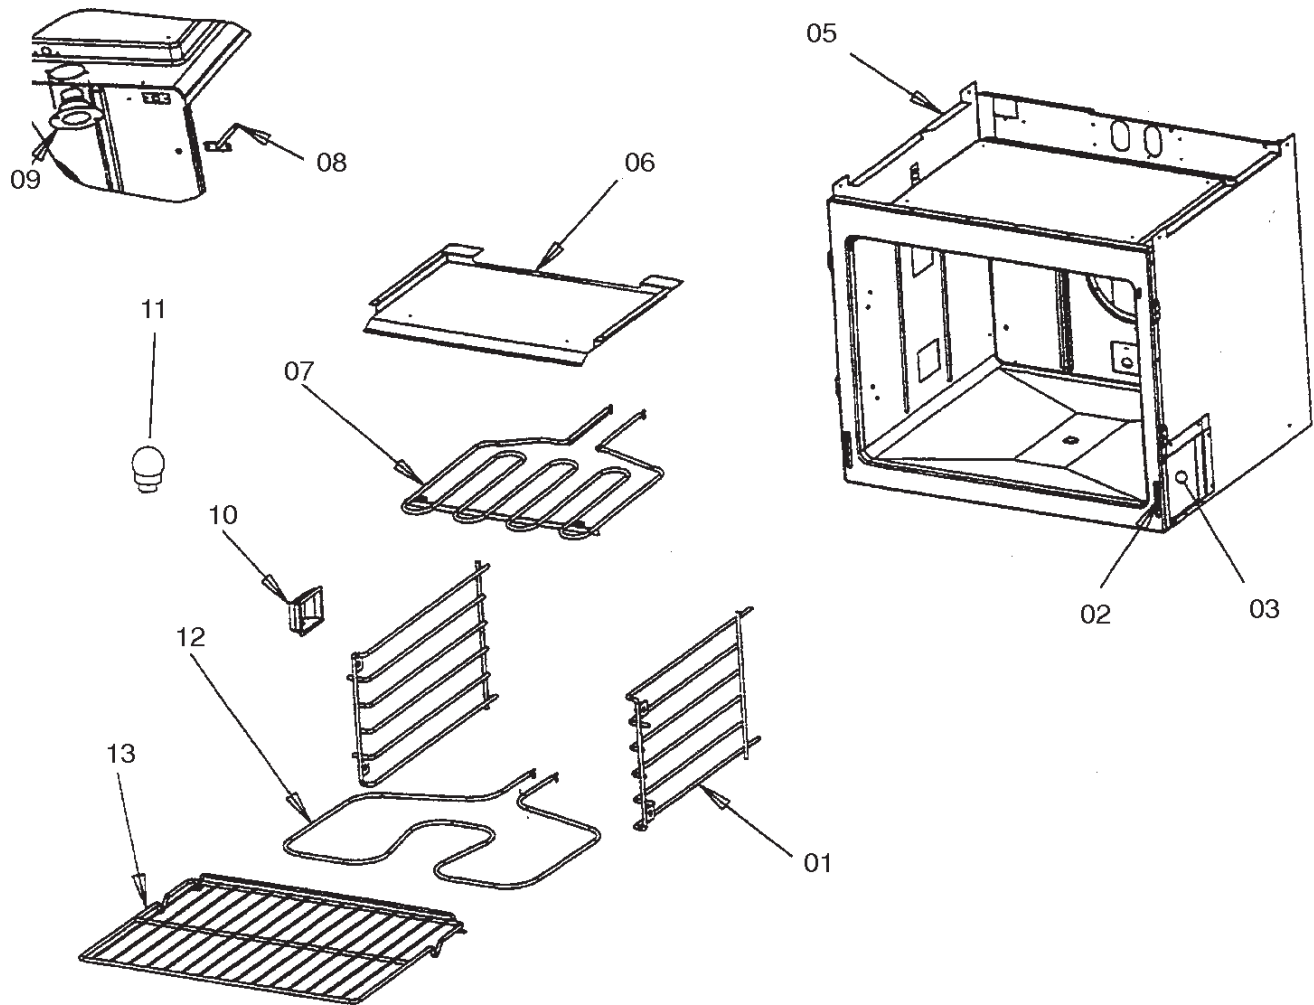



SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

Page/Item	Part No.	Image	Part Discription
09 01	36 7553	SUPPORT	SUPPORT, RACK (NON-CONV)
09 02	41 4510	HOLDER	SUPPORT, HINGE COUNTER
09 03	48 5972	BRACKET	BRACKET, COUNTER SUPT RH
09 04	48 5973	BRACKET	BRACKET, COUNTER SUPT LH
09 05	23 8830	OVEN	MODULE, OVEN CAN 30"NON-C
09 06	36 8265	REFLECTOR	REFLECTOR
09 07	36 7647	HEATER-ELEMENT	ELEMENT, BROIL
09 08	41 4152	INSTALLATION SET	THERMAL SENSOR KIT
09 09	41 1220	catalyzer	CATALYST
09 10	41 4512	LAMP HOUSING	LAMP, OVEN
09 11	41 5813	LAMP-HALOGEN	BULB, HALOGEN 10WATT
09 12	36 7648	HEATER-ELEMENT	ELEMENT, BAKE 30
09 13	36 8826	SHELF	RACK, 30"S (NON-CONVECT)

* Not illustrated


Thermador

SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless


SC302ZP (01) – V05, stainless

COOKING
OVENS

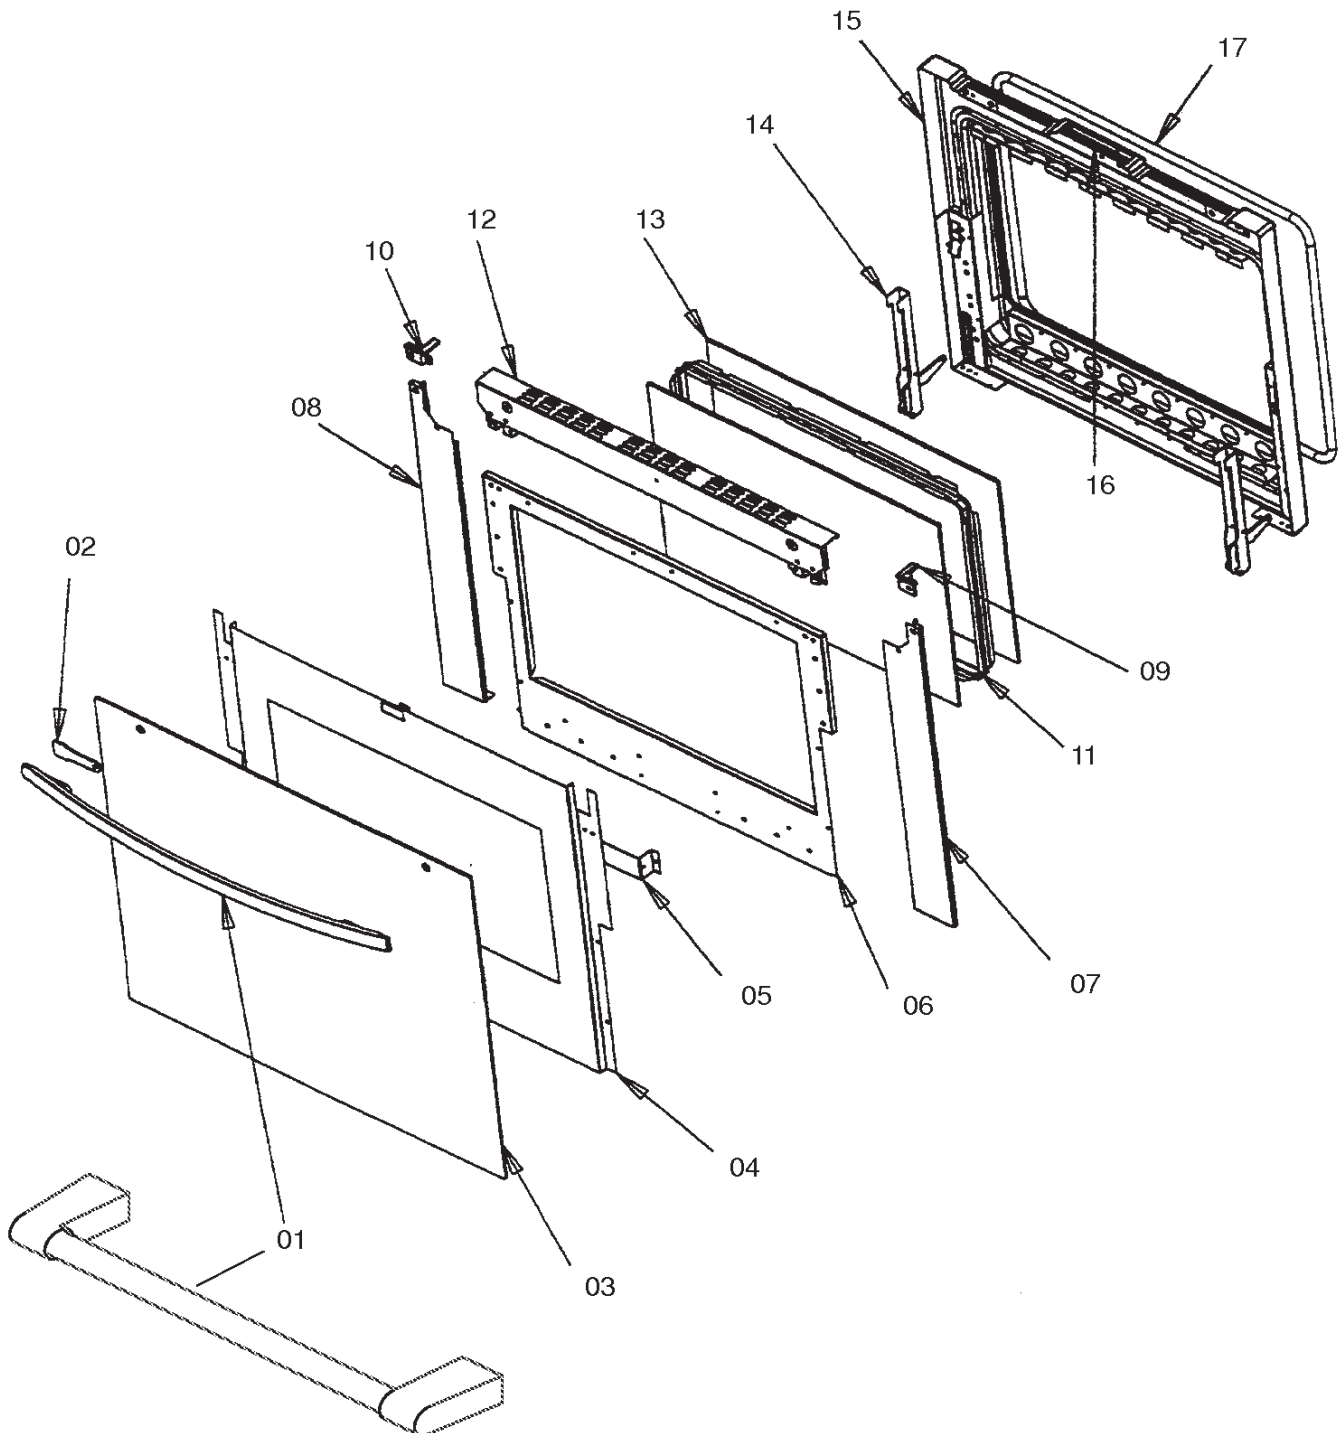

Page/Item	Part No.	Image	Part Discription
11 01	41 4393	HANDLE	HANDLE, DOOR 30" WHT
11 01	V01, 48 6868	HANDLE	HANDLE, DOOR 30" BLK
11 01	V02,V03, 43 2842	HANDLE-DOOR	HANDLE, DOOR S30"S/S
11 01	V04, 48 6001	HANDLE	ASSY, PRO HANDLE/ENDCAPS
11 02	V05, 41 4817	SPACER	SPACER, DOOR HANDLE
11 02	V01, 41 8933	SPACER	SPACER,HANDLE
11 03	V02,V03,V04, 14 2736	GLASS PANEL	ASSY, DOOR GLASS 30"WHT
11 03	V01, 14 2735	GLASS PANEL	ASSY, DOOR GLASS 30"BLK
11 03	V02, 14 2756	GLASS PANEL	ASSY, DR GLASS & SS PNL 3
11 03	V03,V04, 23 9016	DOOR-OUTER	KIT, DOOR PANEL 30" SS (P
11 04	V05, 48 5999	AIR CHANNEL	BAFFLE, DOOR AIR 30"
11 05	41 3120	BRACKET	BRACKET, BTM GLASS SUPT
11 06	36 8286	INSULATING PART	COVER, DR INSULATION 30"B
11 07	49 0522	FIXING KIT	Kit,Door Glass Support BL
11 09	41 4390	COVER	ENDCAP, DR GLASS SUPT RH
11 10	41 4391	COVER	ENDCAP, DR GLASS SUPT LH
11 11	36 9152	SPACER	SPACER, INNER WINDOW
11 13	21 9357	GLASS PANEL	GLASS,INNER WINDOW 4MM 2S
11 14	41 4511	HINGE	HINGE, DOOR 30" (S/S)
11 15	47 0538	DOOR-INNER	DOOR, LINER W/STRIKE ASSY
11 16	41 2838	LOCK	STRIKE, DOOR (BLK OXIDE)
11 17	48 6767	SEAL-DOOR	GASKET, 30" OVEN DOOR KIT
11 18	23 8713	DOOR	DOOR ASSY, S/SC/SCD 30"WH
* 11 18	V01, 23 8714	DOOR	DOOR ASSY, S/SC/SCD 30" S
* 11 18	V03,V04, 14 2744	DOOR	DOOR ASSY, S/SC/SCD 30"PR
* 11 18	V05, 14 2743	DOOR	DOOR ASSY, S/SC/SCD 30"BL
11 19	V02, 41 6811	WASHER	WASHER, SHOULDER

* Not illustrated

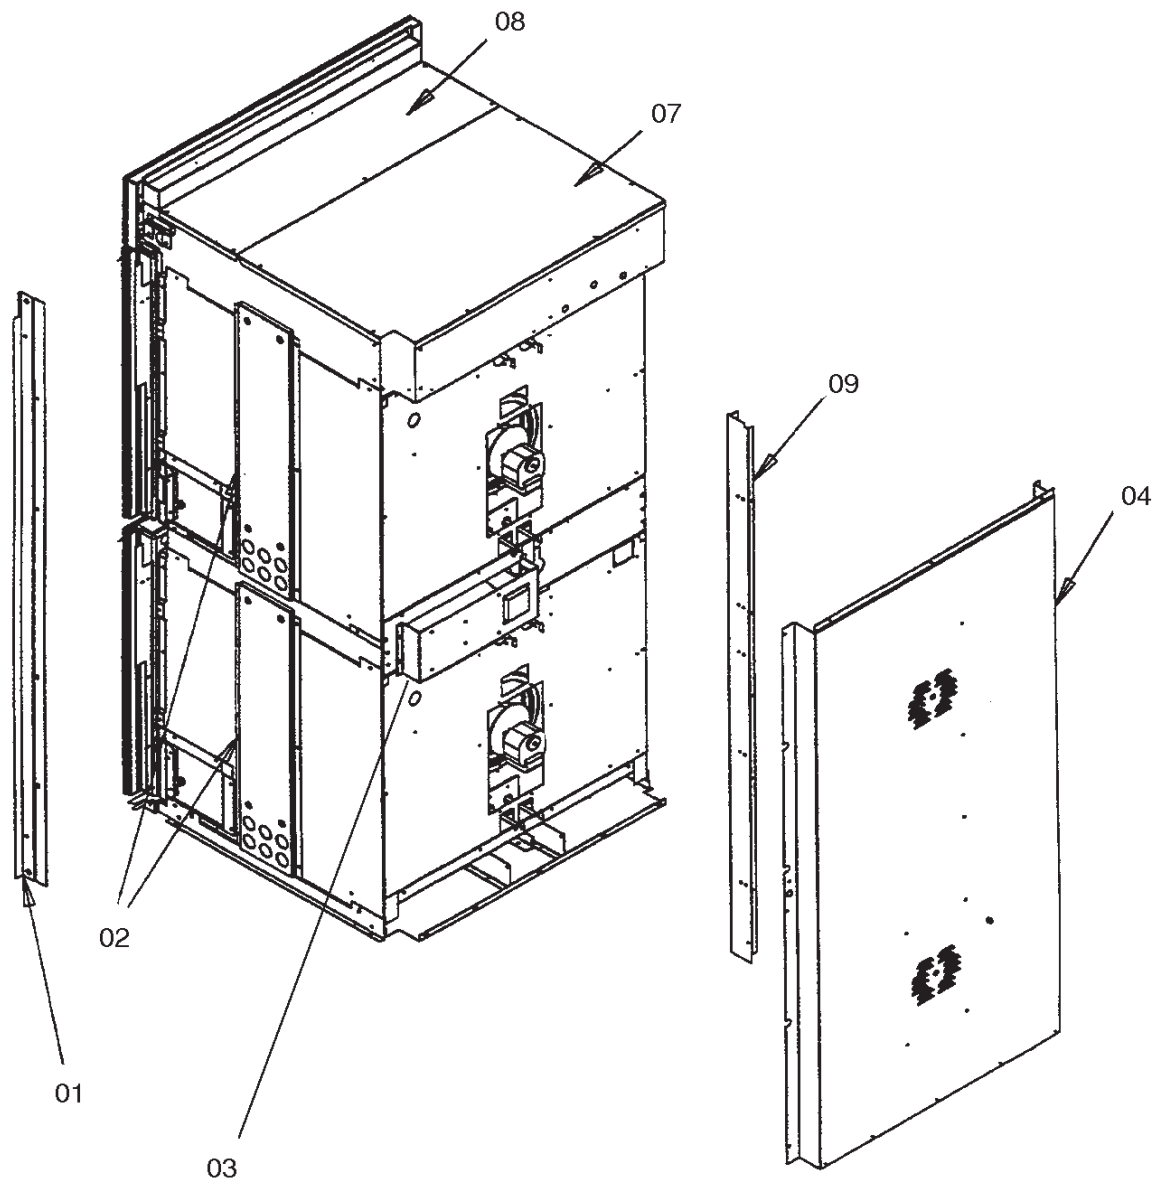



SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

Page/Item	Part No.	Image	Part Discription
13 01	48 8397	PANEL–SIDE	TRIM, SIDE DBL S–OVEN BLA
	V02,V03,V04,V05,		
13 04	36 8485	COVER	COVER, BACK DBL 30"
13 07	48 5974	COVER	COVER, TOP LWR 30"
13 08	36 8460	COVER	COVER, TOP FRONT X30
13 09	36 9118	FRAME	TRIM, SIDE DBL LH WHT
	V01,		
13 09	48 8397	PANEL–SIDE	TRIM, SIDE DBL S–OVEN BLA
	V02,V03,V04,V05,		

* Not illustrated


Thermador

SC302TW (01) – V01,
SC302TB (01) – V02,
SC302TS (01) – V03,
SC302ZS (01) – V04,

white
black
stainless
stainless

SC302ZP (01) – V05, stainless

COOKING
OVENS

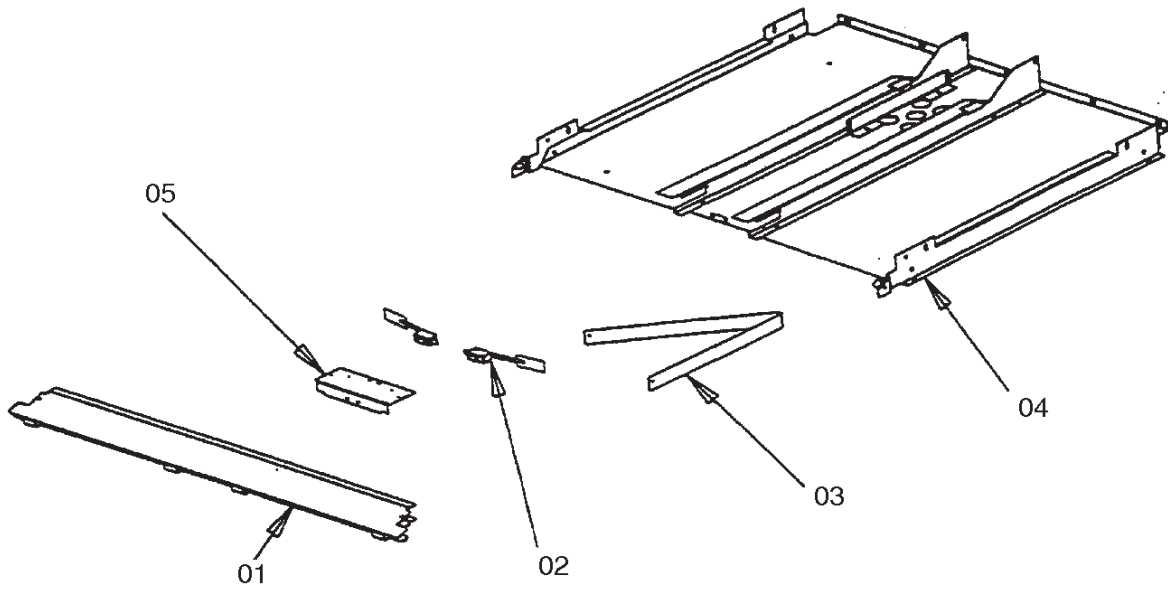

Page/Item	Part No.	Image	Part Discription
15 01	36 9981	PANEL-BASE	TRIM, BOTTOM 30" WHT
15 01	48 6326	FRAME	TRIM, BOTTOM 30" BLK
15 02	41 3121	SWITCH	SWITCH, AIR-INTERLOCK (W/
15 03	48 6258	DISTRIBUTOR	DIVERTER, AIR FLOW
15 04	21 9355	BASE	BASE ASSY 30"
15 05	41 3122	BRACKET	BRACKET, AIR SWITCH
* 17 01	18 9944	CABLE HARNESS	HARNESS, KEYPAD POWER
* 17 02	18 9945	CABLE HARNESS	HARNESS, KEYPAD SIGNAL
* 17 03	18 9946	CABLE HARNESS	HARNESS, DISPLAY SIGNAL
* 17 04	18 9947	CABLE HARNESS	HARNESS, COMMUNICATION SI
* 17 05	18 9948	CABLE HARNESS	HARNESS, LATCH SGL/UPPER
* 17 06	18 9949	CABLE HARNESS	HARNESS, DLB SGL/UPR OVEN
* 17 07	18 9950	CABLE HARNESS	HARNESS, DLB LOWER OVEN
* 17 08	48 4534	CABLE HARNESS	HARNESS, MAIN SGL/UPPER O
* 17 09	48 4537	CABLE HARNESS	HARNESS, LIGHT DBL OVEN
* 17 10	18 9951	CABLE HARNESS	HARNESS, MAIN AIR SW DBL
* 17 11	48 4536	CABLE HARNESS	HARNESS, MAIN LOWER OVEN
* 17 12	48 4537	CABLE HARNESS	HARNESS, LIGHT DBL OVEN
* 17 13	18 9953	CABLE HARNESS	HARNESS, INTERCONNECT TOU
* 17 14	18 9955	CABLE HARNESS	HARNESS, LATCH LOWER DOOR
* 17 15	48 4539	CABLE HARNESS	HARNESS, HTC & LIGHTS LWR
* 30 01	D30SXSB	#NAME?	
* 30 02	D30SXSW		#NAME?
* 40 01	SH-30/0005E		DIAGRAM
* 40 02	SH-30/0006E		DIAGRAM
* 50 01	RH30001E	Repair manual	

* Not illustrated