


Removal of the control panel provides access to the control board assembly. The control panel is held in place with 2 screws on the top and 4 bottom tabs.

To remove the control panel:

1. Remove the top panel. (See *Top Panel*.)
2. Disconnect the control board ribbon from the power board at connection CN110 .
3. Remove the 2 Phillips-head screws that attach the top of the control panel to the cabinet.

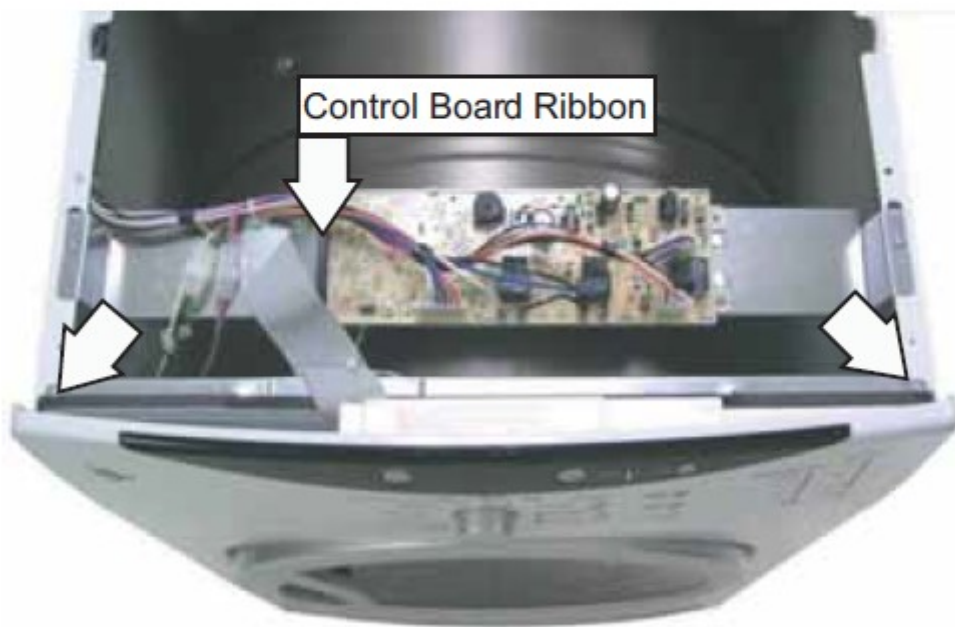

4. Raise the control panel vertically.