


1. Unplug range or disconnect power.
2. Turn off gas supply to range.
3. Remove the two grates from the top of the range.
4. Pull the range forward so you can access the two end cap screws.
5. **To remove the electronic oven control (EOC) assembly on slide-in models:**
 - a) Pull the knobs off the gas valves.
 - b) Remove the two screws from the sides of the end caps.

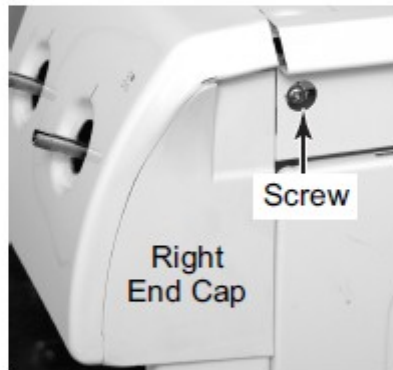

- c) Open the oven door and remove the indicated screws from the bottom of the control panel.



- d) Pull out on the bottom of the control panel, unclip the top edge from the bracket, and rotate the control panel forward so you can access the components.

