



**419828 door latch with
microswitch**

Disassembly/ Installation

Other than occasional misalignment, the only door latch repairs will be replacing microswitches on fully integrated models (e.g. SHV, SHX, SHY, DW44, SHU 88/99, SL84/A95A, etc.). SL34A models also use these door latches.

To disassemble door latches for integrated models:

1. Remove T-20 Torx fascia panel screws from inner door.
2. Lower fascia panel from door.
3. Locate door latch in console.
4. Bend out console metal tabs to allow latch removal.




Remove panel screws

NOTE: Door latches for UC/14 & up models are different than UC/06 - UC/12 models -- they cannot be interchanged. Must replace strike plate & door latch together.




Lower fascia panel

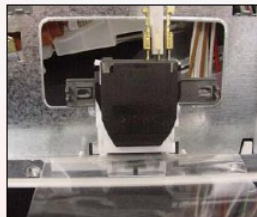

Door latch in console



Tabs (inner view)

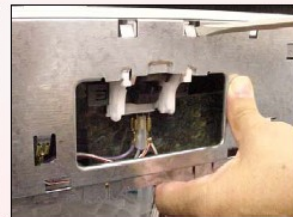

Bend out metal tabs

To remove & install door latches for integrated models (continued):

1. Remove door latch from console.
2. Disconnect wire harness, then remove microswitch & cover.
3. Disconnect wires, then remove microswitch from cover.
4. Replace microswitch, then reassemble.

HINT: Make sure plastic latch tabs are aligned & metal console tabs are bent back completely during reassembly.



Remove door latch



Remove microswitch



Microswitch



Replace cover (in slots)



Insert latch into tabs



Bend tabs back



Replace fascia panel



Replace screws