


Valve Replacement



Hold the lever on the bracket

Pivot the 2 outside brackets to the left

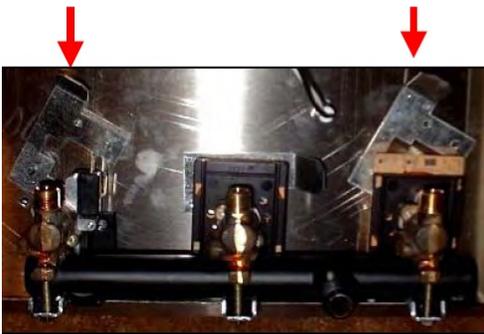

Remove Manifold with valves from unit

