

To remove the outer door, open the door and remove the six T-20 Torx screws located three on each side of the inner stainless door.

Return the door back to its upright position, and bring the bottom of the door panel out toward you, then slide the top of the panel down and out from under the fascia panel.

As the outer door is being removed, the left or right door guards may shift or fall out of place. To reposition them, slide them back in over the hinge, lining up the door guard square tab with the hinge lever square notch. Please note: door guards must be in place before reinstalling the door panel.

After removing the outer door, remove the six T-20 Torx screws securing the fascia assembly to the inner door. With the screws removed, bring the fascia assembly down cradling it so as not to scratch the fascia console.

With the fascia assembly removed from the unit, it can be further separated into two assemblies. To separate, release the four locking tabs and bring the fascia frame up from the fascia console.

Press in on the three locking tabs and bring the control module out from the console frame. Now remove the wiring connectors by pressing in on the locking tabs of each connector, then sliding the connector up and off from the control module. I would recommend to draw a picture of the wiring connectors sequence first.

Assemble in the reverse order.