

1. Using a Phillips screwdriver, remove the screw from each side of the console.

Note: Depend on the model of the washer screws could be: 1) in the front of the console; 2) in the back of the console or 3) behind the end caps. **On some latest models there are no screws. Instead there is a console clip on each side of the console which should be carefully released by inserting a putty knife under the console from the front on each side.**

2. Pull the console forward and up to remove the tabs on the bottom of the end caps, out of the holes in the top.
3. Lift the console up and lay it on its back.
4. Unplug the harness connector for the lid switch.
5. Insert a flat screwdriver into the front edge of the clip (located on both sides), and pry back. Remove both clips from the holes in the cabinet and slide down the other end of the clips and out the slot in the rear panel.
6. Open and hold the lid while grabbing the cabinet front opening. Be sure when tilting the cabinet that the back edge clears the vacuum break.
7. Tilt the top of the cabinet toward you by pulling on the lid and opening of the cabinet. This releases the back slots of the cabinet from the tabs in the back of the base
8. Carefully pull the cabinet away from the base of the washer and set it aside. Now you have access to most of the parts.