




1. Disconnect the unit from the electrical supply.
2. **To remove the ice maker:**
  - a) Open the freezer door.
  - b) Close the spring-loaded emitter door and open the ice maker door.

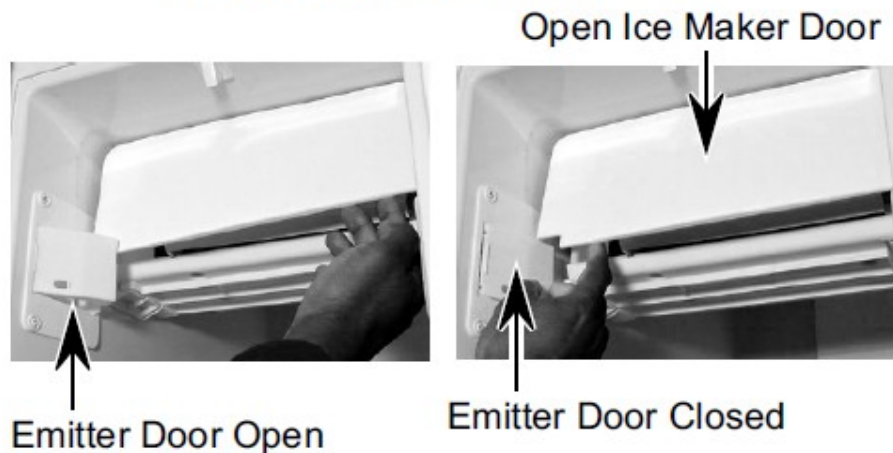


- c) Push the ice maker door to the left so that the right pin disengages from the pivot arm, then lift the pin out of the pivot, and remove the left pin.

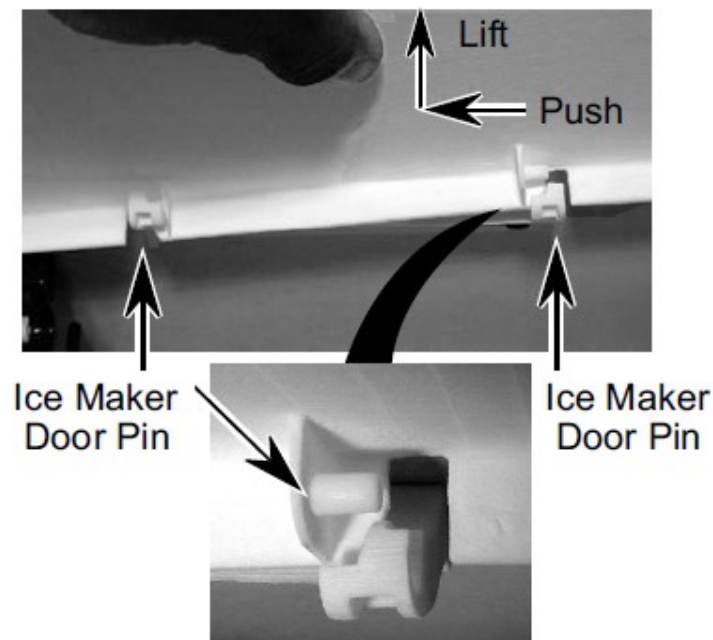


- d) Remove the wire shield screw from the bottom of the ice maker.

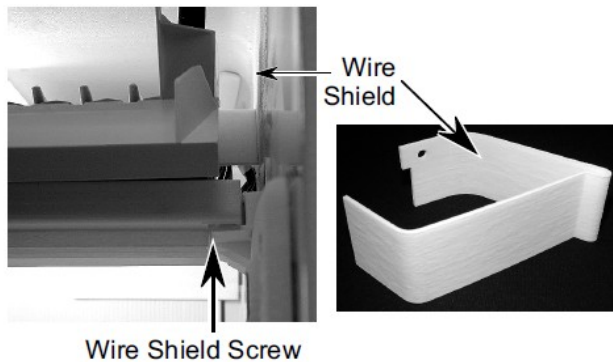

- e) From the rear of the ice maker, lift the top of the wire shield slightly and pull it back to release it from the ice maker.
- f) Press up on the two retaining clips (one on each side) at the bottom of the ice maker tracks with a fingernail of each hand, pull the ice maker forward, and remove it.

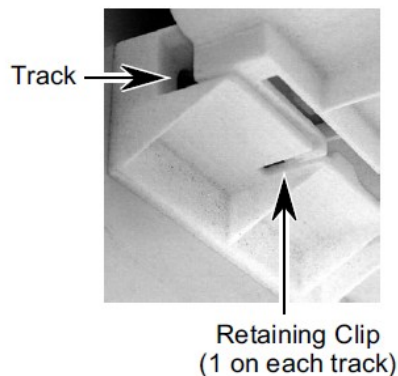

- g) **If you are completely removing the ice maker**, unplug the wiring harness connector from the ice maker.

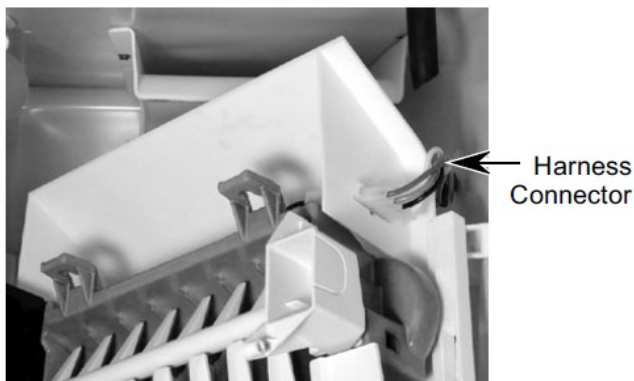

- h) **If you do not want to completely remove the ice maker** rotate the ice maker so the square end with the motor faces the front, and hang the flange of the ice maker on the track that is attached to the freezer mullion.

