


REMOVING THE OVEN DOOR

CAUTION: When you work on the microwave/oven combination, be careful when handling the sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

CAUTION: Do not lift the oven door by its handle.

To remove the oven door:

1. Install a pin in the hole of each oven door hinge hanger.

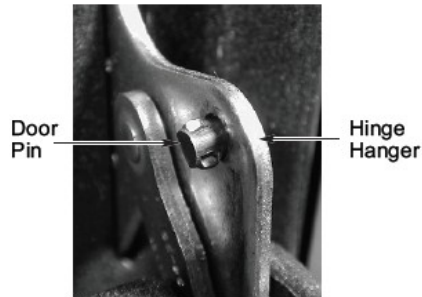

2. Close the oven door as far as the two pins will allow.
3. Grasp the sides of the door and lift the door until it stops, then pull the hinge hangers out of the slots.



To reinstall the oven door:

1. Grasp the sides of the door and tilt it back at a slight angle, then insert the hinge hangers into the hinge slots as far as they will go.
2. Rotate the top of the door towards the oven so the hinge hangers fit onto the support pins.
3. Close the oven door as far as the pins will allow, and make sure that the hinge hangers are fully seated on the support pins. If they are not seated properly, the door will not close tightly and may be off-center. To seat the hinge hangers, open the door slightly, and push in on the bottom until the hangers are fully seated.
4. Open the oven door to its fully open position and remove the two hinge hanger pins.
5. Close the oven door completely and check it for proper operation and alignment.