

# WFMC/WFXD Service Tips – Installing Door Seals

Certain repairs can involve removing or disconnecting the door seal (gasket) for access. To insure proper washer operation and prevent leaking, door seals must be reinstalled correctly.

**To install door seals:**

- 1) Align door seal so notch (for spring) at front is centered under bottom of door.
- 2) Carefully push rear of seal over front of tub so seal properly seats onto tub.
- 3) Stretch rear spring clamp over seal and insert into notch at rear of seal.
- 4) Using small hose clamp, attach dispenser hose to seal.
- 5) Work front seal lip over front shield flange (so lip "snaps" in). Tug around entire seal to check if seated.
- 6) Align clamp spring at door bottom, then insert front spring clamp into notch of entire left half of door seal (180° from top to bottom).
- 7) While pulling right side of spring using needlenosed pliers, pull clamp into right side seal notch, then carefully release spring. Hold clamp next to front shield so clamp won't pull seal off.

**NOTE:** Check to make sure seal is seated after installation so no leaking will occur.

**TIP:** Left-handed servicers – start the front spring clamp on the right side and pull the spring to the left.