

Removing The Control Panel End Caps & Glass


⚠ WARNING

Turn off the gas supply and the power circuit to the range at the main (house) junction box before servicing this unit.

⚠ CAUTION

When you work on the range, be careful when handling the sheet metal parts. There are sharp edges present and you can cut yourself if you are not careful.

1. Turn off the gas supply and the electrical power going to the range.
2. Open the oven door and remove the four screws (two on each side) from the bottom of the control panel end caps. Pull down on the end caps and slide them off the glass.
3. Remove the four knobs from the controls.
4. To remove the control panel glass, pull it out at the bottom and remove it from the range. If you are replacing the glass, remove the four grommets, and unsnap the eleven push-buttons, then install them on the new glass, or install the "New Bezel Kit" #96-93-536.
5. Reinstall the glass and control panel end caps.

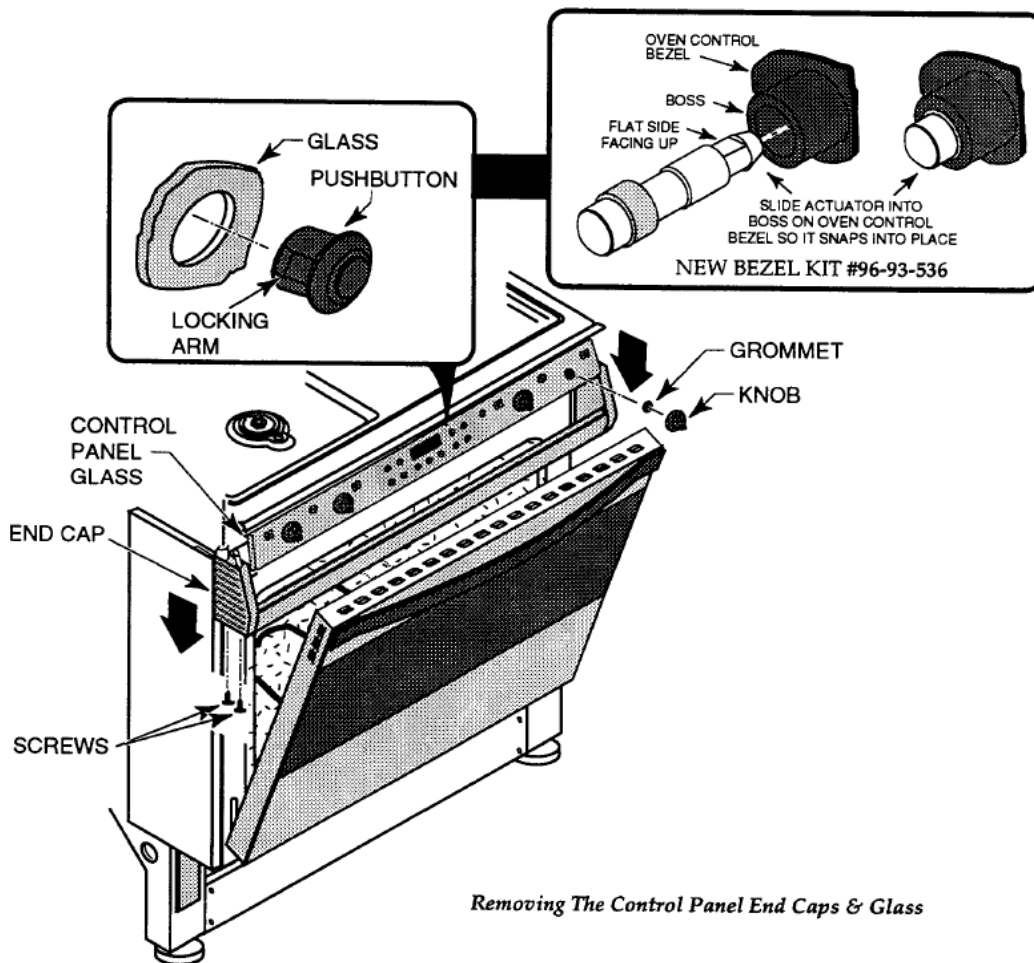

Removing The Control Panel End Caps & Glass

Removing The Burner/Element "On" Light, The Manual Oven Light Switch, & The Oven Control


WARNING

Turn off the gas supply and the power circuit to the range at the main (house) junction box before servicing this unit.

CAUTION

When you work on the range, be careful when handling the sheet metal parts. There are sharp edges present and you can cut yourself if you are not careful.

1. Turn off the gas supply and the electrical power going to the range.
2. Remove the control panel end caps and glass from the range (see page 2-3 for the procedure).
3. **To remove the burner/element "ON" light**, unsnap the locking arms from the front subpanel and remove it.
4. Disconnect the wires from the old burner/element "ON" light and connect them to the terminals of the new light, then insert the light into the subpanel opening, and snap it into place.
5. **To remove the manual oven light switch**, disconnect the two wires from the harness connectors.
6. Remove the round nut, and remove the oven light switch from the front subpanel.
7. Connect the wires on the new oven light switch to the harness connectors, and mount the switch to the front subpanel with the round nut.
8. **To remove the oven control**, remove the $\frac{3}{8}$ " screws from the shield and remove the shield.
9. Remove the $\frac{1}{4}$ " screws from the front subpanel.
10. Tilt the front subpanel forward so that you can easily access the oven control assembly screws, and remove the $\frac{1}{4}$ " machine screws from the oven control bracket.
11. Disconnect the wires and 10-hole connector at J1 from the board.
12. Mount the new oven control assembly to the front subpanel, and reconnect the wires and 10-hole connector.
13. Reassemble the range.

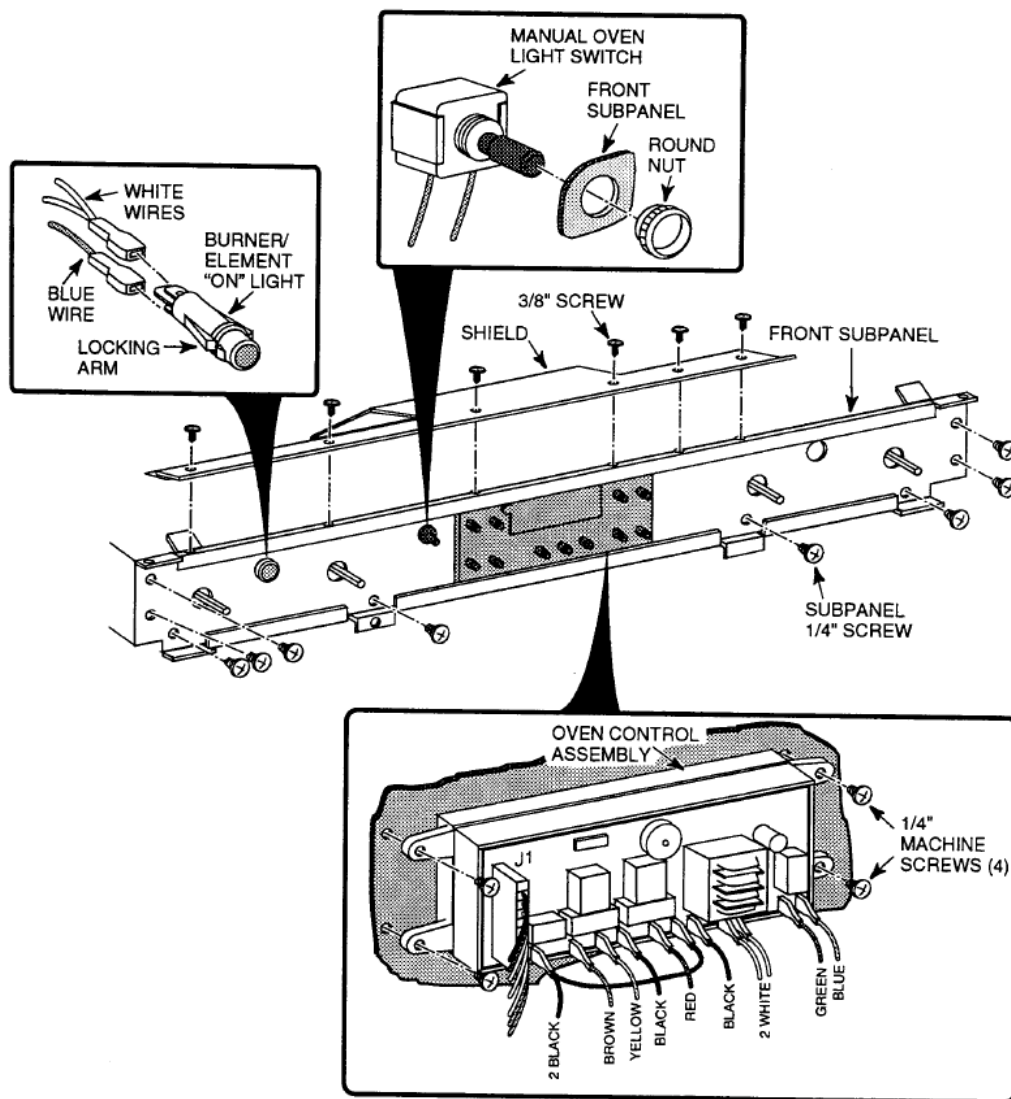

Removing The Burner/Element "On" Light, The Manual Oven Light Switch, & The Oven Control