



The pressure switch can be checked at various water levels. Disconnect the pressure switch connector from the control box.

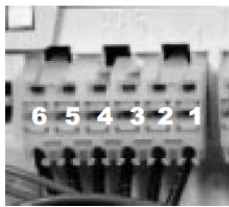

Water Level	Test Points	Reading
Empty	4 to 6	0 ohms
Suds Detect	1 to 2	0 ohms
L1	4 to 5	0 ohms
Overflow	3 to 4	0 ohms

Connector Location

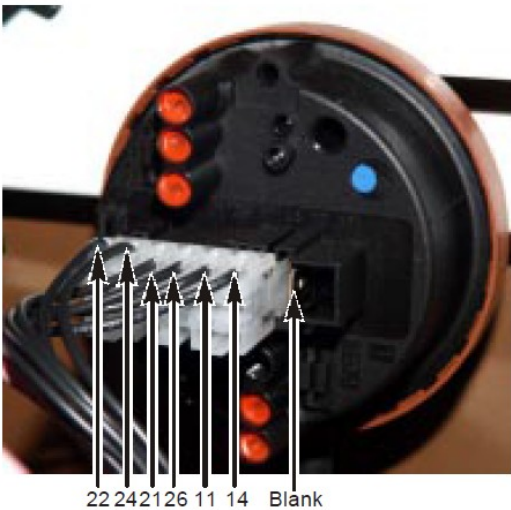

Water Level	Contacts Made
Empty	21 to 22
Suds Detect	11 to 14
Level 1	21 to 24
Overflow	21 to 26