


- b) Pull the plastic cap off the gas distribution valve conversion cap.

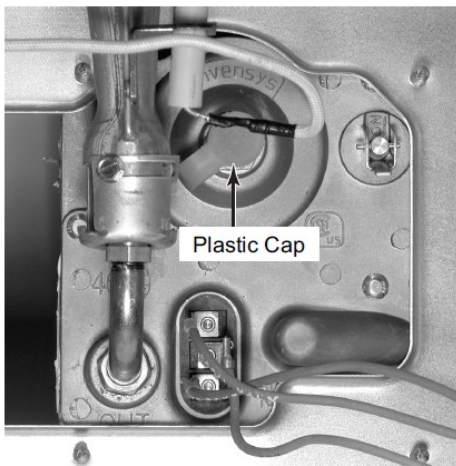


- c) Unscrew the conversion cap from the gas distribution valve and remove it and the plastic cap. Note the difference between the L.P. and Natural gas ends of the cap.



Conversion Cap Set For Use With (N) Natural Gas

L.P. Gas      Natural Gas

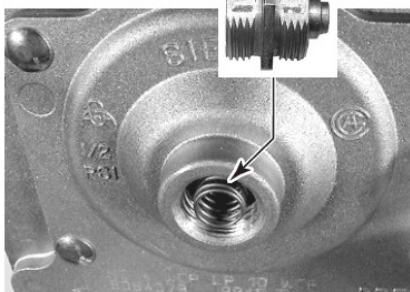

- d) Install the loop on the plastic cap over the natural gas side of the conversion cap.


- e) Install the plastic cap and the conversion cap on the gas distribution valve with the L.P. side facing up (you will see "LP" stamped inside the cap, as shown below).

- f) Reinstall the storage drawer.




Plastic Cap

Conversion Cap Set For Use With L.P. Gas

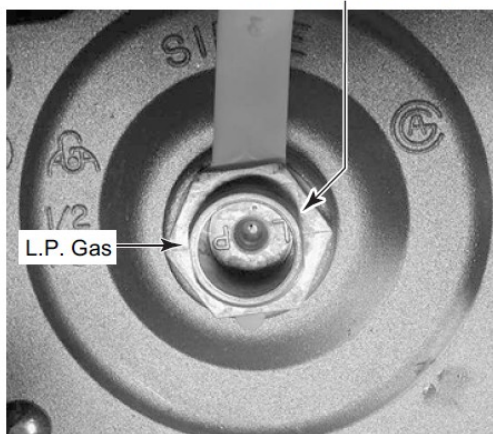

10. Turn the gas supply valve handle on.

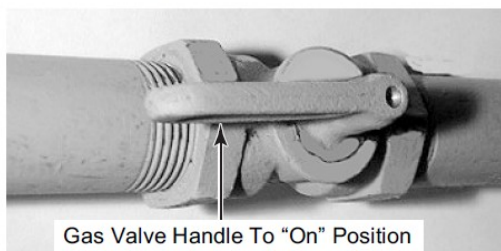

Gas Valve Handle To "On" Position