

REMOVING THE CERAN GLASS MAINTOP

! WARNING

Electrical Shock Hazard

Disconnect from electrical supply before servicing unit.

Failure to do so could result in death or electrical shock.

CAUTION: When you work on the range, be careful when handling the sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

1. Turn off the electrical power to the range.

2. Remove the control panel and rotate it back on top of the maintop so it is out of the way (see page 4-2 for the removal procedure). NOTE: You do not have to remove the electronic oven control from the panel.

Refer to Figure 4-6 for the following steps.

3. Remove the four chassis screws (two on each side) from the control panel chassis.
4. Lift the front of the chassis at the center and prop it up with a board. NOTE: You may have to unclip the two cooling fan motor wires to raise the chassis high enough to access the screws.
5. Remove the four mounting screws from the ceran glass brackets.
6. Lower the chassis and remove the ceran glass.

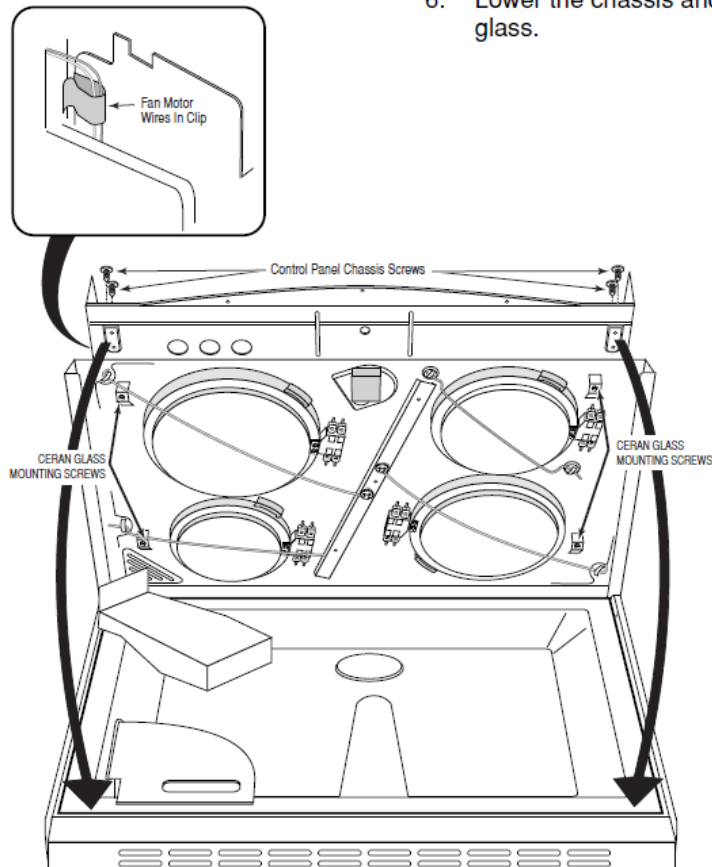


Figure 4-6

REMOVING A SURFACE ELEMENT & HOT SURFACE INDICATOR LIGHT ASSEMBLY

WARNING

Electrical Shock Hazard

Disconnect from electrical supply before servicing unit.

Failure to do so could result in death or electrical shock.

CAUTION: When you work on the range, be careful when handling the sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

1. Turn off the electrical power to the range.
2. Remove the control panel and rotate it back on top of the maintop so it is out of the way (see page 4-2 for the removal procedure). NOTE: You do not have to remove the electronic oven control from the panel. Refer to Figure 4-7 for the following steps.
3. Remove the four chassis screws (two on each side) from the control panel chassis.

4. Lift the front of the chassis at the center and prop it up with a board. NOTE: You may have to unclip the two cooling fan motor wires at the left front corner to raise the chassis high enough to access the screws.
5. **To remove the left front or right rear element:**
 - a) Remove the screw from the retaining rod.
 - b) Disconnect the wires from the terminals of the element and limiter.
6. **To remove the left rear or right front elements,**
 - a) Pull the ends of the rod out from the brackets.
 - b) Disconnect the wires from the terminals of the element and limiter.
7. **To remove the hot surface indicator light assembly:**
 - a) Pull down firmly on the indicator assembly body to unfasten the four clips from the edge of the chassis.
 - b) Disconnect the leads from the terminals of the limiters.

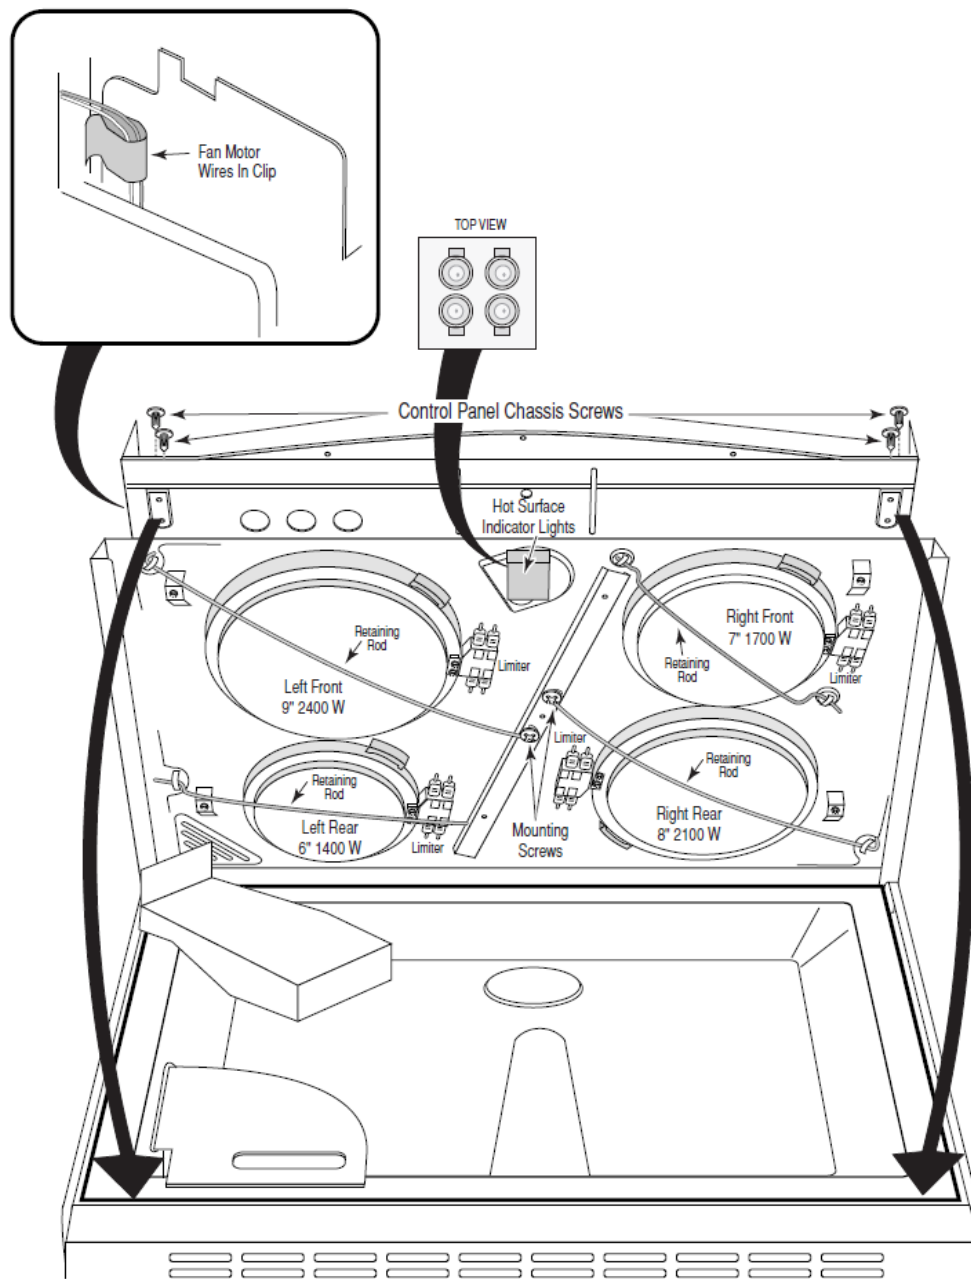


Figure 4-7