

Service Panel

Removal of the service panel provides access to the pump cleanout, pump, tub drain hose, heater assembly, inverter, wire junction box, front dampers, and the door lock release ring.

To remove the service panel:

1. Remove the 3 Phillips-head screws that hold the service panel to the cabinet.
2. Pull the service panel down.

