

NOTE: If the drive motor windings check open or shorted check the fuse on the speed control board. If the fuse is open, replace the motor and speed control board.



