

Remove power from unit.

Disconnect downdraft blower motor and remove flex ducting to the blower and range (select models).

NOTE: To avoid countertop damage, do not move range forward until range has been raised enough to clear all cabinetry.

Pull the range forward out of the cabinet opening.

Disconnect or unplug the power cord leading from unit to fuse box or junction box depending on unit.

Remove air grill, filter, grill grates, aeration pan and cartridges (select models).

Remove screws from plenum area at front of opening.

Open oven door and remove screws securing maintop to oven chassis, located on the bottom of control panel and along the outside edges of the maintop.

Remove cartridge receptacles and grill pans (select models).

Label and disconnect wiring to elements (select models).

Remove screws securing element mounting brackets to main top assembly (select models).

Gently remove elements from mounting brackets to prevent damage to glass top (select models).

Reverse procedure to reinstall maintop assembly.