


Removing the electronic control:

1. Disconnect the washer from the electrical supply, remove the water temperature knob and the console.
2. Lay the console on a soft flat surface and remove the (4) screws holding the control to the console.



3. Release the locking tabs and lift the control from the console.

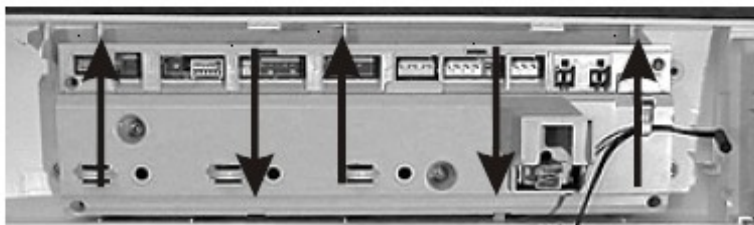

Note: Be careful not to lose the button springs.