


ELECTRIC DRYER WIRING DIAGRAM

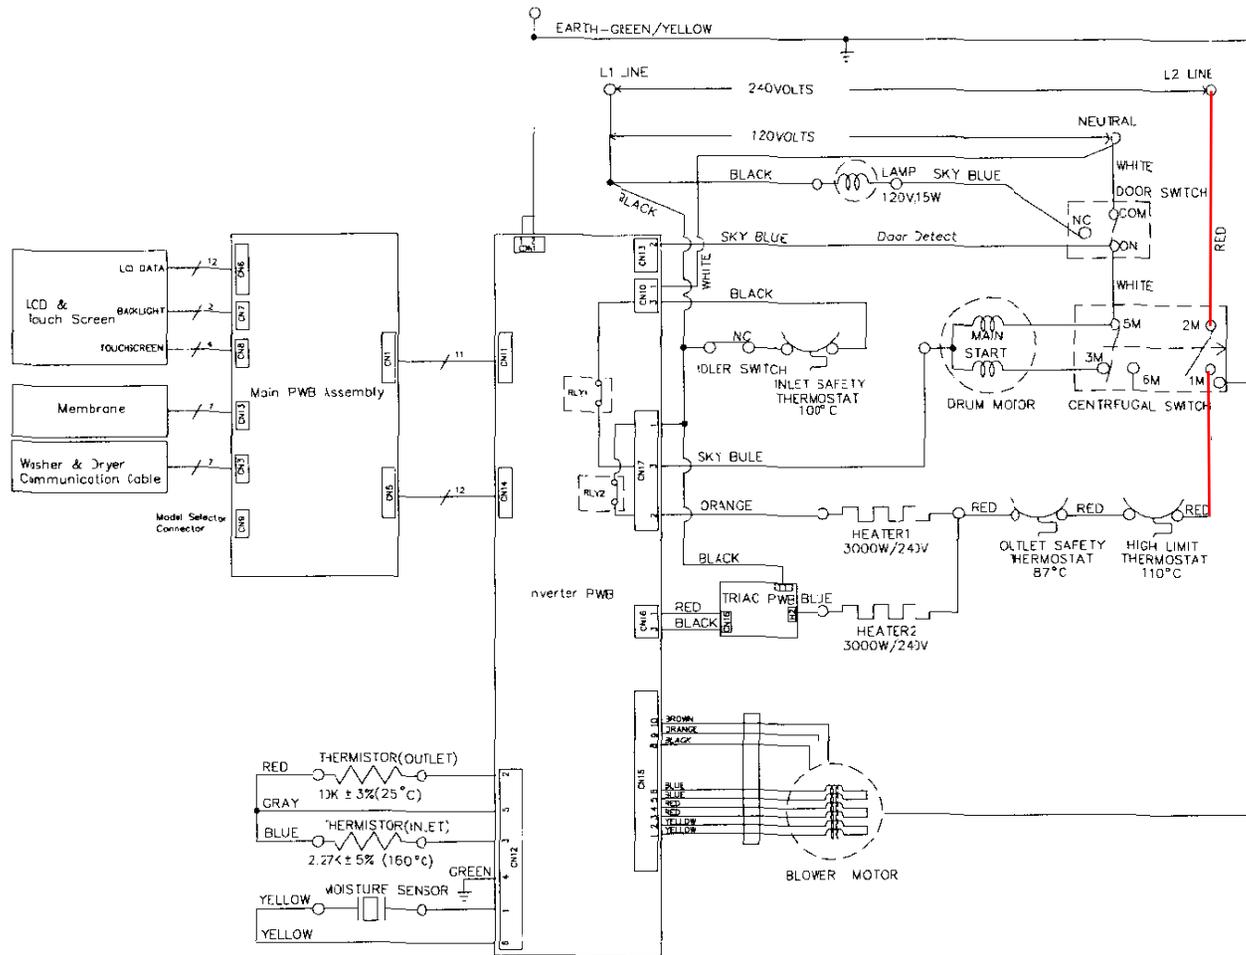

Electronic Control

WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK:

THE POWER MUST BE DISCONNECTED BEFORE SERVICING BY UNPLUGGING THE MACHINE OR DISCONNECTING THE CIRCUIT BREAKER.

THE MACHINE MUST BE ELECTRICALLY GROUNDED THROUGH THE LEAD IN THE 3-PRONG OR 4-PRONG POWER CORD. THE CORD MUST BE PLUGGED INTO A APPLIANCE OUTLET THAT HAS BEEN PROPERLY INSTALLED. IF LOCAL CODES REQUIRE AN ADDITIONAL GROUND CONNECTION, USE A 15 GAUGE OR LARGER WIRE TO CONNECT THE DRYER CABINET TO AN ESTABLISHED GROUND. IN ALL CASES, THE GROUNDING METHOD MUST COMPLY WITH ALL LOCAL ELECTRICAL CODES AND ORDINANCES.