


Pump belt adjustment:

1. With washer in an upright position, pull motor ahead so drive belt is tight.
2. Grasp pump belt in the middle and flex. With the belt flexed, there should be approximately 1/4" between the inside surfaces of the pump belt.

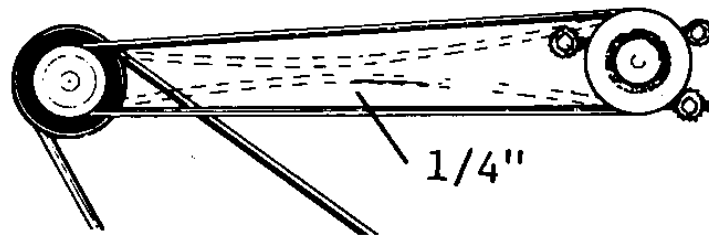

GOES AHEAD OF "SCREWS ON PUMP"

3. If necessary, loosen screws holding pump and position pump to get the 1/4" dimension.