



1. Open the dryer door.
2. Loosen the top keyhole screw, then remove the other four hinge screws.

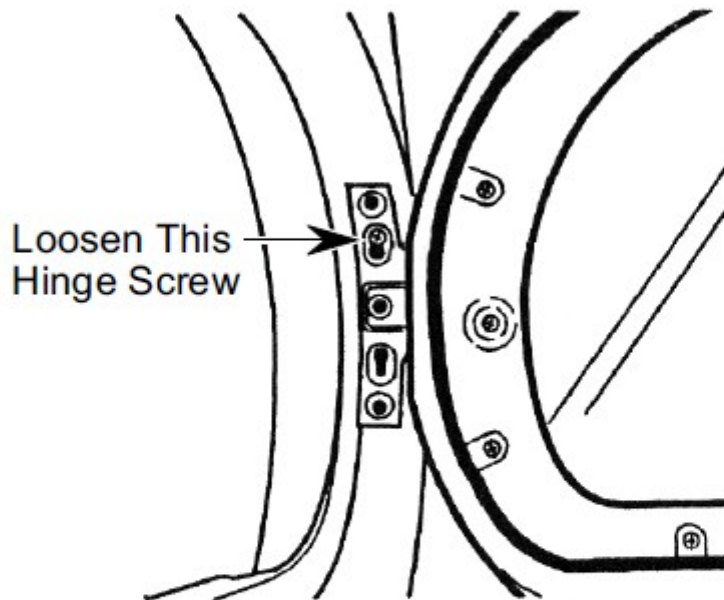


3. Lift the door from the top keyhole slot screw and place it on a padded surface with the inside door assembly facing up.
4. Remove the top keyhole slot screw and place it with the others.

5. Remove the two screws from the door handle and remove the handle by pulling straight out on it. Set the handle aside and keep it in case you ever want to restore the door swing to its original position.

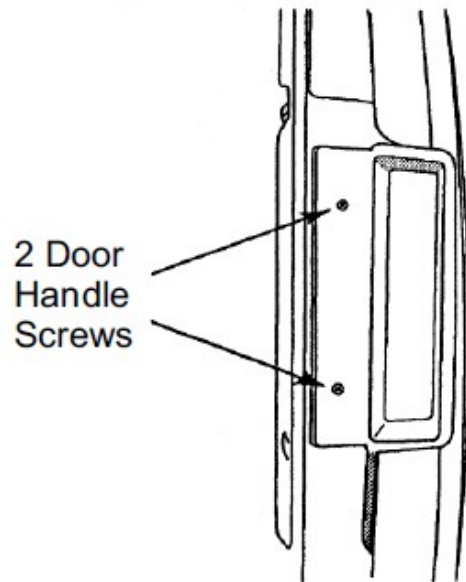

6. Remove the six screws that are indicated by the arrows, shown in the illustration. **Do not remove any of the other screws.**

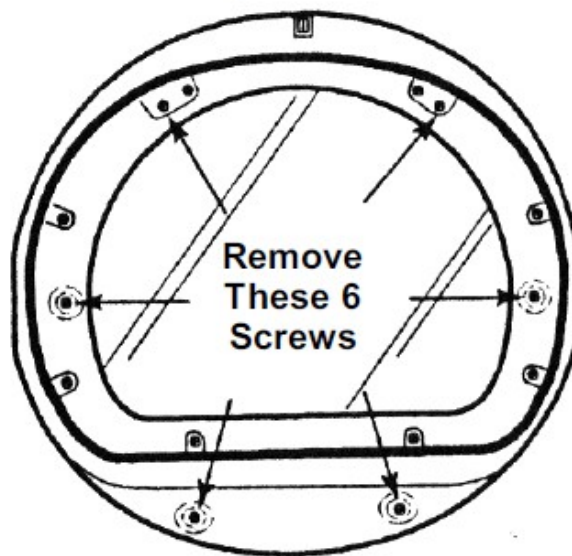

7. Lift the inner door assembly off of the outer door assembly.
Assemble in the reverse order.