

## REMOVING THE EOC ASSEMBLY ON SLIDE-IN & FREESTANDING MODELS, AND THE USER INTERFACE

### ⚠ WARNING




#### Electrical Shock Hazard

Disconnect power before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.


1. Unplug range or disconnect power.
2. Turn off gas supply to range.
3. Remove the two grates from the top of the range.
4. Pull the range forward so you can access the two end cap screws.
5. **To remove the electronic oven control (EOC) assembly on slide-in models:**
  - a) Pull the knobs off the gas valves.
  - b) Remove the two screws from the sides of the end caps.

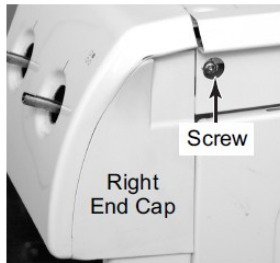


- c) Open the oven door and remove the indicated screws from the bottom of the control panel.



- d) Pull out on the bottom of the control panel, unclip the top edge from the bracket, and rotate the control panel forward so you can access the components.

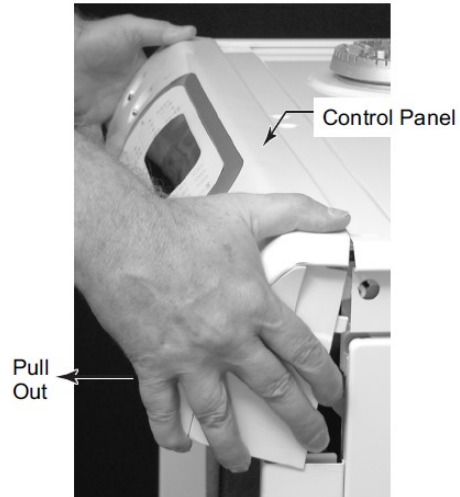


- e) Disconnect the wire connectors from the electronic oven control board at P1 and P2, and the ribbon cable connector at P40.
- f) Remove the four screws from the electronic oven control housing, and remove the assembly from the control panel. **NOTE:** The EOC boards and the housing are replaced as an assembly.

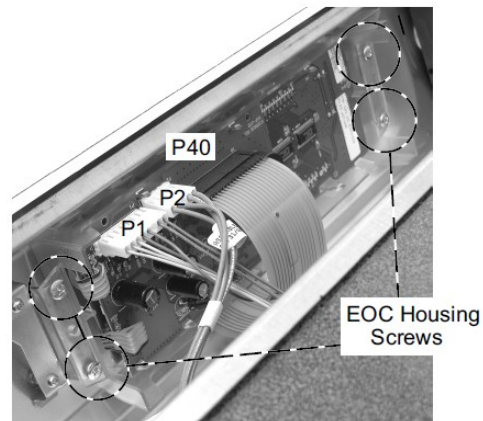


6. **To remove the electronic oven control (EOC) assembly on freestanding models:**

- a) Open the oven door, and remove the screws from the bottom of the control panel (see the photo in step 5c).
- b) Remove the two cooktop trim screws.
- c) Slide the cooktop trim back to expose the end cap screw, and remove the screws (1 on each side).
- d) Perform steps 5d, 5e, and 5f on page 4-2 to remove the EOC assembly.

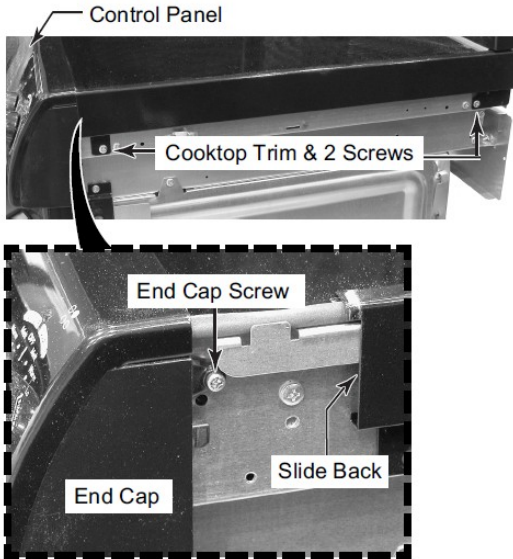

7. **To remove the user interface:**

- a) Remove the electronic oven control assembly (see steps 5 or 6).
- b) Remove the four machine screws from the control panel mounting brackets, and remove the user interface and its bracket.

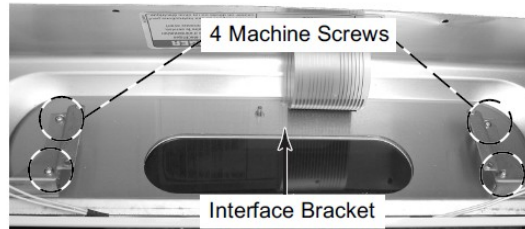

Electronic Oven Control (EOC) Assembly



User Interface