

1. Disconnect the washer from the electrical supply, remove the top panel and detergent drawer.


2. Remove the (2) screws, one on each end, holding the console to the top of the side panels.




3. Remove the (3) screws behind the detergent drawer panel.



4. Release the tab that is spread open by the left hand screw as view from the front.

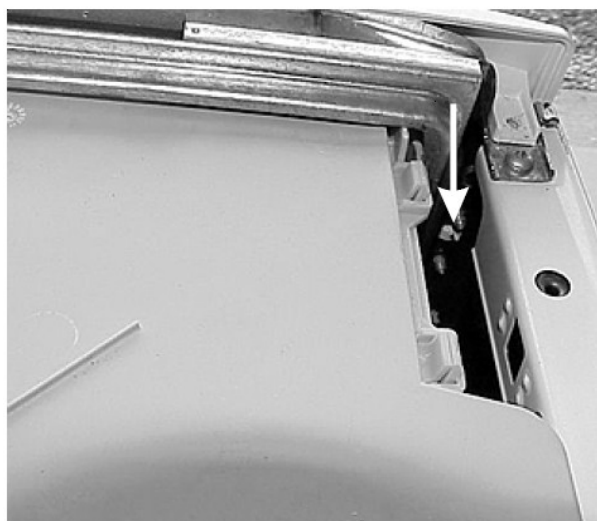


5. Release the (3) locking tabs at top rear edge of the console and roll the console forward.

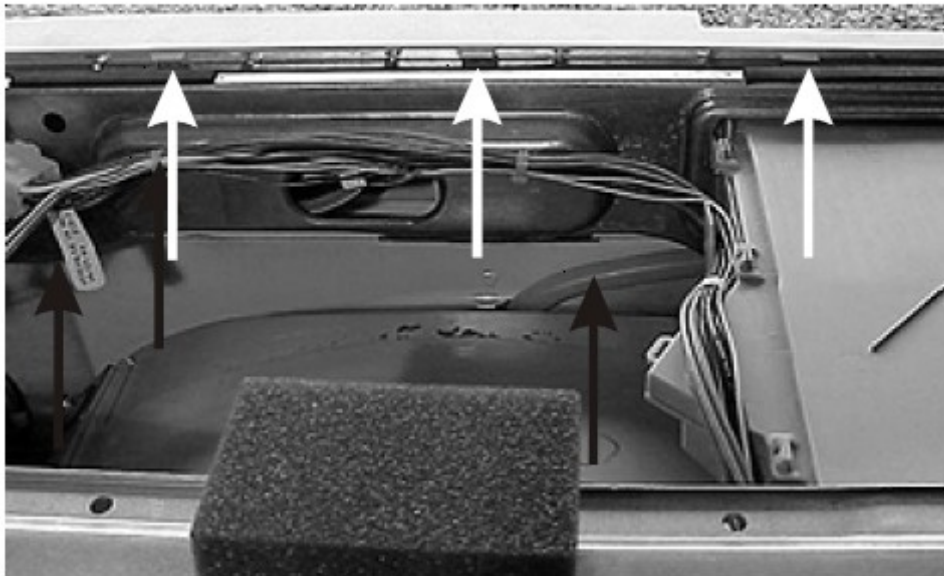

2. Tag each plug with the jack number, then disconnect the electrical harness from the electronic control, release the wire harness rivets from the back of the control and lift the console off .



2. Lay the console on a soft flat surface and remove the (4) screws holding the control to the console.

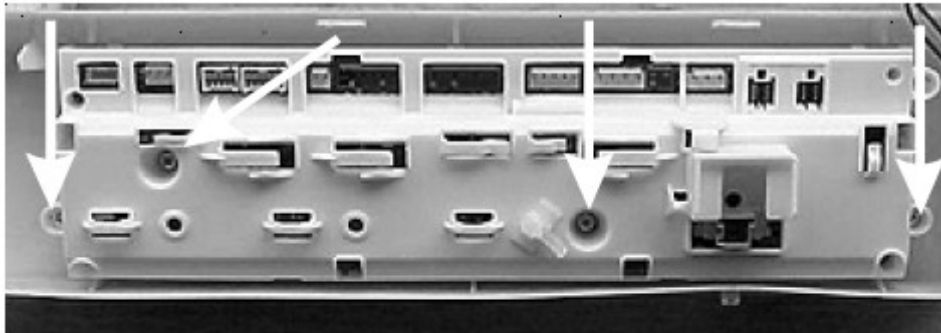

3. Release the locking tabs and lift the control from the console.



Note: Be careful not to lose the button springs.