



Removing the access panel:

1. The access panel is held to the upper side panels by two screws and two tabs. Remove the two screws and pull up and out to remove the panel.

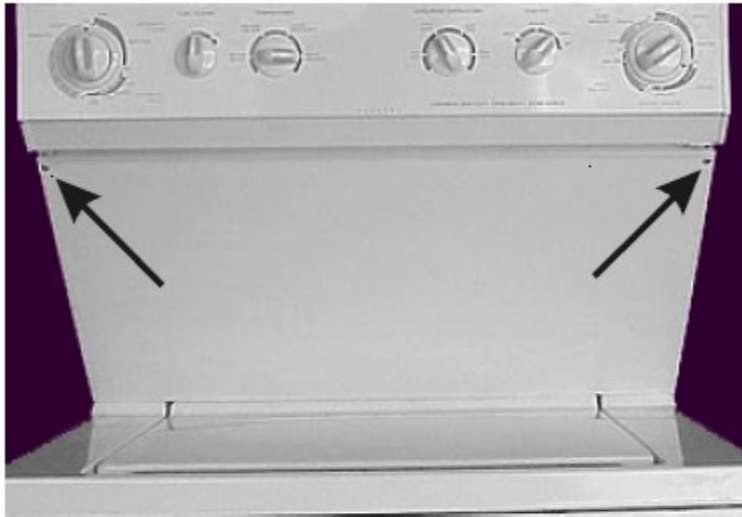

Removing the heat shield:

1. Disconnect the laundry center from the electrical supply and remove the access panel.
2. Remove the six screws, four holding the heat shield to the side panels and two holding the heat shield to the dryer section base.

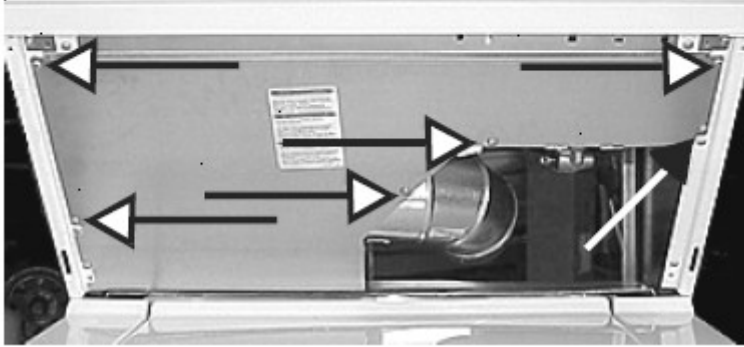

Removing the dryer front panel:


1. Disconnect the laundry center from the electrical supply, remove the access panel and heat shield.
2. Open the console and remove the two screws holding the front panel to the side panels.



3. Unplug the dryer door switch harness.




4. Remove the four screws holding the front panel to the top and carefully pull the front panel forward.

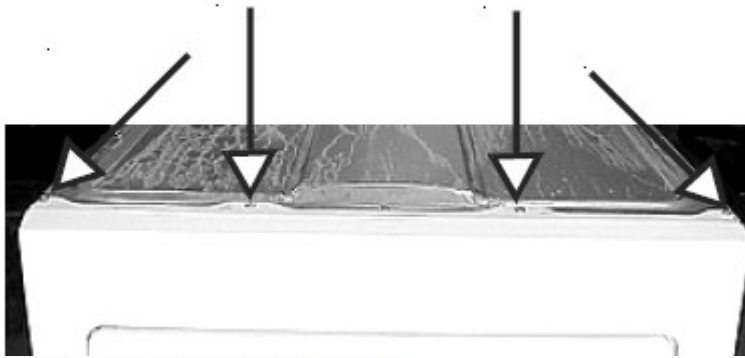


Releasing the dryer belt:

1. Remove the access panel.
2. Push the idler pulley to the left and slip the belt off the motor pulley.

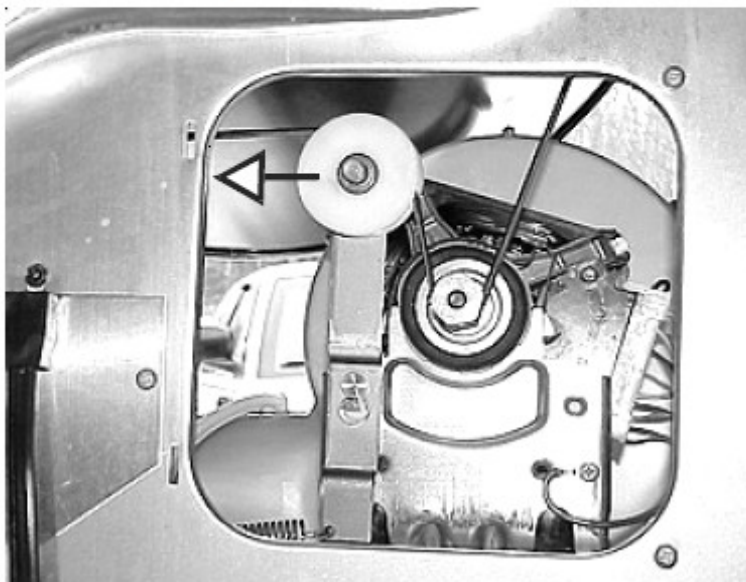


3. From the front, slightly raise the front of the drum and slide the belt off.

Raise drum to disengage the ball from the hitch and slid the drum out the front.

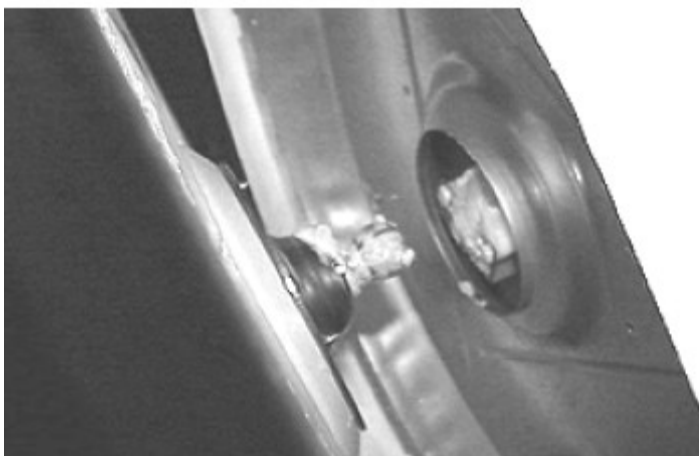

Removing the heating element assembly: (Electric dryers)

1. Disconnect the laundry center from electrical supply and remove the drum.
2. Disconnect the two wires from the heating element.
3. Remove the high limit thermostat.

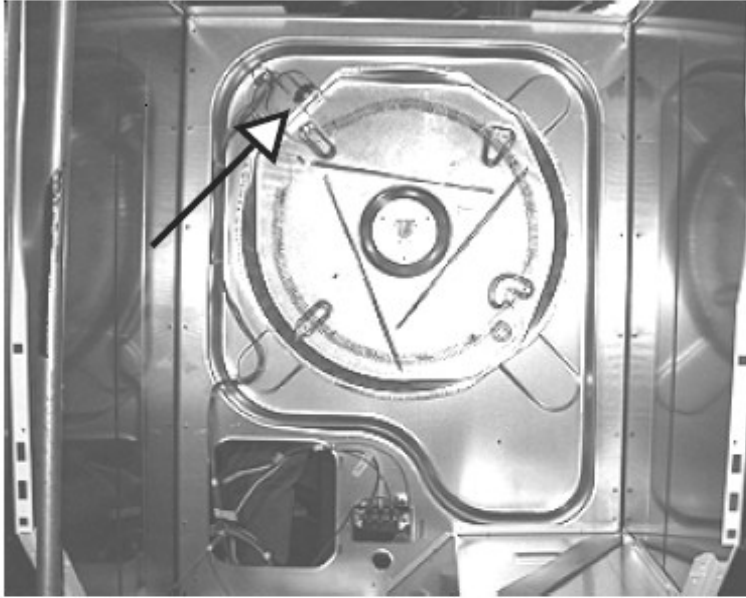

4. Remove the four screws securing the heating element assembly to the rear of the cabinet.

