

Drum

The drum is made of 304 stainless steel and has three replaceable baffles.

To remove the drum:

1. Remove the drive belt. (See *Drive Belt*.)
2. Remove either of the 2 Phillips-head screws that attach the front of the cabinet to the frame, then gently spread the sides apart to provide clearance for the drum.



3. Grasp the drum firmly at the 11 o'clock and 1 o'clock positions. Brace the bottom of the drum against your leg and maneuver the drum out of the cabinet.

