



Most dispenser problems occur from dispenser doors being damaged or pulled off (due to misuse). Please follow the instructions below when replacing doors.

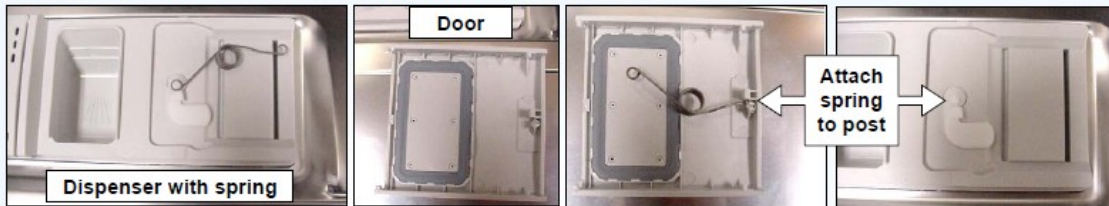

1. Connect spring to door & dispenser housing posts.
2. While keeping spring attached to posts, carefully slide door onto housing -- making sure door tabs engage dispenser door rails.
3. Door levers don't need to be preset during installation.



HINT: To close dispenser doors, slide doors closed, then push white lever until lever locks (showing doors are closed). Levers don't need to be preset during installation.

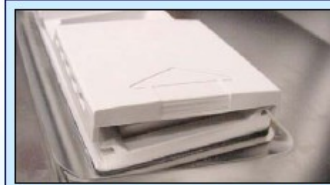

HINT: Make sure door tabs engage dispenser door rails.