

# LNTT231A

## Troubleshooting Steps For E53 Lux Care Electric Dryer

10.27.23

**BRAND:** Electrolux

**MODEL:** EFDE317TIW EFDC317TIW EFME427UIW EFMC427UIW EFME527UIW  
EFMC527UIW EFME527UTT EFMC527UTT EFMC627UTT EFME627UIW  
EFMC627UIW EFME627UTT EFME617SIW EFME417STT EFME417SIW  
EFME517SIW EFME617STT EFME517STT ELFE753CAT ELFE7337AW  
ELFE7637AW ELFE7637AT ELFE7637BT ELFE7637BW

**SERIAL:** All

**CONDITION:** E53 (Open in heating circuit on L2 side from terminal block to heating relay.)

**SOLUTION:** Follow the recommended troubleshooting process:  
- Confirm 240vac at terminal block from Black to Red.  
- Confirm resistance of heater across and to ground.  
- Confirm motor plug pins are properly seated. (Fig 1)

Fig 1



**NOTE:** E53 is almost never the main control or motor, but a wiring or electrical issue.

For Additional Questions Please Contact The Electrolux Technical Support Team: 1-888-842-3660