


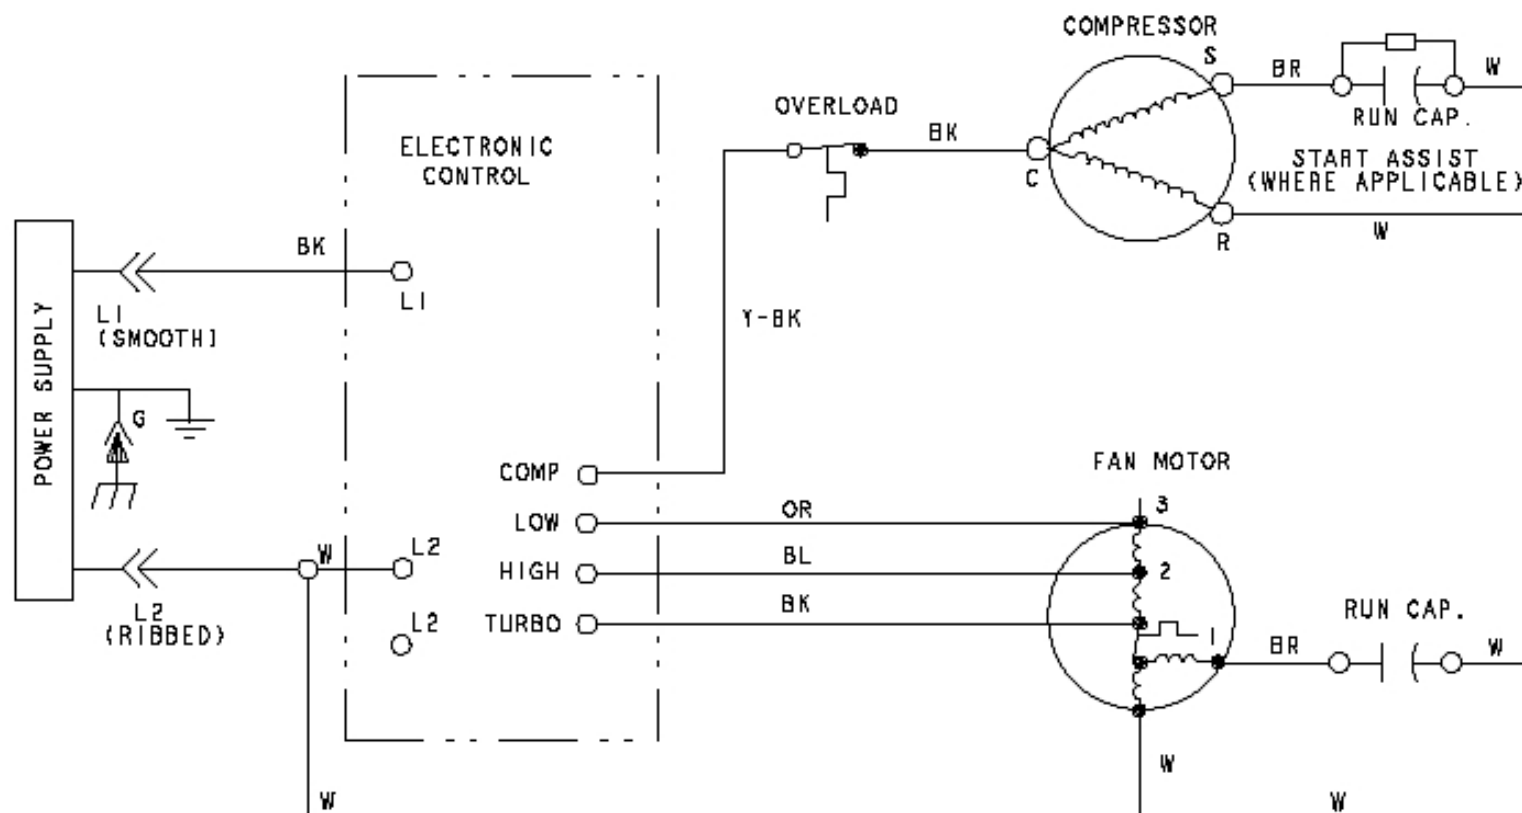

Part No. (1188126)

FAN MOTOR WIRES
OR - FROM FAN MOTOR TO LOW TERMINAL IN THE ELECTRONIC CONTROL
BL - FROM FAN MOTOR TO HIGH TERMINAL IN THE ELECTRONIC CONTROL
BK - FROM FAN MOTOR TO TURBO TERMINAL IN THE ELECTRONIC CONTROL

HOW TO RUN DIAGNOSTIC MODE:
 >PRODUCT MUST BE OFF
 >PRESS IN SEQUENCE
 UP, DOWN, TIMER, FAN, MODE, FILTER, POWER
 IN LESS THAN 7 SECONDS
 >ALL LEDS COME ON
 >PRESS "UP" BUTTON TO SKIP TO NEXT STEP(ALL LEDS GO OFF)
 >THERMOSTAT READING
 (ROOM TEMPERATURE DISPLAYED-32F-99F-OP & SC ARE FAILURE MODES)
 PRESS "UP" BUTTON
 >COMPRESSOR ON (20 SEC. MAX. DISPLAY SHOWS THE SOFTWARE VERSION-
 SEE ELECT. PM LABEL SW...)
 PRESS "UP" BUTTON
 >TURBO FAN ON (88 DISPLAYED)
 PRESS "UP" BUTTON
 >HIGH FAN ON (88 DISPLAYED)
 PRESS "UP" BUTTON
 >LOW FAN ON (88 DISPLAYED)
 PRESS "UP" BUTTON
 >OFF
 (FACTORY DEFAULTS AUTOMATICALLY RESTORED
 AFTER 5 MINUTES THIS ROUTINE IS AUTOMATICALLY FINISHED)