



REMOVING THE OVEN DOOR COMPONENTS

! WARNING


Personal Injury Hazard

Disconnect from the electrical supply before servicing the unit. Failure to do so could result in death or electrical shock.

1. Disconnect the electrical supply to the microwave oven.
2. Remove the two screws from the top of the cabinet for the vent grille and remove the grille (see the illustration on page 2-3).
3. Open the oven door all the way, then lift the door pins out of the hinge holes and remove it (see the illustration on the previous page).

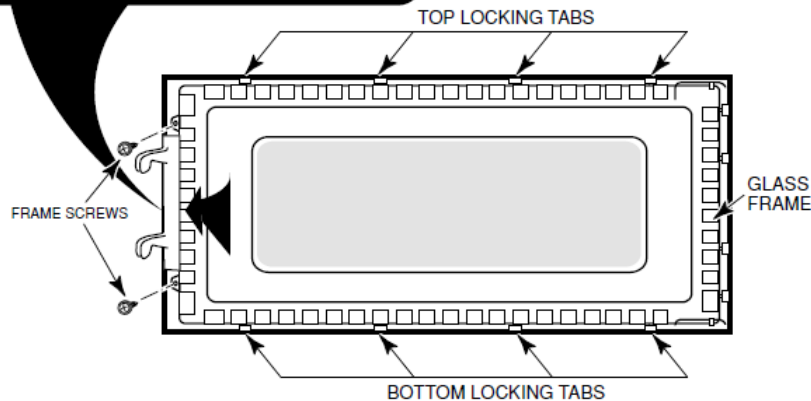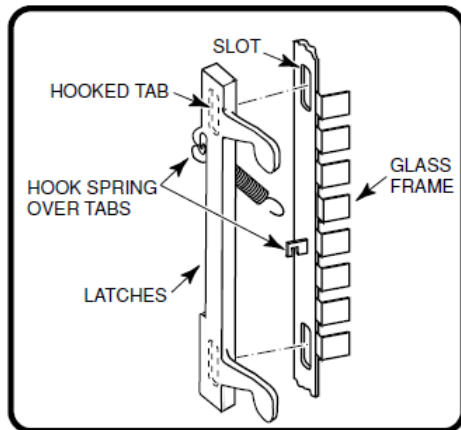

4. To remove the oven door choke, use a putty knife along the edges, and pry the choke out from around the inside window frame.

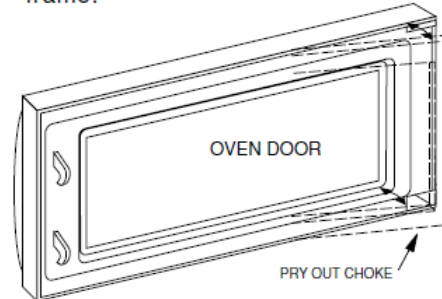

5. To replace the latches and door glass assembly, remove the two mounting screws from the end of the glass frame, then push the top and bottom edges of the door out and unsnap the locking tabs from the frame and remove the assembly.
6. Slide the latches down and remove the hooked tabs from the slots in the door frame, then unhook the ends of the spring from the door, and remove the latches.
7. Reassemble the oven door.
8. Reinstall the oven door and vent grille on the microwave oven.