


1. Disconnect the electrical power to the microwave/oven combination.
2. Open the lower oven door.
3. Remove the bottom screw from each of the two side trim pieces (see below).
4. To remove the side trim, pull the bottom out approximately 2", and slide the top down to free it from the control panel.

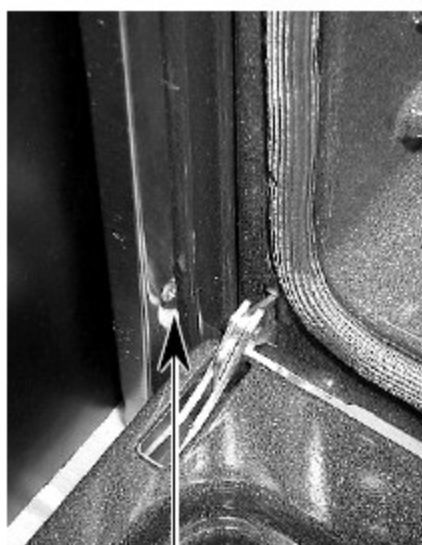


Side Trim Screw
(1 On Each Side)




Pull Out Bottom
Of Side Trim

Pull Side Trim
Down & Away
From Control
Panel

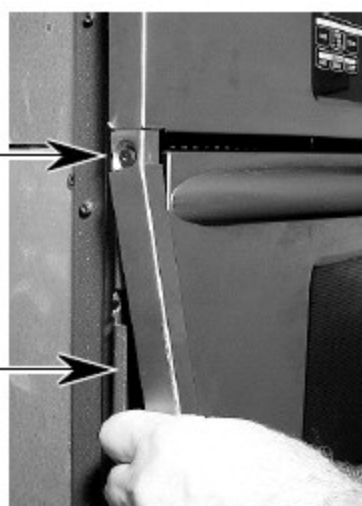


2. Open the microwave oven door and remove the glass turntable and roller assembly from inside the oven cavity. Leave the oven door open.


Turntable &
Roller Assembly

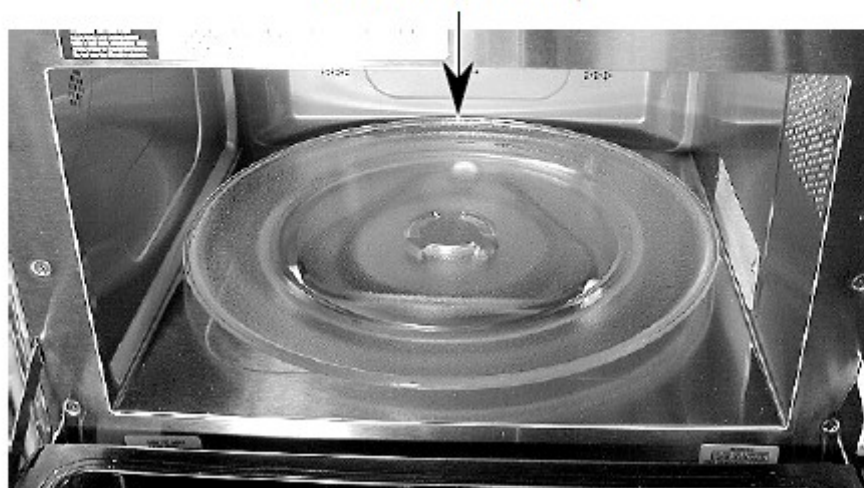


4. Remove the three screws from the upper air vent and remove the air vent.

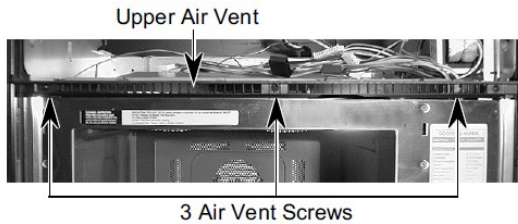


5. Remove the four screws from the lower air vent and remove the air vent.

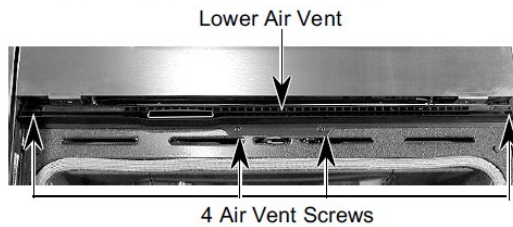

6. Remove the two screws from the lower microwave mounting brackets.

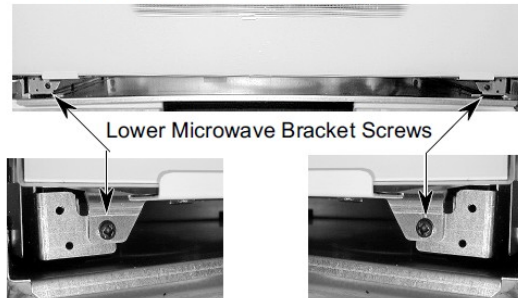


**WARNING**

EXCESSIVE WEIGHT HAZARD
Use two or more people to remove and reinstall the microwave oven.
Failure to follow this instruction can result in back, or other injury.

7. Close the microwave oven door.
8. Pull the microwave oven out of the oven cabinet approximately four inches.

9. Disconnect the two red LOAD wires from the microwave light power supply, the 6-pin connector, and the green ground wire in the top of the oven cabinet.

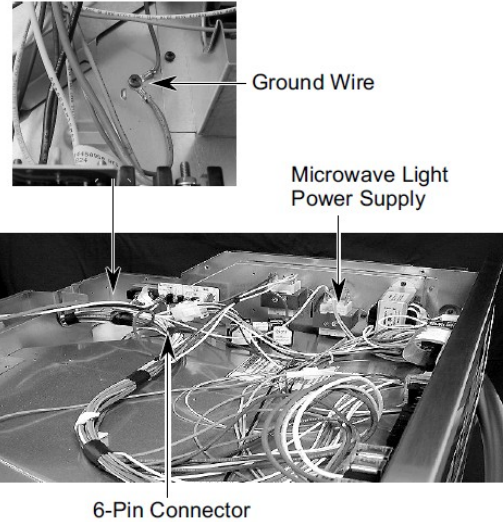

10. Slide the plastic grommet and the microwave oven out of the oven cabinet and set the oven on your work surface.

