

REMOVING THE DISPENSER DRAWER, TOP AND CONSOLE ASSEMBLY

⚠ WARNING



Electrical Shock Hazard


**Disconnect power before servicing.
Replace all parts and panels before
operating.**

**Failure to do so can result in death or
electrical shock.**


1. Unplug washer or disconnect power.
2. Turn off the water supply to the washer.
3. To Remove the dispenser drawer:
 - a) pull the drawer all the way out and depress the tab labeled "push" to remove drawer.



4. To remove the top:
 - a) Remove the three 1/4" screws from the rear top cover of the washer.

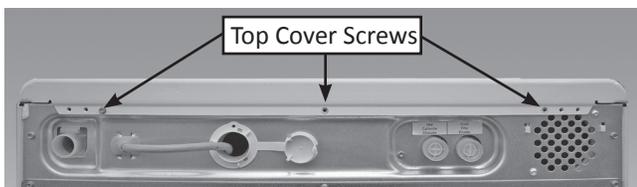

- b) Pull back on the top.

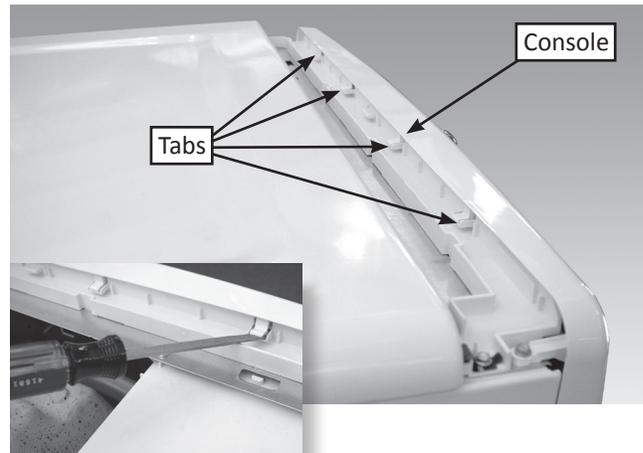


5. To remove the console:
 - a) Remove the top.
 - b) Remove 2 screws at both ends on the top of the console.



View is top front

- c) Remove 2 T25 Torx head on either side of drawer opening.

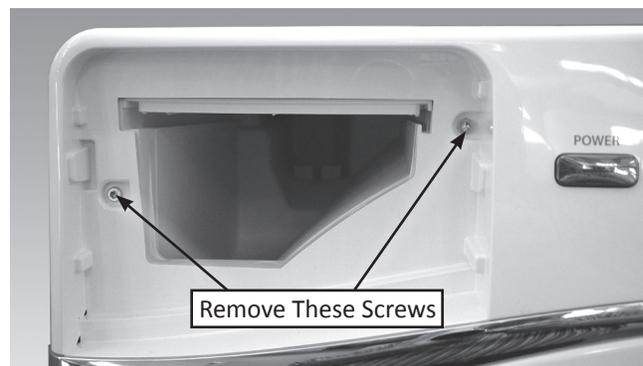

- d) Lift the top edge of the console and unhook it from the holder tabs.

