


Reinstalling or replacing the bellows:


1. Use liquid dishwasher soap to lubricate the groove on the bellows to make it easier to slip the groove of the bellows onto the lip of the tub.
2. There is a tab and an arrow on the top of the tub lip



and a slot in the groove and an arrow at the top of the bellows.

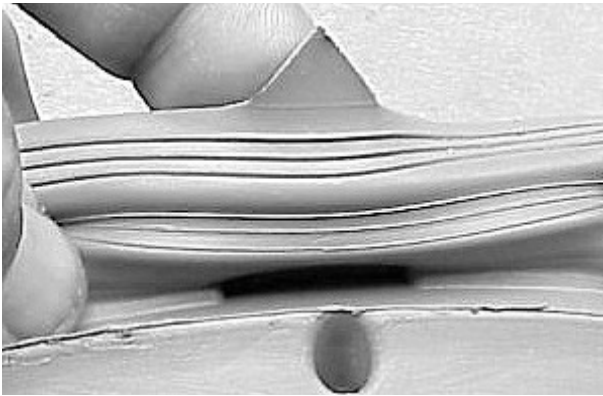

3. Place the slot over the tab and while holding the bellows in place with one hand, place the other hand inside the bellows and force the groove of the bellows over the lip of the tub with your thumb.

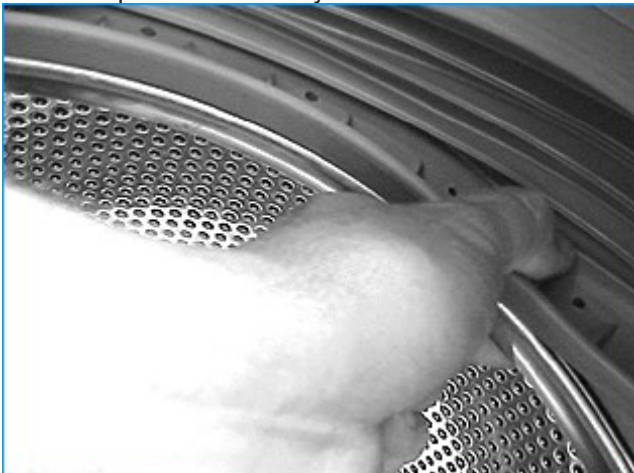

4. Work your way about one third way around the tub, then pull in on the inside flap of the bellows to seat the bellows into the lip of the tub.



5. Using your thumb, start on the other side of the top tab and force the bellows on in the other direction. Again about one third of the way around stop and seat the bellows onto the tub lip. Then force the remaining bellows on with your thumb and seat it.


6. To install the spring, fold the front of the bellows back into the tub.



7. Place the spring in the groove at the top of the bellows and wedge a round object, about 3/4 " in diameter, between the weight ring and the bellows to hold the spring in the groove.



8. Pull the spring with one hand while working it into the groove with the other.

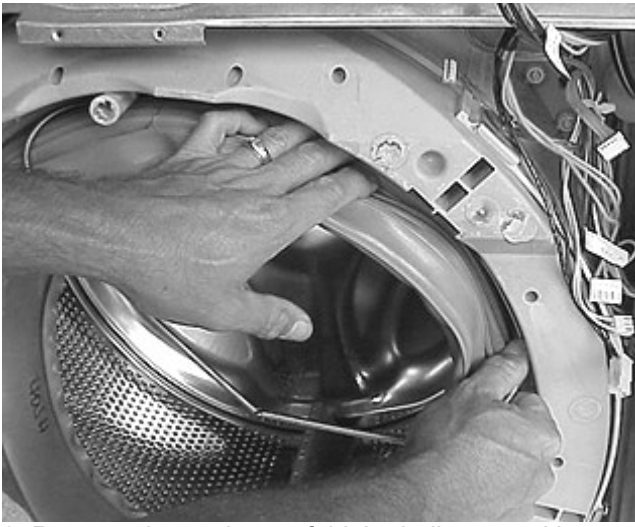

9. Remove the wedge, unfold the bellows, and insert the advance rinsing technology hose .