

# LNTT2631

03.06.26

## Roller Noise Concern

**BRAND:** Electrolux

**MODEL:** ELFE7337AW ELFG7337AW ELFE733CAW ELFE7437AW ELFG7437AW ELFE743CAW  
 ELFE7437AG ELFG7437AG ELFE743CAG ELFE7437AT ELFG7437AT ELFE743CAT  
 ELFE7537AW ELFG7537AW ELFE753CAW ELFE7537AT ELFG7537AT ELFE753CAT  
 ELFE7626BW ELFG7626BW ELFE762CBW ELFE7637AW ELFG7637AW ELFE763CAW  
 ELFE7637AT ELFG7637AT ELFE763CAT ELFE7738AW ELFG7738AW ELFE773CAW  
 ELFE7738AA ELFG7738AA ELFE773CAA ELFE7738MW ELFG7738MW ELFE773CMW  
 ELTE7300AW ELTG7300AW ELTE730CAW ELTE7300AD ELTG7300AD ELTE730CAD  
 ELTE7600AW ELTG7600AW ELTE760CAW ELTE7600AT ELTG7600AT ELTE760CAT


**SERIAL:** Front Load Dryers (4D551XXXX and older) & Laundry Towers (4B551XXXX and older)

**CONDITION:** Lint accumulation, dust or any debris on roller wheels preventing smooth rotation.

**SOLUTION:** Please complete the following:

**Step 1.** Remove front panel and front bulkhead to get the drum and come off from the unit

**Step 2.** Locate the front and rear Rollers.

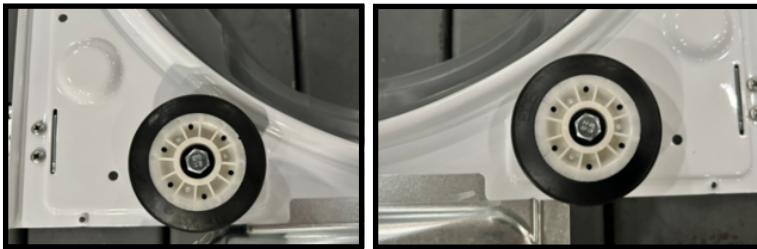


Front Bulkhead Rollers



Rear Bulkhead Rollers

**Step 3.** Remove the lint or dust accumulation.

**Step 4.** Clean shafts and roller bushings with WD-40.

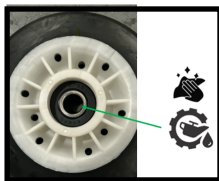

X 4 Roller wheels



**Step 5.** Use some silicone lubricant (ex. Blaster) in the shafts and roller bushings.

**Step 6.** Reinstall in the unit.

**Step 7.** Reassemble the unit.

**Step 8.** Test in diagnostics.

---

# LNTT2631

03.06.26

## Roller Noise Concern

---

**SOLUTION CONT:**

Please select the play buttons below to see a comparison of good roller operation versus poor roller operation.

**Good Operation**



**Poor Operation**



**For Additional Questions Please Contact The Electrolux Technical Support Team: 1-888-842-3660**