


TEMP. SW. POSITION		△
WASH	RINSE	
HOT	COLD	A
COLD	COLD	C
WARM	COLD	A.C


△ CLOSED IN POSITIONS NOTED.

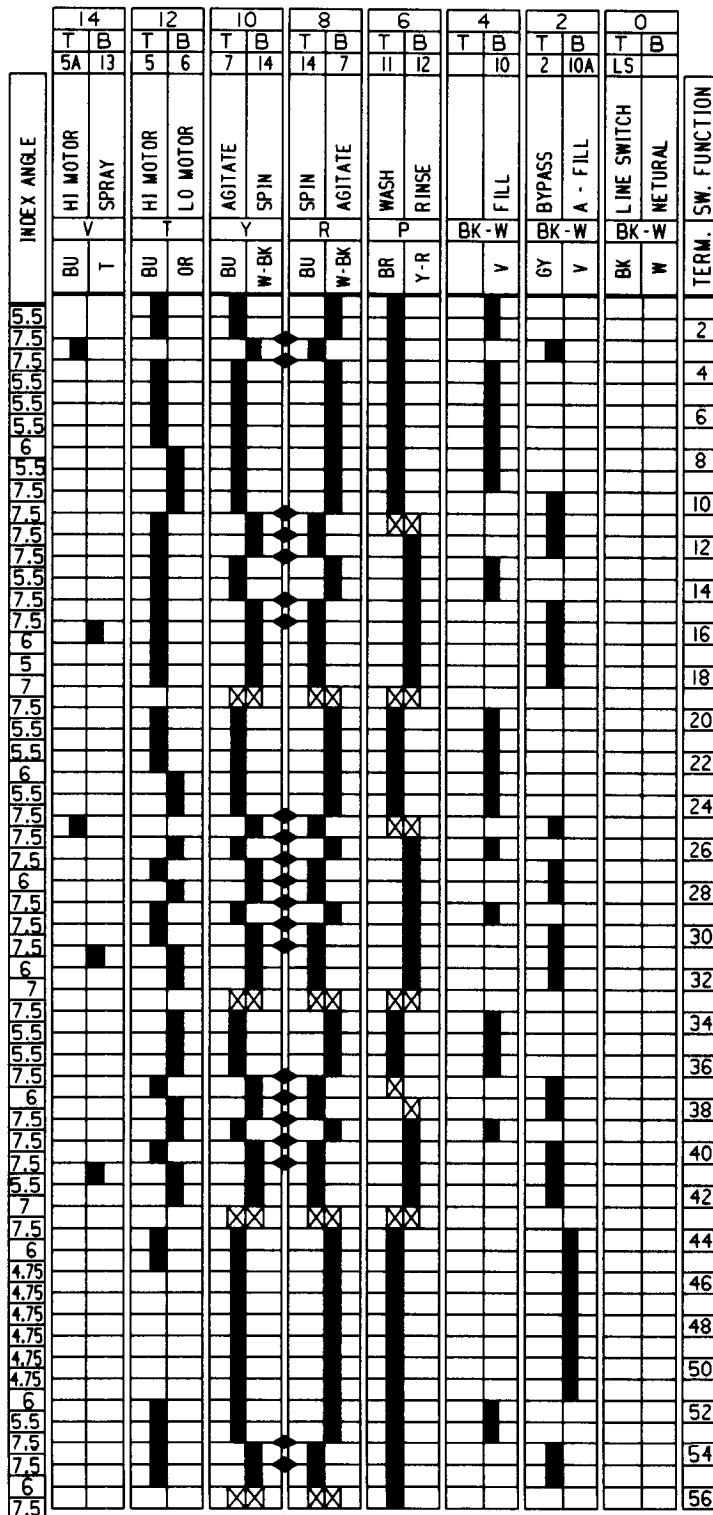

WASHER TIMER SCHEDULE
120 SECONDS PER STEP

MACHINE FUNCTION			
FILL - AGITATE	WASH HI	SUPER WASH	
1/2 TUB DRAIN	DRAIN HI		
AGITATE HI	FILL & WASH	REGULAR HEAVY	
AGITATE LO			
DRY AGITATE LO			
	DRAIN HI		
	SPIN HI		
FILL - AGITATE	RINSE HI		
	DRAIN HI		
SPRAY	SPIN HI		
OFF			
AGITATE HI	FILL & WASH	PERMANENT PRESS	
AGITATE LO			
1/2 TUB DRAIN HI	COOL DOWN		
FILL AGIT LO			
	DRAIN HI		
	SPIN LO		
FILL AGITATE	RINSE HI		
	DRAIN HI		
SPRAY	SPIN LO		
OFF			
AGITATE LO	FILL & WASH	KNITS / GENTLE	
	DRAIN HI		
	SPIN LO		
FILL - AGITATE	RINSE LO		
	DRAIN HI		
SPRAY	SPIN LO		
OFF			
AGITATE HI	FILL & WASH	SOAK	
SOAK	FILL & WASH		
AGITATE HI	FILL & WASH	PRE WASH	
	DRAIN HI		
	SPIN HI		
OFF			

△ INDICATES MOTOR "OFF" FOR 3.2 ± 0.8 SECONDS

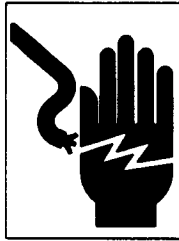

⚠ WARNING

Disconnect from electric supply before servicing.

Replace all panels before operating.

PART NO.
3398986
REL

