

### Top Vent & Fan Assembly

The top vent and fan assembly is located in the top right rear corner of the tub. This vent is normally closed, opening in only the dry cycle by the electronic control. The vent is monitored by the control throughout the cycle to insure it stays closed. The vent and fan motor is replaced only as an assembly.

The blower operates with 12VDC with a speed of 3500rpm. This assembly plugs directly into the electronic control. If the control senses a failure in the blower or the vent baffle it will stop the dishwasher and show a failure code.

To remove the top vent and fan assembly:

1. Pull unit from its installation position.
2. Disconnect the electrical leads from wire harness on exterior of unit.
2. Remove the top wire rack.
3. Reach inside tub, turn retaining nut clockwise until retaining nut falls from the top vent assembly. (See Figure 5-30)

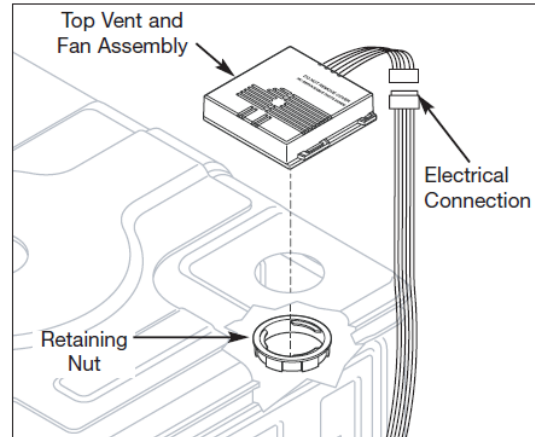


Figure 5-30. Top Vent & Fan Assembly