


Removing Top Assembly (Electric)




Disconnect appliance from power source. Open oven door and remove two 1/4" hex head screws that secure the top to a flange located just above the oven door. Screws are located at the front corners of the top .

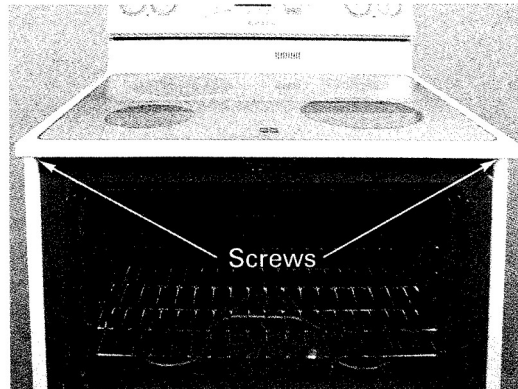

NOTE: There are no hinges holding the top in place. Once the screws are removed and the connector is disconnected, the top is loose and can be lifted off.

After the screws have been removed, grasp the top with both hands firmly, and pull the range top forward. Disconnect the multi-pin wiring harness connector. Lift top upward and remove.

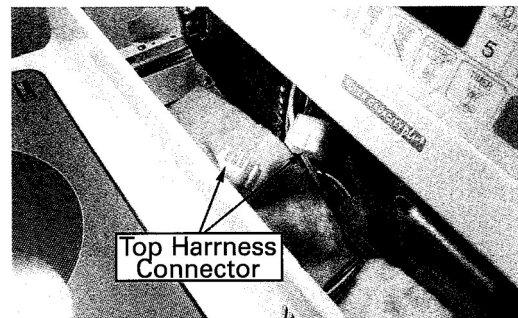

NOTE: If service to the elements is necessary, place the top on a towel or other protective covering to prevent any damage to the top or the range.

After the top is removed, you now have access to the door latch assembly, door lock switches hot surface indicator lights, and elements.

