

BLENDER SERVICE MANUAL

Blender Service Procedures

WARNING

Coupler Replacement (Fig. 12)

The coupler (14), in the upper housing (5), can be removed by using a flathead screwdriver and a large pair of pliers. Place the screwdriver in the slot of the motor shaft (15). Hold the coupler (14) with the pliers. Turn the shaft clockwise to remove the coupler.

The coupler (14) is threaded in a left-hand manner on the end of the motor shaft. To install a new coupler, you will use a counterclockwise rotation. Avoid damage to the new coupler when installing by placing tape over the jaws of the pliers.

