

### Control Panel Access

1. Remove the three (3) screws that hold the Control Panel in place. (Fig. 18)
2. Remove the transition panel by removing the three (3) retaining screws. (Fig. 18)  
The wiring diagram is located on the back side of the transition panel


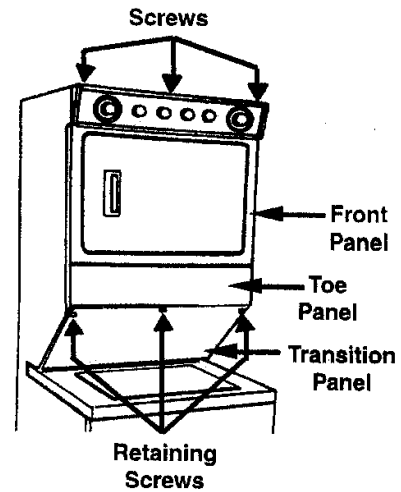


Fig. 18

3. Lift the console up and flip it forward, being careful not to damage the knobs or the dryer front panel. (Fig. 19)

Fig. 19

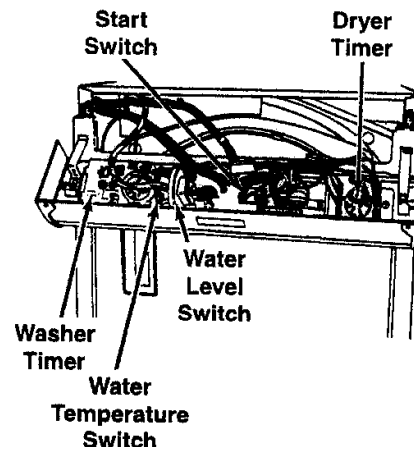

### Dryer Toe Panel Access

1. Remove the Transition Panel by removing the three (3) retaining screws.
2. Using a putty knife, release the two (2) retaining clips and remove the toe panel. (Fig. 20)

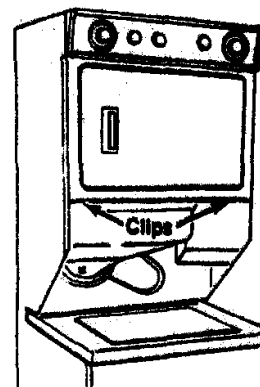


Fig. 20

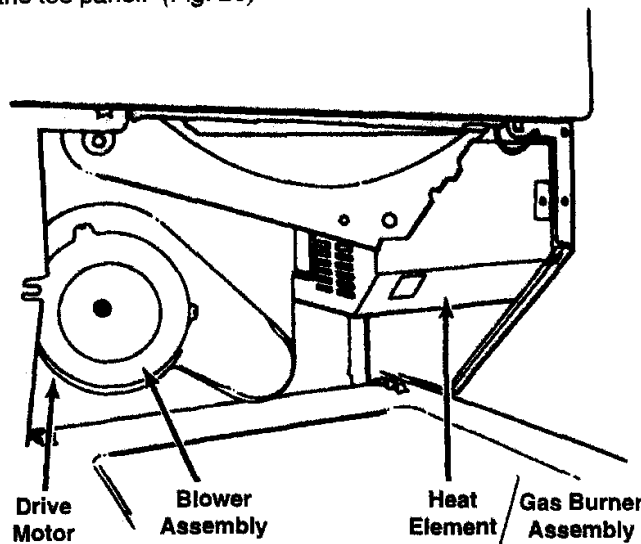


Fig. 21

### Door Front Panel Access

1. Remove the transition panel and the Toe Panel.
2. Flip down the Control Panel. (Fig. 22)
3. Disconnect the Door Switch Wires.
4. Remove the Control Panel from the Front Panel and set it on top of the unit. (Fig. 23)

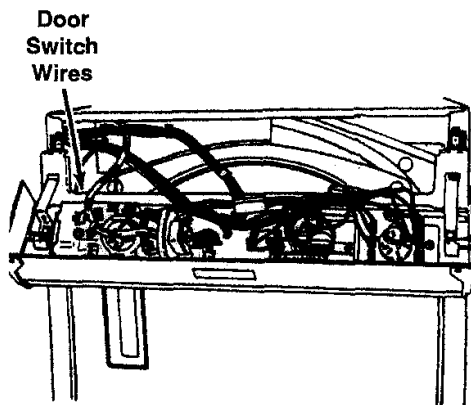


Fig. 22

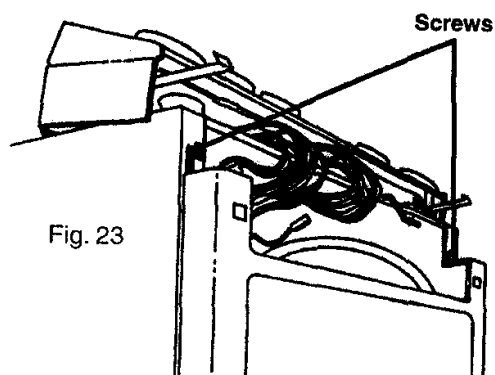


Fig. 23

5. Remove the top two (2) retaining screws.
6. Remove the bottom two (2) screws.
7. Remove the Lint Screen.
8. Remove the three (3) Dryer Lint Duct assembly retaining screws and remove the assembly.  
(Fig. 24)
9. Remove the four (4) heater element shield screws.  
(Fig. 24)
10. The Dryer Front Panel can now be removed.

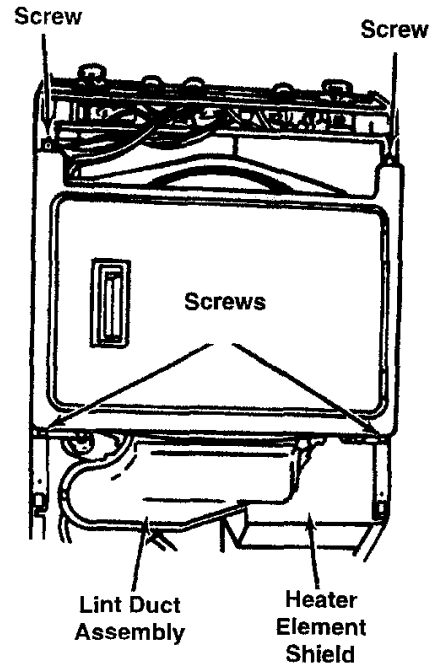


Fig. 24