


REMOVING THE DOOR SWITCH ASSEMBLY AND THE BELLOWS

⚠ WARNING




Electrical Shock Hazard
Disconnect power before servicing.
Replace all parts and panels before
operating.
Failure to do so can result in death or
electrical shock.


1. Unplug washer or disconnect power.
2. Turn off the water supply to the washer.
3. Remove the top cover and the console (see page 4-2 for the procedures).
4. Remove the lower front access panel (see step 10 on page 4-11 for the procedure).
5. Open the washer door.

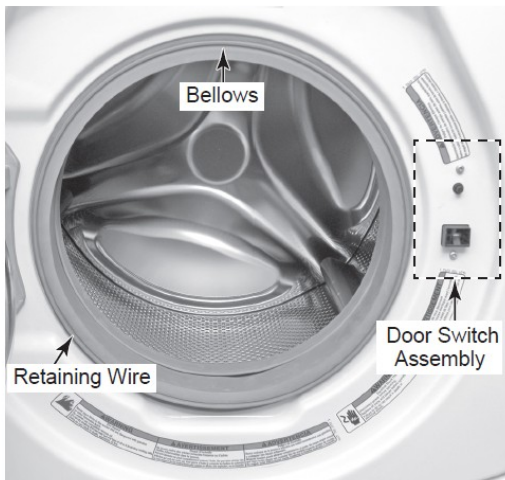



6. Using a small screwdriver or a pair of long-nosed pliers, pull the tension spring on the retaining wire out from around the front of the bellows, and remove the wire.

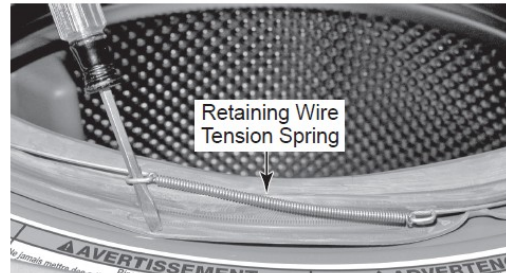

7. **To remove the door switch assembly:**
 - a) Pull the bellows off the lip of the front panel beside the door switch assembly just enough to access the switch assembly.
 - b) Remove the two T-20 Torx screws from the door switch assembly.

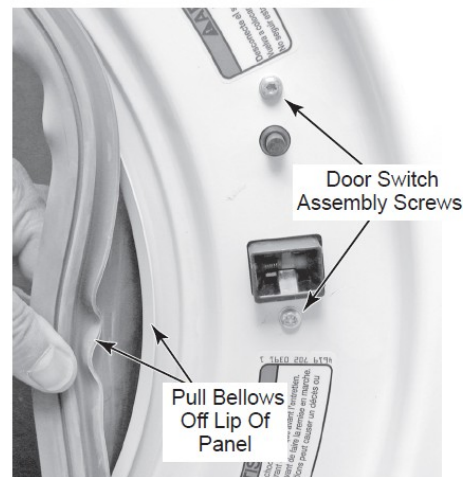

- c) Pull the door switch assembly out and turn it over so that you can access the connectors.
- d) Unlock the tabs and disconnect the three wire connectors from the door switch terminals, then remove the assembly.

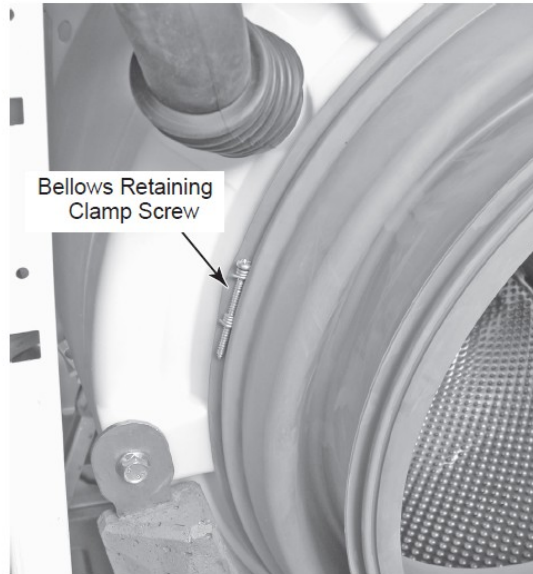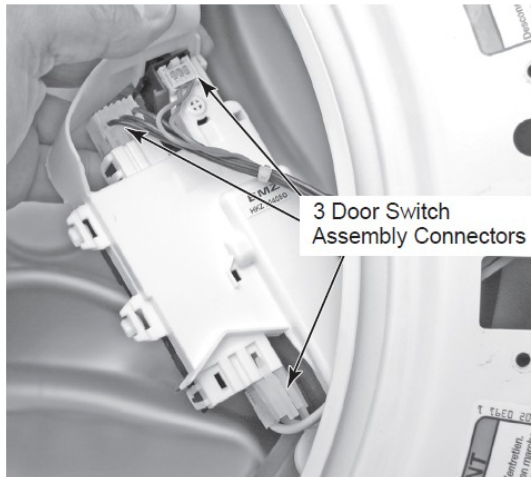

- d) Remove the bellows retaining clamp from around the bellows.



8. **To remove the bellows:**

- a) Remove the two T-20 Torx screws from the door switch assembly (see the photo in step 7b).
- b) Remove the front panel from the washer (see steps 15 and 16 on page 4-11 for the procedure).
- c) Turn the bellows retaining clamp screw counterclockwise until the clamp is loose enough to remove it from around the bellows (see the top right photo). **NOTE:** It may be necessary to completely remove the screw from one end of the clamp.