

## Doors and Door Hinges

**IMPORTANT:** The freezer door is not adjustable. The fresh food door can be adjusted up and down to match the height of the freezer door. Adjust the fresh food door up or down using the hinge adjustment pin (located on the fresh food lower door hinge).

The fresh food and freezer lower door hinges are equipped with replaceable cam risers. Cam risers assist in door closure.

When the fresh food door is adjusted too high, the cam riser will not be engaged. If the cam riser is not engaged, the door will not close properly. Refer to the Fresh Food Door Adjustment section in this chapter for more information.


**IMPORTANT:** The refrigerator rollers must be adjusted correctly to ensure proper door closure. Refer to the Roller Assembly section in this chapter for more information.

## Door Removal

1. Remove the upper hinge cover by removing the Phillips screw.
2. With the door in the closed position, disconnect the wiring harness (freezer side only).



3. Remove the base grille.
4. Disconnect the water supply tube. To disconnect the tube, push in the white collar on the quick connector and pull the tube out.

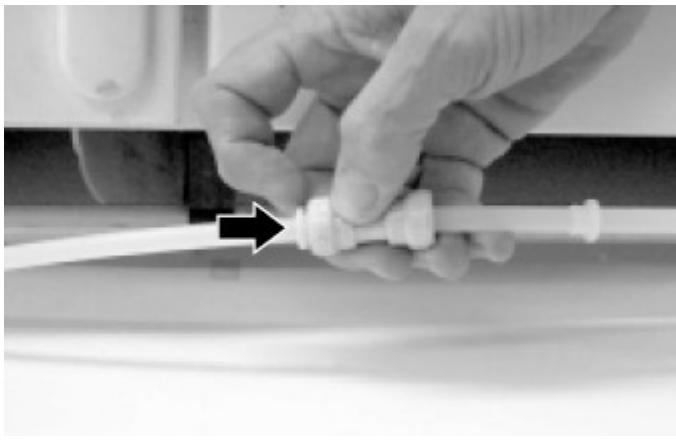


5. Remove the water tube protection (black collar).
6. Remove 2 upper hinge screws.
7. Lift the upper hinge and move it to the side (the gasket is located under the hinge).

**CAUTION:** Do not side-load hinges.

**NOTE:** Freezer door only - Guide the water line through hinge while lifting the door from hinge.

8. Open the door 90 degrees and lift the door straight up and off the lower hinge.

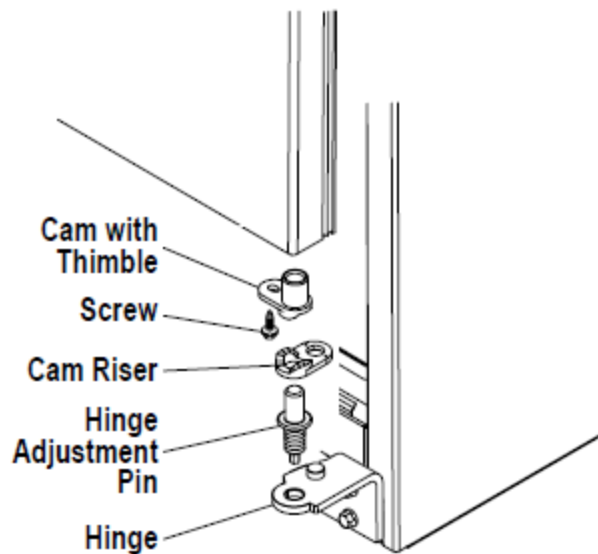

9. Remove the screw, hinge cam, and thimble from the bottom of the door.
10. Fresh Food Door Only: Remove the hinge adjustment pin and cam riser from the lower hinge.
11. Freezer Door Only: Remove the cam riser and washer from the lower hinge.
12. Remove 2 screws and lower hinge from cabinet.

## **Fresh Food Door Adjustment**

**IMPORTANT:** The refrigerator rollers must be adjusted correctly to ensure proper door closure. Refer to the Roller Assembly section in this chapter for more information.

The freezer door is not adjustable. The fresh food door can be adjusted to match the height of the freezer door.

1. Remove the base grille (opening the door makes grille removal easier).
2. Turn the hinge adjustment pin (located on the fresh food lower hinge) clockwise to raise the door and counterclockwise to lower the door.