


REMOVING THE CENTRAL CONTROL UNIT

⚠ WARNING




Electrical Shock Hazard
Disconnect power before servicing.
Replace all parts and panels before
operating.
Failure to do so can result in death or
electrical shock.

1. Unplug washer or disconnect power.
2. Turn off the water supply to the washer.
3. Remove the top cover from the washer (see page 4-2 for the procedure).


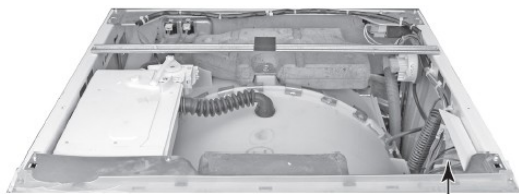


Central Control Unit

4. Pull the wire connectors off the edges of the central control unit circuit board (see the top right photo). When you pull an edge connector off the board, first pry the locking tab away from the connector with a small screwdriver blade to release it.
5. Slide the hooked ends of the two wire clamps off the locking tabs, and remove the wires from the clamps.

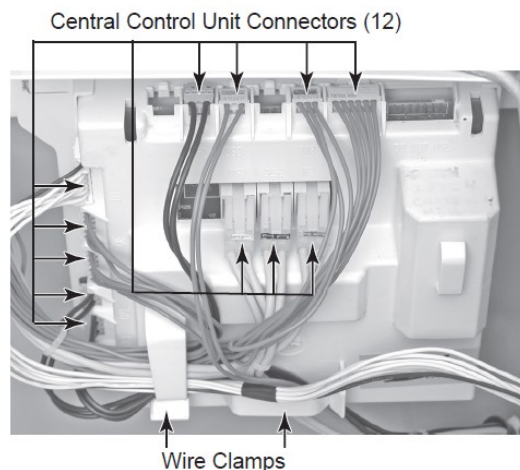

6. Pry up on the locking tab, and push the central control unit (CCU) toward the rear of the washer as far as it will go, and remove the CCU tabs from the keyhole slots in the chassis.

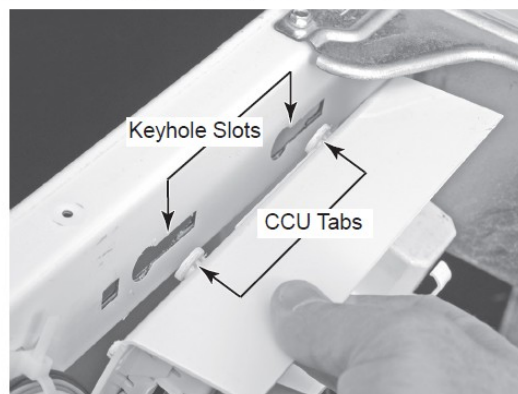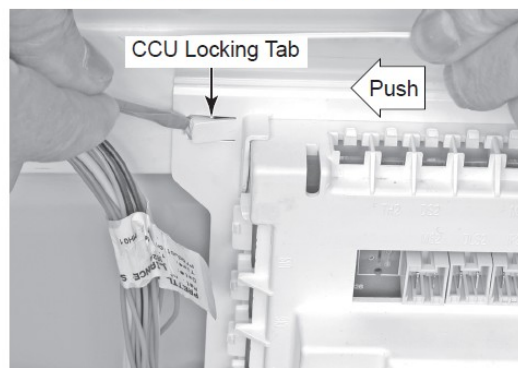

REASSEMBLY NOTE: The photo shows the connector callouts for the central control unit.

Make sure that you seat the connectors firmly onto the circuit board, and that they lock securely into place.

