


Removing the dryer front panel:


1. Disconnect the laundry center from the electrical supply, remove the access panel and heat shield.
2. Open the console and remove the two screws holding the front panel to the side panels.



3. Unplug the dryer door switch harness.

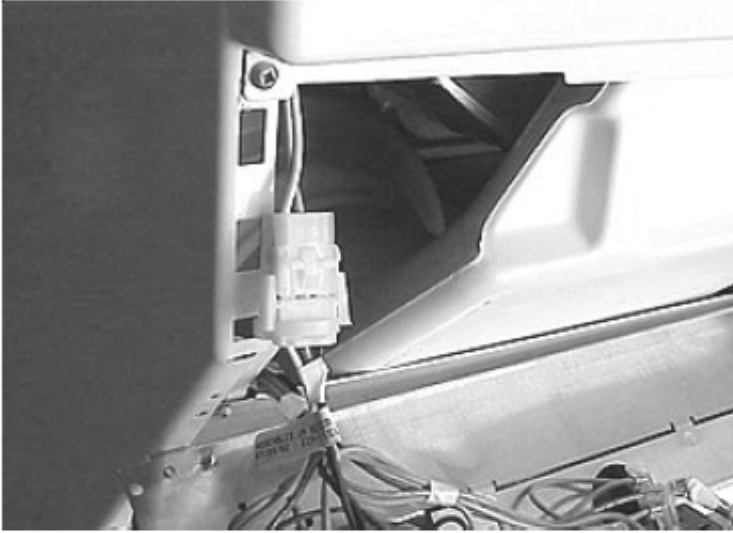

4. Remove the four screws holding the front panel to the top and carefully pull the front panel forward.

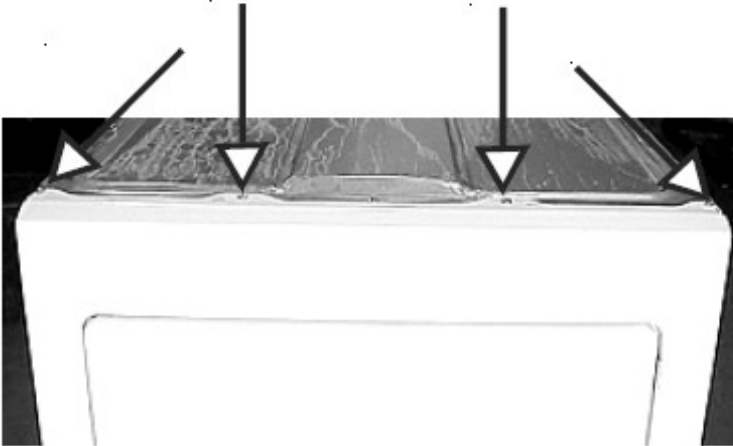

Replacing the felt seals:

1. Disconnect the laundry center from electrical supply and remove the dryer front panel.
2. The felt seals are two seals that are glued to front panel rim that the drum rides on.
3. To replace either seal, pull the seals off and glue the replacements to the rim.

