

1. Remove the eight (8) screws securing the outer door panel to the dishwasher door frame. Remove the outer door panel from the door frame.
2. Remove the center top hex head screw and remove the dispenser shield and disconnect the wiring harness connectors from the detergent dispenser solenoid.
3. Remove the remaining five (5) screws securing the dispenser assembly to the inner door liner.
4. Bend the two locking tabs at the top and bottom of the dispenser assembly up away from the dispenser body.
5. The dispenser assembly can now be lifted from the inner door liner.