

Control Panel

The control panel is held in place with 5 Phillips-head screws and 5 tabs.

To remove the control panel assembly:

1. Remove the top panel. (See *Top Panel*.)
2. Pull the dispenser out to the stop position. Press down on the lock tab. Pull the dispenser out.



3. Remove the single Phillips-head screw from the control panel dispenser recess.



4. Remove the 4 Phillips-head screws that attach the top of the control panel to the control panel cover.



5. From inside the cabinet, lift and push forward to release the bottom tab from the front bracket.



6. Lift the top edge of the panel to disengage the 3 tabs that hold the top of the panel in place.



7. Push the control panel towards the left, then release the side tab.
8. Disconnect the 9 wire harnesses from the control panel.