Instruction Sheet for KitchenAid Blender Drive Coupling Installation

Tools needed:
Large flat bladed screwdriver

NOTE: The black main drive coupler attaches to the motor shaft using left hand threads. Turning clockwise to remove; and counter clockwise to install.

⚠WARNING

Electrical Shock Hazard

Disconnect power before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.

1. Unplug blender.
2. With the blender facing you, insert a flat blade screw driver between the black drive coupler and the blender housing: approximately 1/2 inch (see *Figure 1*).

Figure 1

3. Raise up on the screw driver; this will bend the drive coupler up (see *Figure 2*). Turn the coupler approximately 1/4 turn and repeat raising the screw driver higher each time. Continue this until the coupler comes off the motor shaft. This is usually accomplished in 3 or 4 attempts.

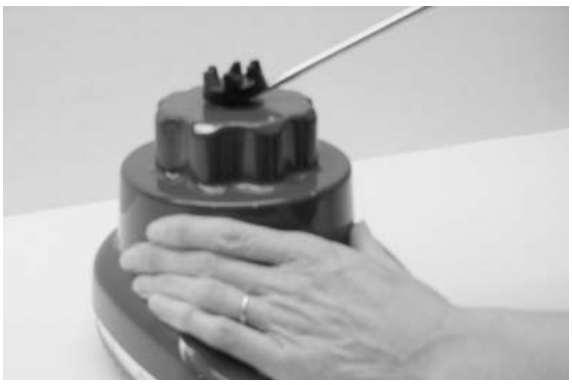

Figure 2

4. Before installing the new coupler check the threads of the blender motor shaft and remove any metal shavings left from the removal of the old coupler. Place the new coupler on the motor shaft and turn counter clockwise until tight (see *Figure 3*). During normal operation the blender drive coupler is constantly kept tight; therefore it is not necessary to tighten more than hand tight.

Figure 3

©Whirlpool Corporation 2007
(All Rights Reserved)

Fiche d'instructions
pour l'installation de l'accouplement d'entraînement du mélangeur KitchenAid

Outillage nécessaire:
Grand tournevis à lame plate

REMARQUE: L'accouplement d'entraînement noir principal est fixé à l'arbre du moteur par un filetage à gauche. Tourner dans le sens horaire pour le retrait et dans le sens antihoraire pour l'installation.

⚠ AVERTISSEMENT

Risque de choc électrique

Déconnecter la source de courant électrique avant l'entretien.

Replacer pièces et panneaux avant de faire la remise en marche.

Le non-respect de ces instructions peut causer un décès ou un choc électrique.

1. Débrancher le mélangeur.
2. Le mélangeur vous faisant face, insérer un tournevis à lame plat entre l'accouplement d'entraînement noir et le boîtier du mélangeur d'environ ½" (voir *Figure 1*).

Figure 1

3. Soulever le tournevis; ceci pliera l'accouplement d'entraînement vers le haut (voir *Figure 2*). Tourner l'accouplement d'environ ¼ de tour, et répéter le soulèvement du tournevis chaque fois plus haut. Continuer ainsi jusqu'à ce que l'accouplement se détache de l'arbre du moteur. Trois à quatre tentatives sont en général nécessaires.

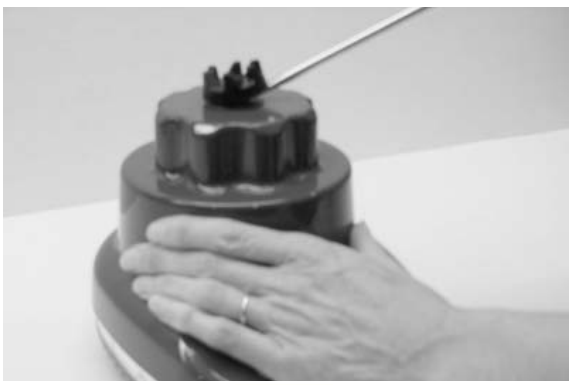

Figure 2

4. Vérifier l'état du filetage de l'arbre du moteur avant d'installer le nouvel accouplement et, le cas échéant, éliminer les rognures de métal laissées par le retrait de l'ancien accouplement. Poser le nouvel accouplement sur l'arbre du moteur et tourner dans le sens antihoraire jusqu'à l'obtention d'un serrage adéquat (voir Figure 3). L'accouplement d'entraînement du mélangeur est constamment serré pendant le fonctionnement; le serrage à la main est donc suffisant.

Figure 3

© Whirlpool Corporation 2007
(Tous droits réservés)