


INSTALLATION INSTRUCTIONS

for 8522271 Filter Plug

This filter plug has been designed as a replacement for the self-clean filter. Your particular machine may require the use of two (2) or four (4) of these plugs.

The plugs are installed on the lower portion of the spin basket, with the tabs facing the neck of the basket (see photo below).

The plugs should snap into place. Do not force them into the opening. On those baskets requiring two (2) plugs, do not attempt to force the additional plugs into the smaller two (2) holes.

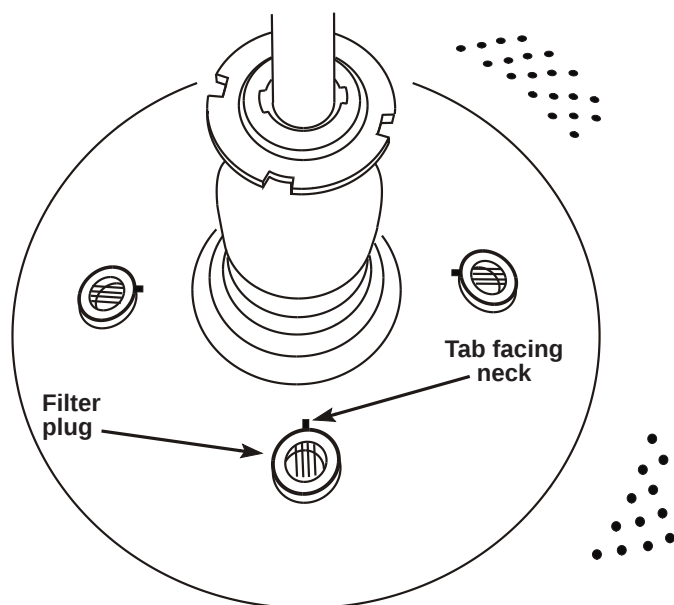


INSTALLATION INSTRUCTIONS

for 8522271 Filter Plug

This filter plug has been designed as a replacement for the self-clean filter. Your particular machine may require the use of two (2) or four (4) of these plugs.

The plugs are installed on the lower portion of the spin basket, with the tabs facing the neck of the basket (see photo below).

The plugs should snap into place. Do not force them into the opening. On those baskets requiring two (2) plugs, do not attempt to force the additional plugs into the smaller two (2) holes.

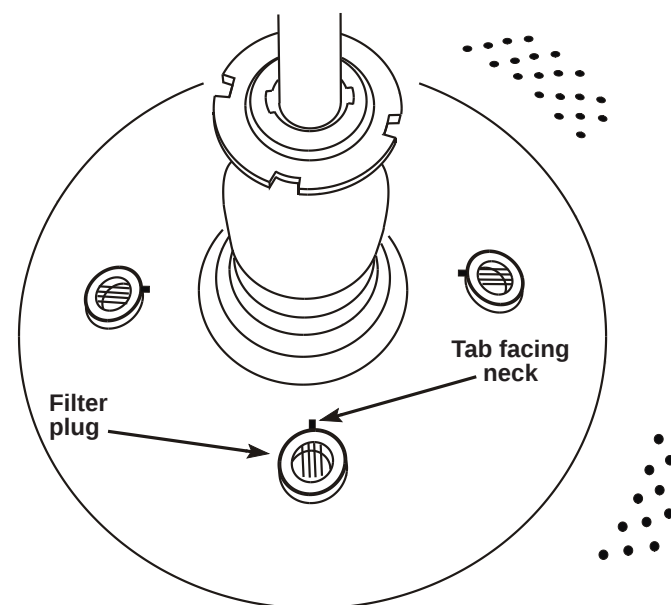


INSTRUCTIONS D'INSTALLATION

du bouchon de filtre 8522271

Ce bouchon de filtre a été conçu en tant que remplacement pour le filtre d'autonettoyage. Sur votre machine, vous devrez peut-être utiliser deux (2) ou quatre (4) de ces bouchons.

Les bouchons se posent dans la partie inférieure du panier d'essorage, leurs pattes étant orientées vers le rétrécissement du panier (reportez-vous à la photo ci-dessous).

Les bouchons devraient s'enclencher en place. Ne les forcez pas dans l'ouverture. Dans le cas des paniers sur lesquels deux (2) bouchons doivent être utilisés, n'essayez pas de forcer les autres dans les deux (2) plus petits trous.

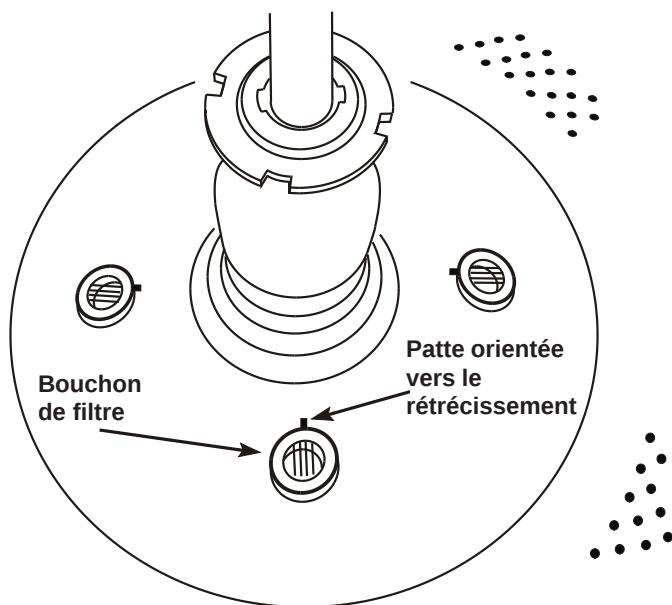

INSTRUCTIONS D'INSTALLATION

du bouchon de filtre 8522271

Ce bouchon de filtre a été conçu en tant que remplacement pour le filtre d'autonettoyage. Sur votre machine, vous devrez peut-être utiliser deux (2) ou quatre (4) de ces bouchons.

Les bouchons se posent dans la partie inférieure du panier d'essorage, leurs pattes étant orientées vers le rétrécissement du panier (reportez-vous à la photo ci-dessous).

Les bouchons devraient s'enclencher en place. Ne les forcez pas dans l'ouverture. Dans le cas des paniers sur lesquels deux (2) bouchons doivent être utilisés, n'essayez pas de forcer les autres dans les deux (2) plus petits trous.

