


Instruction Sheet

For Upper Dishrack Kit 3369903

<u>Illus. No.</u>	<u>Description</u>
1	Dishrack
2	Arm & Knob Assembly
3	Screw
4	Plate, Adjuster Mounting
5	Housing, Adjuster
6	Cupshelf
7	Clip, Cupshelf

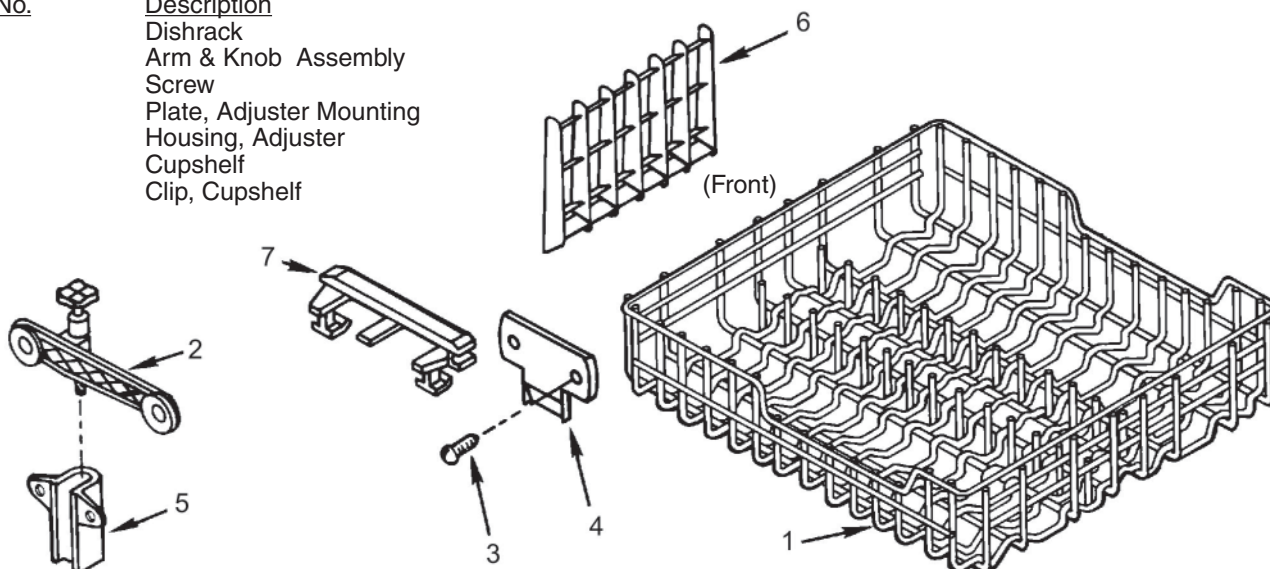

TO INSTALL THESE PARTS, YOU WILL HAVE TO USE A LOT OF PRESSURE TO SNAP THEM INTO PLACE.

1. To install the arm and knob assembly, locate the L or R on side. Take the one labeled R for the Right side of the dishrack and insert it through the 5th and 6th tine from the rear of the dishrack. See *Figure 1*.
2. After putting on the arm and knob assembly, turn the knobs enough so you can install the adjuster housing. See *Figure 3*.

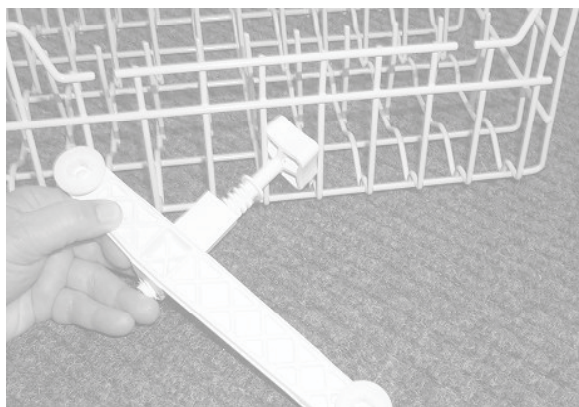


Figure 1

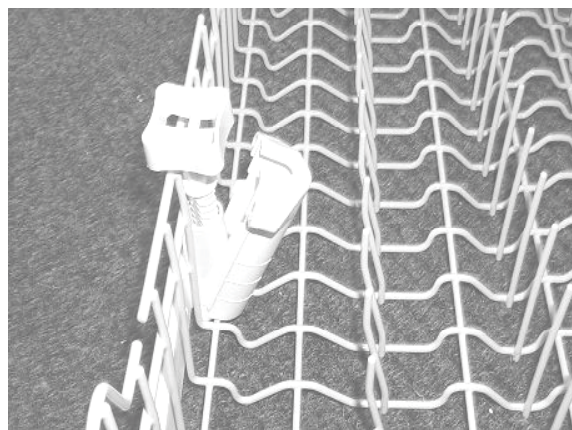


Figure 3

NOTE: The long end of the arm and knob assembly should face the back of the dishrack. See *Figure 2*.

3. Install the adjuster mounting plate. Make sure that the holes line up. See *Figure 4*.

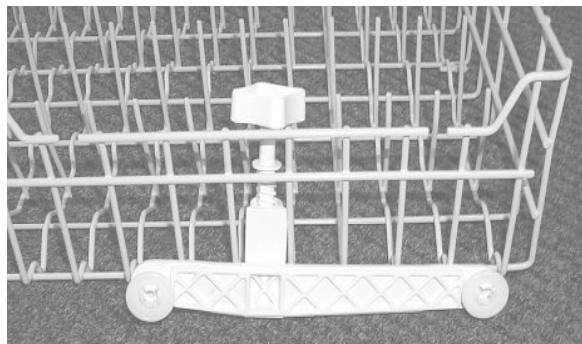


Figure 2

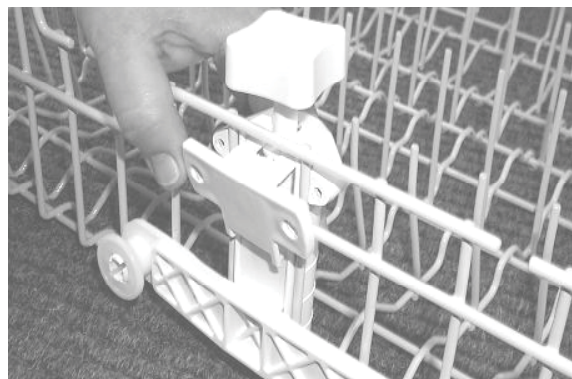


Figure 4

4. Install the screws that hold the entire assembly together. See *Figure 5*.

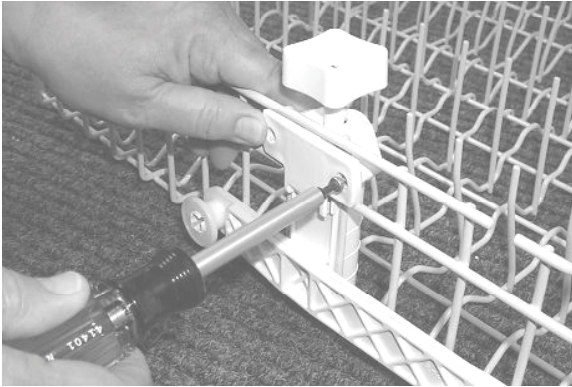


Figure 5

5. Repeat steps 1 – 4 to install adjuster on the Left side of the dishrack.
6. Install the cupshelf clips. This is done by sliding one of the ends onto one of the wires, and then slide the other end onto the other wire. Push down to snap the cupshelf clip into place. See *Figure 6*.

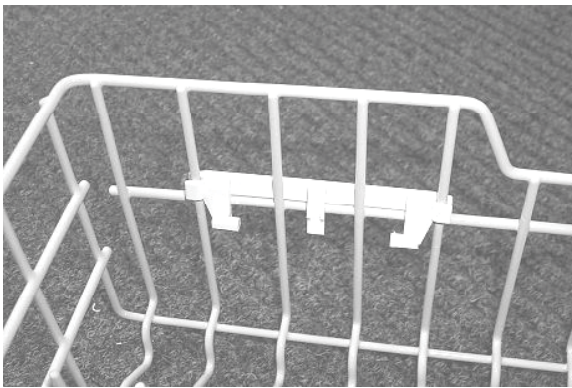


Figure 6

7. Install the cupshelf by snapping it onto one of the cupshelf clips that you just installed in step 6. Line up the shelf and snap it into place. See *Figure 7 & 8*.



Figure 7

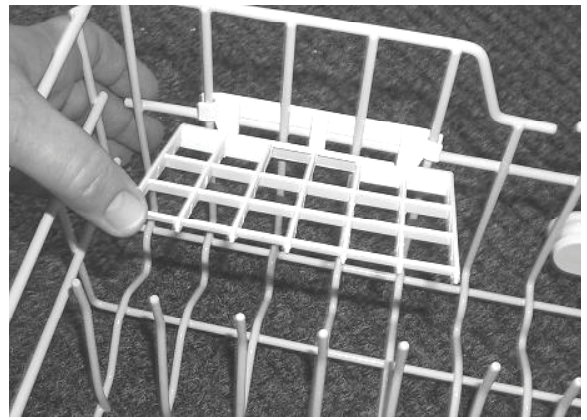


Figure 8

8. Repeat step 7 to install the other cupshelves. See *Figure 9 & 10*.

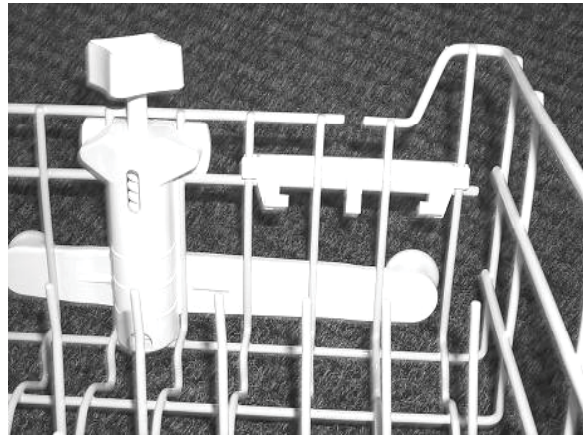


Figure 9

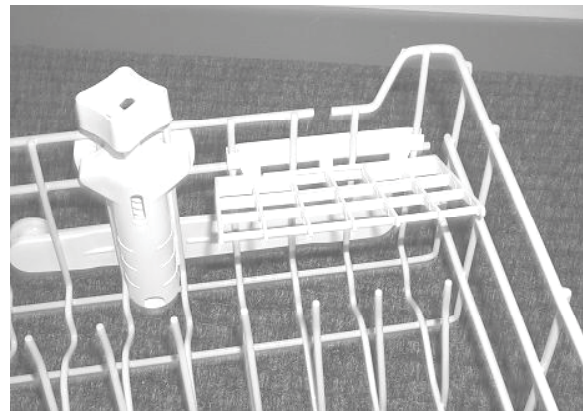



Figure 10

You have now finished assembling your dishrack. Install it in place of your old one.

Fiche d'instructions pour panier à vaisselle supérieur – Ensemble 3369903

III. N°

- | | |
|---|---------------------------------|
| 1 | Panier à vaisselle |
| 2 | Ensemble bras et bouton |
| 3 | Vis |
| 4 | Plaque de montage de l'ajusteur |
| 5 | Logement de l'ajusteur |
| 6 | Tablette pour tasses |
| 7 | Agrafe, tablette pour tasses |

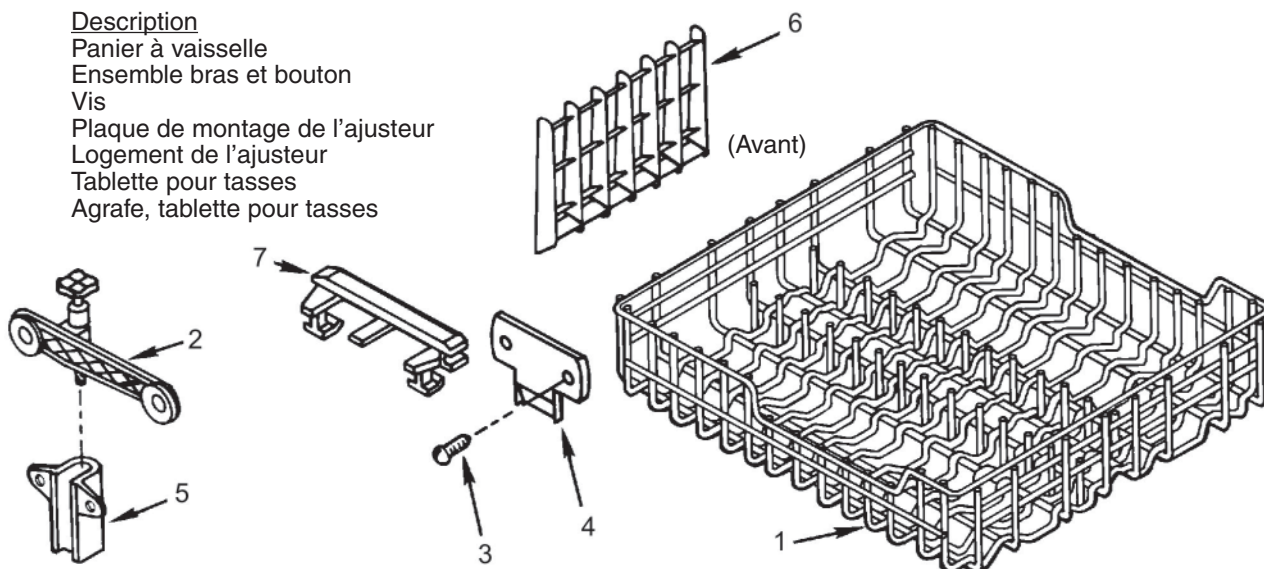

POUR INSTALLER CES PIÈCES, IL EST NÉCESSAIRE D'APPLIQUER UNE PRESSION IMPORTANTE POUR EMBOÎTER LES PIÈCES EN PLACE.

1. Pour installer l'ensemble bras et bouton, localiser le L ou le R sur le côté. Prendre le côté avec la lettre R pour le côté droit du panier à vaisselle et l'insérer entre les tiges 5 et 6 en partant de l'arrière du panier à vaisselle. Voir Figure 1.

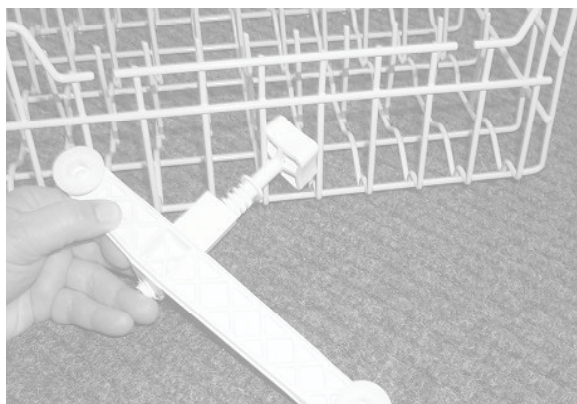


Figure 1

REMARQUE: La partie allongée de l'ensemble bras et bouton doit se trouver face à l'arrière du panier à vaisselle. Voir Figure 2.

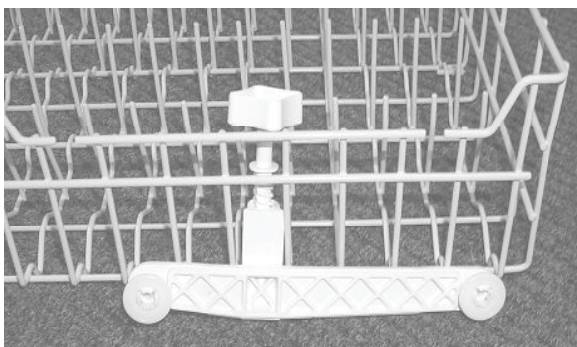


Figure 2

2. Après avoir installé l'ensemble bras et bouton, tourner les boutons suffisamment pour pouvoir installer le logement de l'ajusteur. Voir Figure 3.

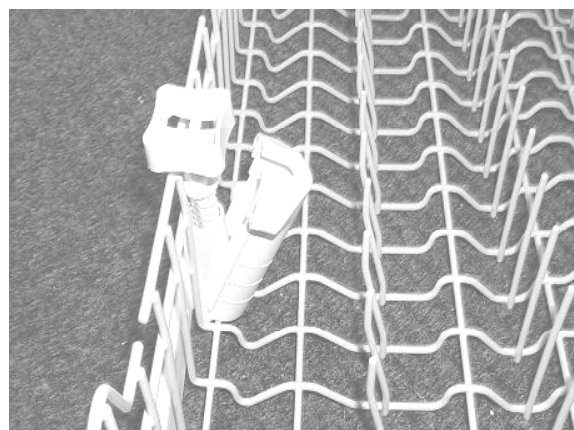


Figure 3

3. Installer la plaque de montage de l'ajusteur. S'assurer que les trous sont alignés. Voir Figure 4.

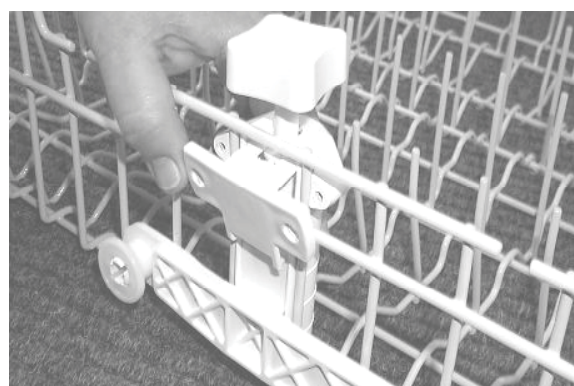


Figure 4

4. Installer les vis maintenant l'ensemble. Voir *Figure 5*.

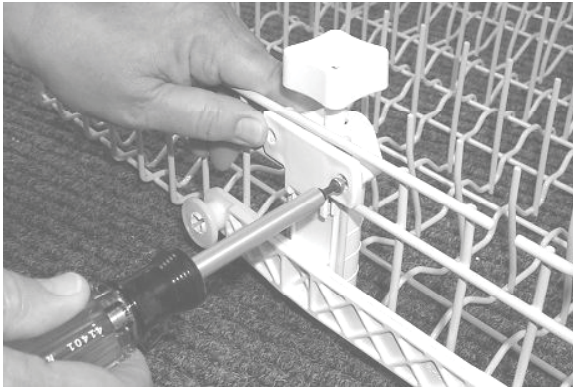


Figure 5

5. Répéter les étapes 1 à 4 pour installer l'ajusteur du côté gauche du panier à vaisselle.
6. Installer les agrafes de la tablette pour tasses. Pour cela, faire glisser l'une des extrémités sur l'une des tiges métalliques puis faire glisser l'autre extrémité sur l'autre tige métallique. Enfoncer pour emboîter l'agrafe de la tablette pour tasses. Voir *Figure 6*.

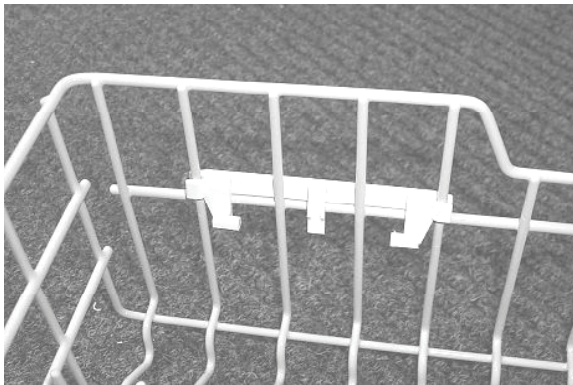


Figure 6

7. Installer la tablette pour tasses en l'emboîtant dans l'une des agrafes de tablette installées à l'étape 6. Aligner la tablette et l'emboîter. Voir *Figures 7 et 8*.



Figure 7

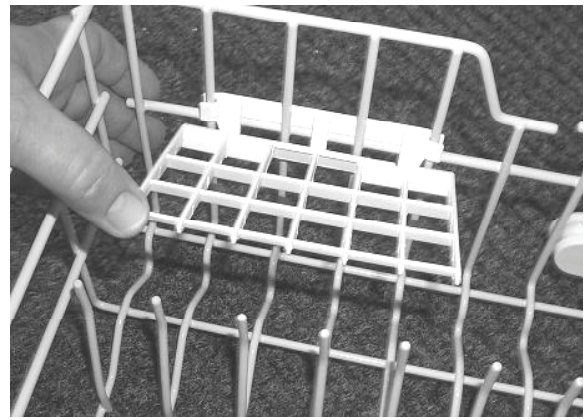


Figure 8

8. Répéter l'étape 7 pour l'installation des autres tablettes pour tasses. Voir *Figures 9 et 10*.

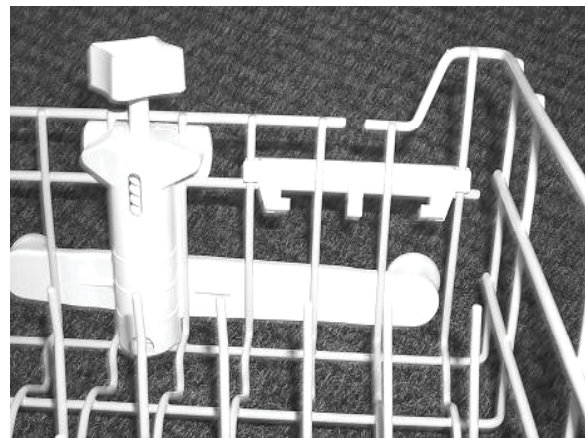


Figure 9

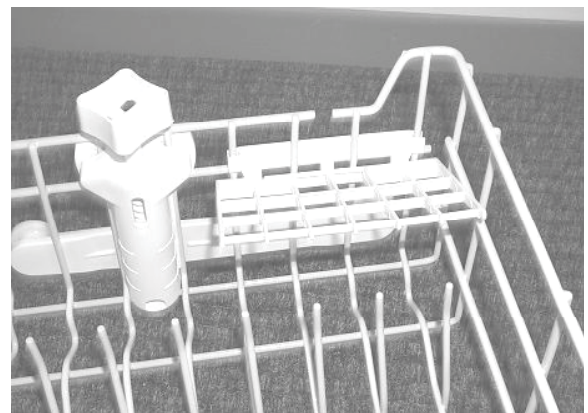


Figure 10

L'assemblage du panier à vaisselle est maintenant terminé. Installer celui-ci à la place de l'ancien.