

Control Model Resistance Values

MODEL	RESISTANCE VALUE
GLD6200L/6260L	130K ohms
GLD6300L/6360L	33K ohms
GHDA650L/656L	33K ohms
EDW6000L/6060L	33K ohms
GLD6500L	22K ohms

Digital Display

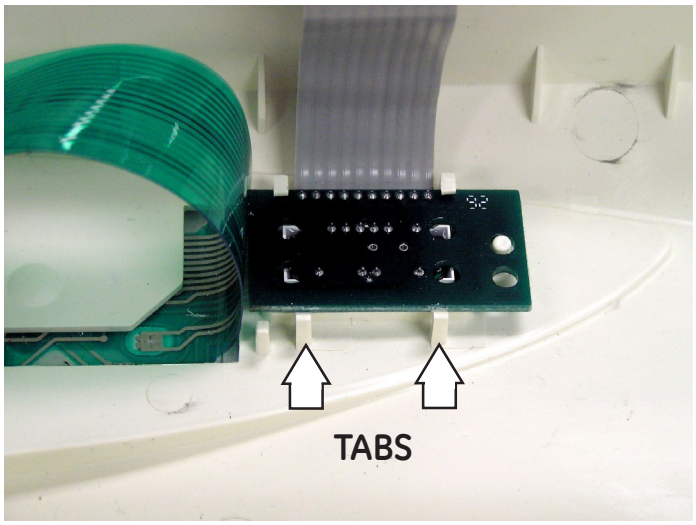

To remove the Membrane digital display and ribbon connector, release the tabs on the non-ribbon side and remove.

Tactile HMI Board

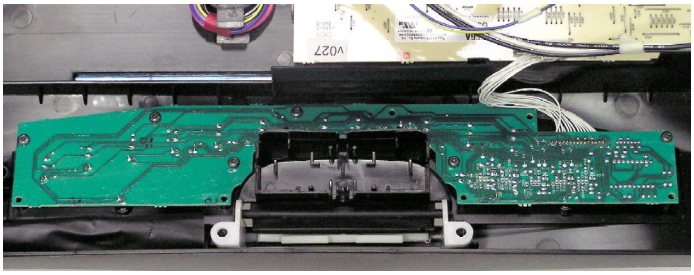

Removal of Tactile HMI Board

1. Remove the 6 T-15 screws.
2. Pull out the HMI board.
3. Release the 2 side clips from the control board.
4. Lift the control board.
5. Disconnect the HMI board connector.

Model Select Plugs

Important: Model select plugs are NOT included with new control boards. You must remove the plug from the old board and install it onto the new board prior to connecting power to the board.

Note: The model select plug for the Tactile control board is on CN4.

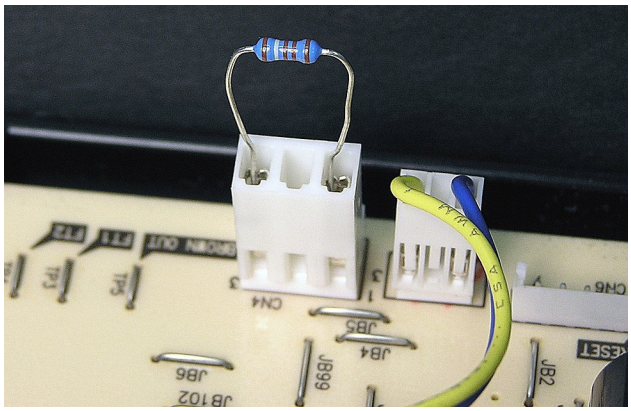

Control Model Selector Plugs

MODEL	PART NUMBER	RESISTANCE VALUE
GLD4100L/4150L/4160L	WD21X10233	235 - 250 ohms
GLD4200L/4250L/4260L	WD21X10234	410 - 440 ohms
GLD4300L/4360L	WD21X10231	1150 - 1200 ohms
EDW5000L/5060 GLD5800L/5850L/5860L	WD21X10230	1600 - 1930 ohms
GLD5500L/5560L	WD21X10225	1300 - 1515 ohms
GHDA450L/455L	WD21X10232	800 - 900 ohms

DOOR HINGE SYSTEM

Long Door Plastic Tub Dishwashers Model Series EDW4000, GSD6000, and PDW7000

The hinge system for the above dishwashers has been redesigned to allow for easier door removal. The threaded hinge pin has been replaced with a riveted design. The dishwasher door slips over the riveted hinge pin when held at a 30-degree angle from the vertical position.

To remove the door, perform the following steps:

1. Disconnect the harness from underneath the dishwasher.
2. Remove the door springs.
3. Open the door to approximately 30 degrees and lift the door straight up and off the hinge pins.

