

# Installation Instructions

# Monogram Refrigerators

## Bottom Mount FZ Gasket Gap Repair

### WR49X10112




### Tools you will need:

- #3 Phillips Screwdriver



### Spacers, lock washers & and washers included in kit

Place a Stainless Steel Washer and a lock washer under the head of each of four screws on each slide.

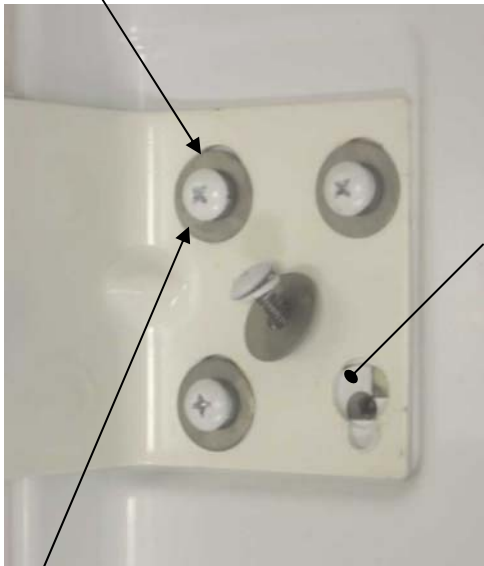


Add a spacer, if necessary, between the slide and the Freezer Door liner on the two bottom screws only. See Diagram at right.

**Note!** Early models have a riveted stiffener gusset on the slide, which will interfere with one of the large stainless steel washers. Use the modified stainless steel washer under the outside upper screw to clear the gusset.

### Installing Spacers and Washers:

1. Open Freezer drawer and remove basket.
2. Using a **Phillips #3** screwdriver, remove the top two screws in each slide, place a large washer, and a lock washer under the head of each screw, and re-install snug.
3. Remove bottom two screws in each slide, Place large washers and lock washers under the head of each screw, and re-install snug.
4. Open the FF door; use the alignment template to adjust the distance from the top of the mullion to the top of the gasket. The lengths of the notched sides of the template are 1.900" on one side and 1.800" on the other. Adjust to no more than 1.900" or no less than 1.800". Make sure both sides are equal.
5. Tighten all screws.
6. If the top of the gasket does not seal tightly, loosen top screws in each slide, remove the bottom two screws and place a spacer between the slide and the drawer, aligned with the bottom threaded hole in the drawer, and re-install the screws with large washer and lock washer snug. (**See diagram below**). Repeat the alignment described in step 4.
7. Check for a tight seal along the edges of the gasket. Use a mirror to check the bottom edge of the gasket. A heat gun may be used to expand the gasket for better sealing.

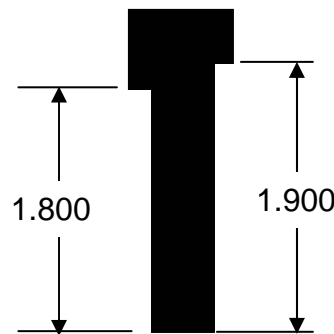

### Alignment Template

(Included in Kit)

