

REMOVING THE CONVECTION TEMPERATURE SENSOR, THE HALOGEN LAMP, AND THE CAVITY THERMAL FUSE

!WARNING


ELECTRICAL SHOCK HAZARD

Disconnect power before servicing.
Replace all panels before operating.
Failure to do so could result in death or electrical shock.

CAUTION: When you work on the microwave/oven combination, be careful when handling the sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.


1. Disconnect the electrical power to the microwave/oven combination.
2. Remove the microwave oven from the oven cabinet (see pages 2-8 & 2-9 for the procedure).

The microwave oven components described on these pages are shown below.

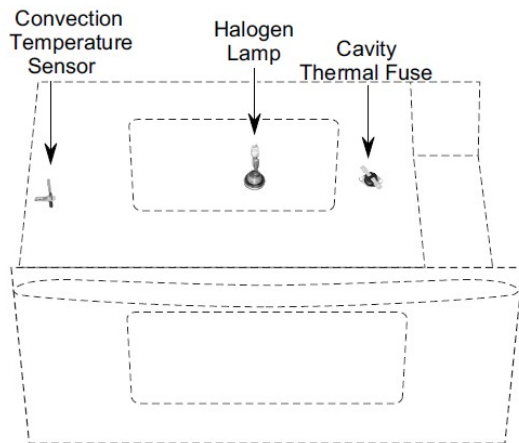


3. To remove the convection temperature sensor:


- a) Remove the two T-10 torx screws from the plate over the left end of the grill element bracket and remove the plate.

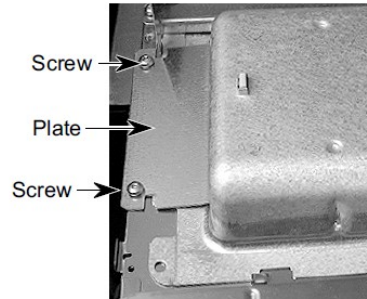

- b) Remove the two T-10 torx screws from the bracket over the left end of the grill element assembly and raise the bracket.

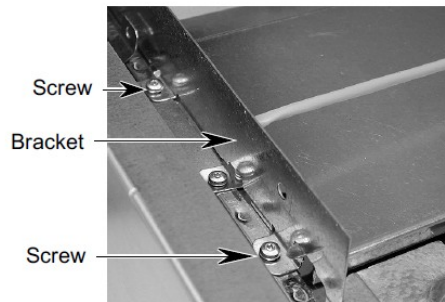


- c) Remove the T-10 torx screw from the sensor.

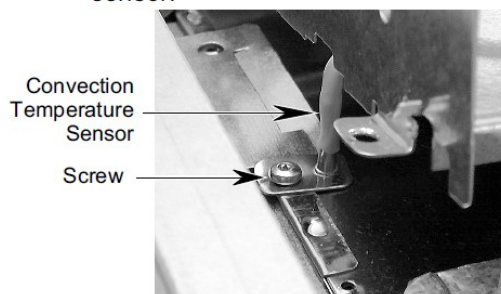

- d) Remove the two sensor wires from the harness.


4. **To remove the halogen lamp:**

- a) Unclip the wire retainer and remove it.

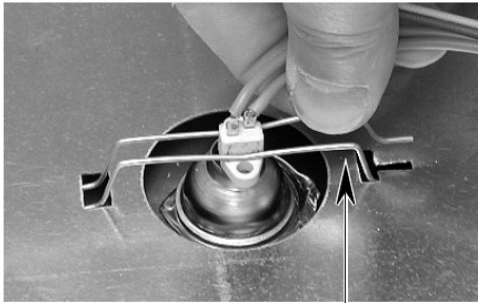

Wire Retainer

- b) Remove the lamp from the holder and remove the wires from the harness.

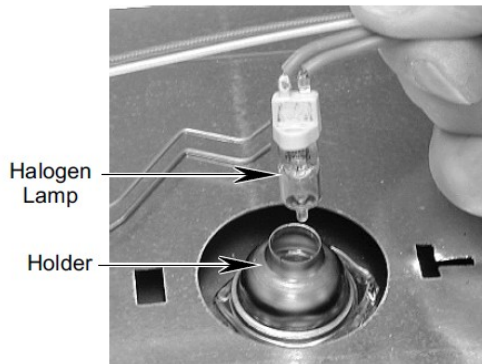

5. **To remove the cavity thermal fuse:**

- a) Disconnect the wires from the terminals.
b) Remove the T-10 torx screw from the cavity thermal fuse.

Cavity Thermal Fuse Screw

